

Neousys Technology Inc.

Nuvo-7000 Series

User Manual

Revision 1.6

5 OS Support and Driver Installation

5.1	Operating System Compatibility	151
5.2	Driver Installation	152
5.2.1	Install Drivers Automatically	152
5.2.2	Install Drivers Manually	153
5.3	Driver Installation for Watchdog Timer Control	154
5.4	Intel® Optane™ Memory BIOS Setup and Driver Installation	155

Appendix A Using WDT & DIO

WDT and DIO Library Installation	165
WDT Functions	167
InitWDT	167
SetWDT	167
StartWDT	168
ResetWDT	168
StopWDT	168

Appendix B PoE On/ Off Control

GetStatusPoEPort	169
EnablePoEPort	170
DisablePoEPort	171

