

Neousys Technology Inc.

Nuvo-7160GC Series

Nuvo-7164GC Series

Nuvo-7166GC Series

User Manual

Revision 1.1

Table of Contents

Table of Contents	2
Legal Information	5
Contact Information	
Declaration of Conformity	6
Copyright Notice	7
Safety Precautions	8
Hot Surface Warning	8
Battery Warning	8
Service and Maintenance	
ESD Precautions	9
Restricted Access Location	9
About This Manual	10

1 Introduction

1.1	Product Specifications	13
1.1.1	Nuvo-7160GC Specifications	13
1.1.2	Nuvo-7164GC Specifications	15
1.1.3	Nuvo-7166GC Specifications	17
1.2	Nuvo-7160GC Dimensions	19
1.2.1	Nuvo-7160GC Front Panel View	19
1.2.2	Nuvo-7160GC Rear Panel View	19
1.2.3	Nuvo-7160GC Top View	
1.2.4	Nuvo-7160GC Bottom View	21
1.3	Nuvo-7164GC Dimensions	
1.3.1	Nuvo-7164GC Front Panel View	
1.3.2	Nuvo-7164GC Rear Panel View	
1.3.3	Nuvo-7164GC Top View	23
1.3.4	Nuvo-7164GC Bottom View	24
1.4	Nuvo-7166GC Dimensions	
1.4.1	Nuvo-7166GC Front Panel View	25
1.4.2	Nuvo-7166Gc Rear Panel View	25
1.4.3	Nuvo-7166GC Top View	
1.4.4	Nuvo-7166GC Bottom View	27

2 System Overview

2.1	Nuvo-7160GC Packing List	. 28
2.2	Nuvo-7164GC Packing List	. 28
2.3	Nuvo-7166GC Packing List	
2.4	Front Panel I/O	. 30
2.4.1	USB3.1 Gen 2 Port	
2.4.2	USB3.1 Gen 1 Port	. 31
2.4.3	DVI Port	. 32
2.4.4	VGA Port	
2.4.5	DisplayPort	. 34
2.4.6	Micro-SIM (3FF) 1 & 2 Slots	. 35
2.4.7	Ethernet Port/ PoE+	. 36
2.4.8	Reset Button	. 37
2.4.9	LED Indicators	. 37
2.4.10	Power Button	. 38
2.4.11	Cassette Module	
2.5	Rear Panel I/O	
2.5.1	4-Pole 3.5mm Headphone/ Microphone Jack	. 41
2.5.2	COM Ports	
2.5.3	3-Pin Terminal Block for DC and Ignition Input	. 43
2.5.4	3-Pin Remote On/ Off	. 43
2.6	Internal I/O Functions	
2.6.1	Clear CMOS Button	. 44

2.6.2	Dual SODIMM DRAM Slot	
2.6.3	Dual Mode mSATA/ mini-PCIe Socket & Pin Definition	
2.6.4	M.2 2242 (B Key), Mini-SIM Card Slot & Pin Definition	
2.6.5	SATA Ports	50
2.6.6	DIP Switch	51
2.6.7	On/ Off Ctrl & Status Output	
2.6.8	Internal USB 2.0 Port	53
2.6.9	M.2 2280 (M Key) Slot for NVMe SSD or Optane [™] Memory	54
2.6.10	MezIO [™] Interface & Pin Definition	

3 System Installation

3.1	Disassembling the System	. 59
3.2	Installing Internal Components	.63
3.2.1	CPU Installation Procedure	
3.2.2	DDR4 SO-DIMM Installation	.69
3.2.3	mPCIe Module, Mini-SIM (2FF) Card and Antennae Installation	.71
3.2.4	M.2 2242 (B Key) Module and Micro-SIM (3FF) Card Installation	
3.2.5	M.2 2280 NVMe SSD or Intel [®] Optane [™] Memory Installation	.75
3.2.6	MezlO [™] Module Installation (Optional)	.77
3.2.7	HDD/ SSD Installation	.80
3.2.8	Ethernet/ PoE+ Port Panel Screw Fix	.83
3.3	Nuvo-7160GC Graphics Card Installation	.84
3.4	Nuvo-7164GC/ Nuvo-7166GC Tesla Inference Accelerator Installation	. 89
3.5	Installing the System Enclosure	.96
3.6	Wall Mount and Anti-vibration Damping Bracket Installation	. 99
3.6.1	Wall Mount Bracket Installation	.99
3.6.2	Anti-vibration Damping Bracket Installation (Optional)	101
3.7		102
3.7.1	Powering On Using the Power Button	102
3.7.2	Powering On Using External Non-latched Switch	103
3.7.3	Powering On Using Wake-on-LAN	104

4 System Configuration

BIOS Settings	
COM Port Configuration	
COM Port High Speed Mode	
Delay for PEG Initialization	
SATA Configuration	110
Fan Control Configuration	112
TPM Availability	117
Auto Wake on S5	118
Power On After Power Failure Option	119
Power & Performance (CPU SKU Power Configuration)	
Wake on LAN Option	
Boot Menu	
Boot Type (Legacy/ UEFI)	
Position New Boot Device	
Watchdog Timer for Booting	
Legacy/ UEFI Boot Device	
AMT Configuration	
RAID Configuration	
Legacy Mode RAID Configuration	
UEFI Mode RAID Configuration	
	COM Port Configuration COM Port High Speed Mode Delay for PEG Initialization SATA Configuration Fan Control Configuration TPM Availability Auto Wake on S5 Power On After Power Failure Option Power & Performance (CPU SKU Power Configuration) Wake on LAN Option Boot Menu Boot Menu Boot Type (Legacy/ UEFI) Position New Boot Device Watchdog Timer for Booting Legacy/ UEFI Boot Device AMT Configuration RAID Configuration Legacy Mode RAID Configuration

5 OS Support and Driver Installation

5.1	Operating System Compatibility	145
	Driver Installation	
5.2.1	Install Drivers Automatically	
5.2.2		
5.3	Driver Installation for Watchdog Timer Control	

5.4	Intel [®] Optane [™]	⁴ Memory BIOS Se	up and Driver Installation	149
-----	--	-----------------------------	----------------------------	-----

Appendix A Using WDT & DIO

WDT and DIO Library Installation	.159
WDT Functions	
nitWDT	
SetWDT	
StartWDT	
ResetWDT	
StopWDT	

Appendix B PoE On/ Off Control

GetStatusPoEPort	
EnablePoEPort	
DisablePoEPort	

Legal Information

All Neousys Technology Inc. products shall be subject to the latest Standard Warranty Policy

Neousys Technology Inc. may modify, update or upgrade the software, firmware or any accompanying user documentation without any prior notice. Neousys Technology Inc. will provide access to these new software, firmware or documentation releases from download sections of our website or through our service partners.

Before installing any software, applications or components provided by a third party, customer should ensure that they are compatible and interoperable with Neousys Technology Inc. product by checking in advance with Neousys Technology Inc. Customer is solely responsible for ensuring the compatibility and interoperability of the third party's products. Customer is further solely responsible for ensuring its systems, software, and data are adequately backed up as a precaution against possible failures, alternation, or loss.

For questions in regards to hardware/ software compatibility, customers should contact Neousys Technology Inc. sales representative or technical support.

To the extent permitted by applicable laws, Neousys Technology Inc. shall NOT be responsible for any interoperability or compatibility issues that may arise when (1) products, software, or options not certified and supported; (2) configurations not certified and supported are used; (3) parts intended for one system is installed in another system of different make or model.

Contact Information

Headquarters (Taipei, Taiwan)	Neousys Technology Inc. 15F, No.868-3, Zhongzheng Rd., Zhonghe Dist., New Taipei City, 23586, Taiwan Tel: +886-2-2223-6182 Fax: +886-2-2223-6183 <u>Email, Website</u>
Americas (Illinois, USA)	Neousys Technology America Inc. 3384 Commercial Avenue, Northbrook, IL 60062, USA Tel: +1-847-656-3298 <u>Email, Website</u>
China	Neousys Technology (China) Ltd. Room 612, Building 32, Guiping Road 680, Shanghai Tel: +86-2161155366 <u>Email, Website</u>

Declaration of Conformity

FCC

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at own expense.

CE

The product(s) described in this manual complies with all applicable European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.

Copyright Notice

All rights reserved. This publication may not be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written consent of Neousys Technology, Inc.

Disclaimer This manual is intended to be used as an informative guide only and is subject to change without prior notice. It does not represent commitment from Neousys Technology Inc. Neousys Technology Inc. shall not be liable for any direct, indirect, special, incidental, or consequential damages arising from the use of the product or documentation, nor for any infringement on third party rights.

Patents and Trademarks	Neousys, the Neousys logo, Expansion Cassette, MezIO [™] are registered patents and trademarks of Neousys Technology, Inc.
	Windows is a registered trademark of Microsoft Corporation.
	Intel [®] , Core™ are registered trademarks of Intel Corporation
	NVIDIA [®] is a registered trademark of NVIDIA Corporation
	All other names, brands, products or services are trademarks or registered trademarks of their respective owners.

Safety Precautions

- Read these instructions carefully before you install, operate, or transport the system.
- Install the system or DIN rail associated with, at a sturdy location
- Install the power socket outlet near the system where it is easily accessible
- Secure each system module(s) using its retaining screws
- Place power cords and other connection cables away from foot traffic. Do not place items over power cords and make sure they do not rest against data cables
- Shutdown, disconnect all cables from the system and ground yourself before touching internal modules
- Ensure that the correct power range is being used before powering the device
- Should a module fail, arrange for a replacement as soon as possible to minimize down-time
- If the system is not going to be used for a long time, disconnect it from mains (power socket) to avoid transient over-voltage
- By means of a power cord connected to a socket-outlet with earthing connection
- This product is intended to be supplied by a Listed Power Adapter or DC power source, rated 24Vdc, 16A, Tma 60 degree C and 5000m altitude during operation. If further assistance is required, please contact Neousys Technology

Hot Surface Warning



pas toucher."

TOUCH. "ATTENTION: Surface chaude. Ne

WARNING!

Components/ parts inside the equipment may be hot to touch! Please wait one-half hour after switching off before handling parts.

Battery Warning





- Batteries are at risk of exploding if incorrectly installed
- Do not attempt to recharge, force open, or heat the battery
- Replace the battery only with the same or equivalent type recommended by the manufacturer

Service and Maintenance

- ONLY qualified personnel should service the system
- Shutdown the system, disconnect the power cord and all other connections before servicing the system
- When replacing/ installing additional components (expansion card, memory module, etc.), insert them as gently as possible while assuring proper connector engagement

ESD Precautions

- Handle add-on module, motherboard by their retention screws or the module's frame/ heat sink. Avoid touching the PCB circuit board or add-on module connector pins
- Use a grounded wrist strap and an anti-static work pad to discharge static electricity when installing or maintaining the system
- Avoid dust, debris, carpets, plastic, vinyl and styrofoam in your work area.
- Do not remove any module or component from its anti-static bag before installation

Restricted Access Location

The controller is intended for installation only in certain environments where both of the following conditions apply:

- Access can only be gained by QUALIFIED SERVICE PERSONNEL who have been instructed on the reasons for restrictions applied to the location and any precautions that shall be taken
- Access is through the use of a TOOL, lock and key, or other means of security, and is controlled by the authority responsible for the location

About This Manual

This manual introduces the following Neousys Nuvo systems:

Nuvo-7160GC features Intel[®] 9th/ 8th Gen Core[™] octa/ hexa core 35W/ 65W LGA1151 processors. The Nuvo-7160GC system supports an NVIDIA[®] graphics card up to 120W.

Nuvo-7164GC is specifically designed to support an NVIDIA[®] Tesla[®] P4/ T4 for advanced inference capabilities.

Nuvo-7166GC offers two PCIe slots for users to install a Tesla inference accelerator and an additional function-purpose high performance PCIe card.

The guide also demonstrates the system's installation procedures.

Revision History

Version	Date	Description
1.0	Jul. 2019	Initial release
1.1	Apr. 2020	Added Nuvo-7166GC



Introduction

The Neousys Nuvo-716x family are specifically design to house and support NVIDIA[®] graphics cards and the more powerful inference-specialized Tesla® P4/ T4 With unique designs in each system, they serve to fulfill industrial edge AI and complex inference applications.

Nuvo-7160GC is a ruggedized GPU-aided AI inference platform designed for modern machine learning applications such as autonomous driving, facial recognition, vision inspection and recommendation services. It supports up to a 120W GPU, delivering 4~6 TFLOPS computing power for inference, as well as Intel[®] 9th/ 8th Gen Core[™] 8-core/ 6-core CPU, offering over extra 50% CPU performance enhancement over previous generations.

Nuvo-7164GC supports NVIDIA[®] Tesla[®] P4/ T4 to deliver up

to 40X higher inference capability compared to just CPUs. Nuvo-7164GC supports Tesla® P4 GPU, featuring 5.5 TFLOPS in FP32 and Tesla® T4 GPU, featuring 8.1 TFLOPS in FP32 and 130 TOPs in INT8 for real-time inference based on trained neural network model.

Nuvo-7166GC is a ruggedized AI inference platform that supports an NVIDIA Tesla T4 inference accelerator plus an additional PCIe expansion slot for application-oriented high-performance add-on card. The system is capable of providing up to 8.1 TFLOPS in FP32 and 130 TOPs in INT8 for real-time inference. The system offers optimal balance between CPU, GPU and memory performance.



Nuvo-7160GC



Nuvo-7164GC



Nuvo-7166GC

Thanks to Neousys' patented Cassette design and ingenious ventilation mechanism, Nuvo-7160GC series is capable of effectively dissipating the heat generated by the GPU. By introducing the guided airflow from intake to exhaust with powerful fans featuring smart fan control, it allows an NVIDIA® 120W GPU to operate at 60°C ambient temperature under 100% GPU loading.

The Nuvo-7164GC/ Nuvo-7166GC systems follow a similar Cassette design but instead



guides the air to flow directly over the heatsink of NVIDIA[®] Tesla P4/ T4 to sustain 100% GPU loading up to 50°C operating temperature.

Nuvo-7160GC/ Nuvo-7164GC/ Nuvo-7166GC series incorporate rich I/O functions such as USB 3.1 Gen2/ Gen1, GbE, COM and MezIOTM interface in its restricted footprint. It also leverages cutting-edge M.2 NVMe technology to support over 2000 MB/s disk read/write speed or utilize Intel[®] OptaneTM memory to boost the performance of your traditional hard disk drive. Neousys Nuvo-7160GC/ Nuvo-7164GC / Nuvo-7166GC series are ideal solutions for emerging edge computing by combining exceptional CPU and GPU performances.



1.1 Product Specifications

1.1.1 Nuvo-7160GC Specifications

System Core			
	Supporting Intel [®] 9 th / 8 th Gen Coffee Lake 6 core CPU (LGA1151 socket,		
	65W/ 35W TDP)		
Processor	- Intel® Core ™ i7-8700/ i7-8700T/ i7-9700E/ i7-9700TE		
	- Intel® Core ™ i5-8500/ i5-8500T/ i5-9500E/ i5-9500TE		
	- Intel® Core ™ i3-8100/ i3-8100T/ i3-9100E/ i3-9100TE		
Chipset	Intel [®] Q370 Platform Controller Hub		
Graphics	Integrated Intel [®] UHD Graphics 630		
Memory	Up to 64GB DDR4 2666/ 2400 SDRAM (two SODIMM slots)		
AMT	Supports AMT 12.0		
ТРМ	Supports TPM 2.0		
I/O Interface			
Ethernet port	6x Gigabit Ethernet ports (I219 and 5x I210)		
	Optional IEEE 802.3at PoE+ PSE for Port 3 ~ Port 6		
PoE+	100 W total power budget		
	4x USB 3.1 Gen2 (10 Gbps) ports		
USB	4x USB 3.1 Gen1 (5 Gbps) ports		
	1x VGA connector, supporting 1920 x 1200 resolution		
Video Port	1x DVI-D connector, supporting 1920 x 1200 resolution		
	1x DisplayPort connector, supporting 4096 x 2304 resolution		
Serial Port	2x software-programmable RS-232/ 422/ 485 ports (COM1/ COM2)		
Senai Pon	2x RS-232 ports (COM3/ COM4)		
Audio	1x 3.5mm jack for mic-in and speaker-out		
Storage Interface	e		
SATA HDD	2x internal SATA port for 2.5" HDD/ SSD (support up to 15mm thickness),		
SATA HUU	supporting RAID 0/1		
M.2 NVMe	1x M.2 2280 M key NVMe socket (PCIe Gen3 x4 and SATA signal) for		
	NVMe/ SATA SSD or Intel [®] Optane [™] memory installation		
mSATA	1x full-size mSATA port (mux with mini-PCIe)		
Internal Expansi	on Bus		
	1x PCIe x16 slot@Gen3, 16-lanes PCIe signals in Cassette for		
PCI Express	installing NVIDIA $^{ extsf{B}}$ 120W GPU (Max. graphics card dimension is 188		
	mm(L) x 121 mm(W), dual slot allocation)		



Mini PCI-E	1x full-size mini PCI Express socket with internal SIM socket (mux with	
_	mSATA)	
M.2	1x M.2 2242 B key socket with dual front-accessible SIM sockets,	
101.2	supporting dual SIM mode with selected M.2 LTE module	
Expandable I/O	1x MezIO TM expansion port for Neousys MezIO TM modules	
Power Supply		
DC Input	1x 3-pin pluggable terminal block for 8~35VDC input	
Remote Ctrl. &		
Status Output	1x 3-pin pluggable terminal block for remote control and PWR LED output	
Maximum	With 120W NVIDIA [®] GPU	
Power	With i7-8700 (35W mode): 211W (Max.) @ 24V	
Consumption	With i7-8700 (65W mode): 240W (Max.) @ 24V	
Mechanical		
Dimension	240mm (W) x 225 mm (D) x111 mm (H)	
Weight	4.5 Kg (including CPU, GPU, memory and HDD)	
Mounting	Wall-mount (standard) or DIN-Rail mounting (optional)	
Environmental		
	With 35W CPU and 120W GPU	
One another	-25°C ~ 60°C **	
Operating	With 65W CPU and 120W GPU	
Temperature	-25°C ~ 60°C */** (configured as 35W TDP mode)	
	-25°C ~ 50°C */** (configured as 65W TDP mode)	
Storage	1020 0520	
Temperature	-40°C ~85°C	
Humidity 10%~90%, non-condensing		
Vibration	Operating, MIL-STD-810G, Method 514.6, Category 4	
Shock	Operating, MIL-STD-810G, Method 516.6, Procedure I, Table 516.6-II	
EMC	CE/FCC Class A, according to EN 55032 & EN 55024	

* R.O.C Patent No. M534371/ M456527

** For i7-8700/ i7-9700E running at 65W mode, the highest operating temperature shall be limited to 50°C and thermal throttling may occur when sustained full-loading applied. Users can configure CPU power in BIOS to obtain higher operating temperature.

*** For sub-zero operating temperature, a wide temperature HDD or Solid State Disk (SSD) is required.



1.1.2 Nuvo-7164GC Specifications

System Core			
	Supporting Intel [®] 9 th / 8 th Gen Coffee Lake 6 core CPU (LGA1151 socket, 65W/ 35W TDP)		
Processor	- Intel® Core ^{7M} i7-8700/ i7-8700T/ i7-9700E/ i7-9700TE		
	- Intel® Core ^{7M} i5-8500/ i5-8500T/ i5-9500E/ i5-9500TE		
	- Intel® Core ^{7M} i3-8100/ i3-8100T/ i3-9100E/ i3-9100TE		
Chipset	Intel [®] Q370 Platform Controller Hub		
Graphics	Integrated Intel [®] UHD Graphics 630		
Memory	Up to 64GB DDR4 2666/ 2400 SDRAM (two SODIMM slots)		
AMT	Supports AMT 12.0		
ТРМ	Supports TPM 2.0		
I/O Interface			
Ethernet port	6x Gigabit Ethernet ports (I219 and 5x I210)		
	Optional IEEE 802.3at PoE+ PSE for Port 3 ~ Port 6		
PoE+	100 W total power budget		
	4x USB 3.1 Gen2 (10 Gbps) ports		
USB	4x USB 3.1 Gen1 (5 Gbps) ports		
	1x VGA connector, supporting 1920 x 1200 resolution		
Video Port	1x DVI-D connector, supporting 1920 x 1200 resolution		
	1x DisplayPort connector, supporting 4096 x 2304 resolution		
Serial Port	2x software-programmable RS-232/ 422/ 485 ports (COM1/ COM2)		
Senar Pon	2x RS-232 ports (COM3/ COM4)		
Audio	1x 3.5mm jack for mic-in and speaker-out		
Storage Interfac	e		
SATA HDD	2x internal SATA port for 2.5" HDD/ SSD (support up to 15mm thickness),		
SATAHDD	supporting RAID 0/1		
	1x M.2 2280 M key NVMe socket (PCIe Gen3 x4 and SATA signal) for		
M.2 NVMe	NVMe/ SATA SSD or Intel [®] Optane [™] memory installation		
mSATA	1x full-size mSATA port (mux with mini-PCIe)		
Internal Expansi	ion Bus		
PCle	1x PCIe x16 slot @ Gen3, 16-lanes PCIe signal in Cassette for installing		
PCIe	NVIDIA [®] Tesla T4 GPU		
Mini PCI-E	1x full-size mini PCI Express socket with internal SIM socket (mux with mSATA)		
M.2	1x M.2 2242 B key socket with dual front-accessible SIM sockets,		



	supporting dual SIM mode with selected M.2 LTE module	
Expandable I/O	1x MezIO [™] expansion port for Neousys MezIO [™] modules	
Power Supply		
DC Input	1x 3-pin pluggable terminal block for 8~35VDC input	
Remote Ctrl. &	1x 2 pip pluggoble terminal block for remote central and DWD LED output	
Status Output	1x 3-pin pluggable terminal block for remote control and PWR LED output	
Mechanical		
Dimension	240mm (W) x 225 mm (D) x111 mm (H)	
Weight	4.5 Kg (including CPU, GPU, memory and HDD)	
Mounting	Wall-mount (standard) or DIN-Rail mounting (optional)	
Environmental		
	With 35W CPU	
	-25°C ~ 60°C **	
Operating	With 65W CPU	
Operating Temperature	-25°C ~ 60°C */** (configured as 35W TDP mode)	
remperature	-25°C ~ 50°C */** (configured as 65W TDP mode)	
	In compliance with NVIDIA $\ensuremath{^{ extsf{w}}}$ Tesla T4 warranty policy, an operating	
	temperature of $0^{\circ}C$ ~50°C is required for systems with Tesla T4 installed	
Storage	-40°C ~85°C	
Temperature	-40°C ~85°C	
Humidity	10%~90% , non-condensing	
Vibration	Operating, MIL-STD-810G, Method 514.6, Category 4	
Shock	Operating, MIL-STD-810G, Method 516.6, Procedure I, Table 516.6-II	
EMC	CE/FCC Class A, according to EN 55032 & EN 55024	

* R.O.C Patent No. M534371/ M456527

** For i7-8700/ i7-9700E running at 65W mode, the highest operating temperature shall be limited to 50°C and thermal throttling may occur when sustained full-loading applied. Users can configure CPU power in BIOS to obtain higher operating temperature.

*** For sub-zero operating temperature, a wide temperature HDD or Solid State Disk (SSD) is required.



1.1.3 Nuvo-7166GC Specifications

System Core		
	Supporting Intel [®] 9 th / 8 th Gen Coffee Lake 6 core CPU (LGA1151 socket,	
	65W/ 35W TDP)	
Processor	- Intel® Core [™] i7-8700/ i7-8700T/ i7-9700E/ i7-9700TE	
	- Intel® Core [™] i5-8500/ i5-8500T/ i5-9500E/ i5-9500TE	
	- Intel® Core [™] i3-8100/ i3-8100T/ i3-9100E/ i3-9100TE	
Chipset	Intel [®] Q370 Platform Controller Hub	
Graphics	Integrated Intel [®] UHD Graphics 630	
Memory	Up to 64GB DDR4 2666/ 2400 SDRAM (two SODIMM slots)	
AMT	Supports AMT 12.0	
TPM	Supports TPM 2.0	
I/O Interface		
Ethernet port	6x Gigabit Ethernet ports (I219 and 5x I210)	
PoE+	Optional IEEE 802.3at PoE+ PSE for Port 3 ~ Port 6	
POE+	100 W total power budget	
	4x USB 3.1 Gen2 (10 Gbps) ports	
USB	4x USB 3.1 Gen1 (5 Gbps) ports	
	1x VGA connector, supporting 1920 x 1200 resolution	
Video Port	1x DVI-D connector, supporting 1920 x 1200 resolution	
	1x DisplayPort connector, supporting 4096 x 2304 resolution	
Serial Port	2x software-programmable RS-232/ 422/ 485 ports (COM1/ COM2)	
Sellar Folt	2x RS-232 ports (COM3/ COM4)	
Audio	1x 3.5mm jack for mic-in and speaker-out	
Storage Interface	e	
SATA HDD	2x internal SATA port for 2.5" HDD/ SSD (support up to 15mm thickness),	
SAIAHDD	supporting RAID 0/1	
M.2 NVMe	1x M.2 2280 M key NVMe socket (PCIe Gen3 x4 and SATA signal) for	
	NVMe/ SATA SSD or Intel [®] Optane TM memory installation	
mSATA	1x full-size mSATA port (mux with mini-PCIe)	
Internal Expansi	on Bus	
	2x PCIe x16 slot @ Gen3, 8-lanes PCIe signal in Cassette for installing	
PCI Express	NVIDIA® Tesla T4 GPU and one additional PCIe card	
Mini PCI-E	1x full-size mini PCI Express socket with internal SIM socket (mux with	
	mSATA)	
M.2	1x M.2 2242 B key socket with dual front-accessible SIM sockets,	



	supporting dual SIM mode with selected M.2 LTE module	
Expandable I/O	1x MezIO [™] expansion port for Neousys MezIO [™] modules	
Power Supply		
DC Input	1x 3-pin pluggable terminal block for 8~35VDC input	
Remote Ctrl. &	1x 3-pin pluggable terminal block for remote control and PWR LED output	
Status Output	TX 5-pin pluggable terminal block for remote control and PWK LED output	
Mechanical		
Dimension	240mm (W) x 225 mm (D) x111 mm (H)	
Weight	4.5 Kg (including CPU, GPU, memory and HDD)	
Mounting	Wall-mount (standard) or DIN-Rail mounting (optional)	
Environmental		
	With 35W CPU	
	-25°C ~ 60°C **	
Operating	With 65W CPU	
Operating Temperature	-25°C ~ 60°C */** (configured as 35W TDP mode)	
remperature	-25°C ~ 50°C */** (configured as 65W TDP mode)	
	In compliance with NVIDIA $^{ m I\!R}$ Tesla T4 warranty policy, an operating	
	temperature of $0^{\circ}C$ ~50°C is required for systems with Tesla T4 installed	
Storage	-40°C ~85°C	
Temperature	-40 0 ~03 0	
Humidity	10%~90% , non-condensing	
Vibration	Operating, MIL-STD-810G, Method 514.6, Category 4	
Shock	Operating, MIL-STD-810G, Method 516.6, Procedure I, Table 516.6-II	
EMC	CE/FCC Class A, according to EN 55032 & EN 55024	


* R.O.C Patent No. M534371/ M456527

** For i7-8700/ i7-9700E running at 65W mode, the highest operating temperature shall be limited to 50°C and thermal throttling may occur when sustained full-loading applied. Users can configure CPU power in BIOS to obtain higher operating temperature.


*** For sub-zero operating temperature, a wide temperature HDD or Solid State Disk (SSD) is required.



1.2 Nuvo-7160GC Dimensions

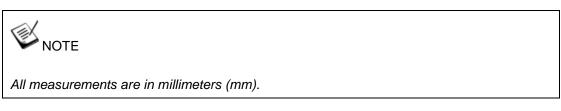


1.2.1 Nuvo-7160GC Front Panel View

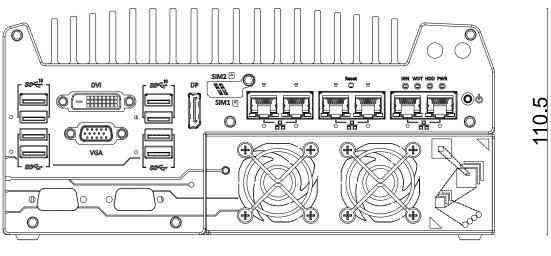

240.0


1.2.2 Nuvo-7160GC Rear Panel View

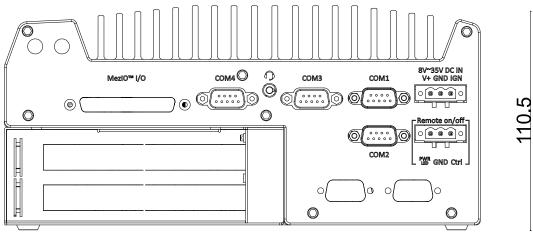






1.2.3 Nuvo-7160GC Top View

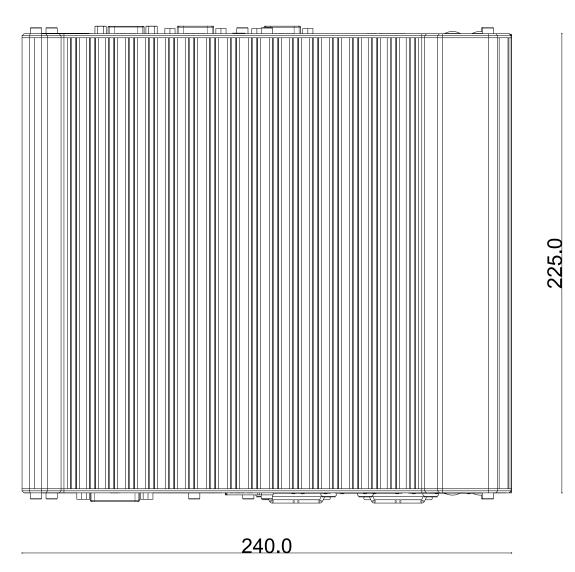




1.2.4 Nuvo-7160GC Bottom View

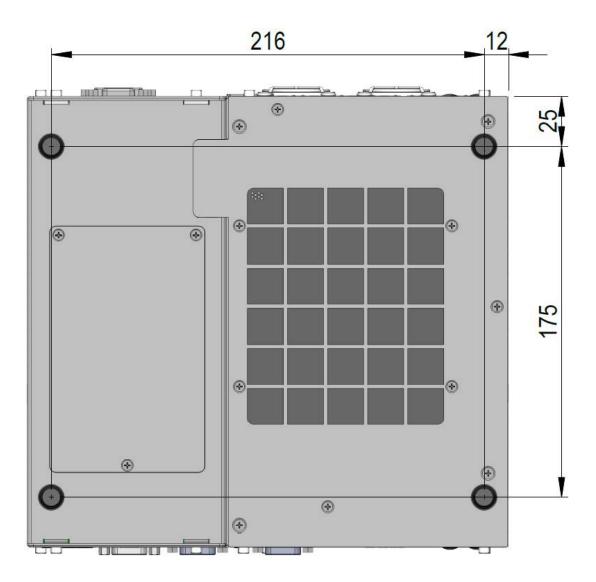





1.3 Nuvo-7164GC Dimensions

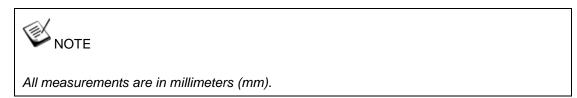

1.3.1 Nuvo-7164GC Front Panel View

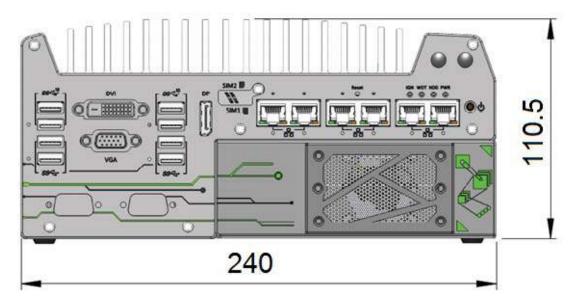


1.3.2 Nuvo-7164GC Rear Panel View

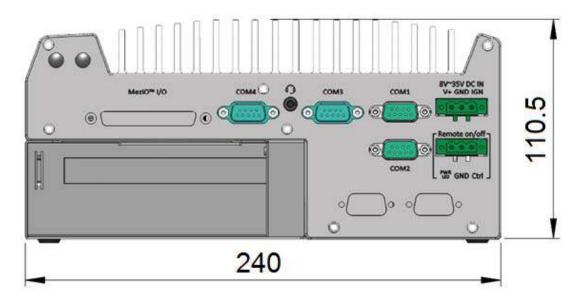




1.3.3 Nuvo-7164GC Top View

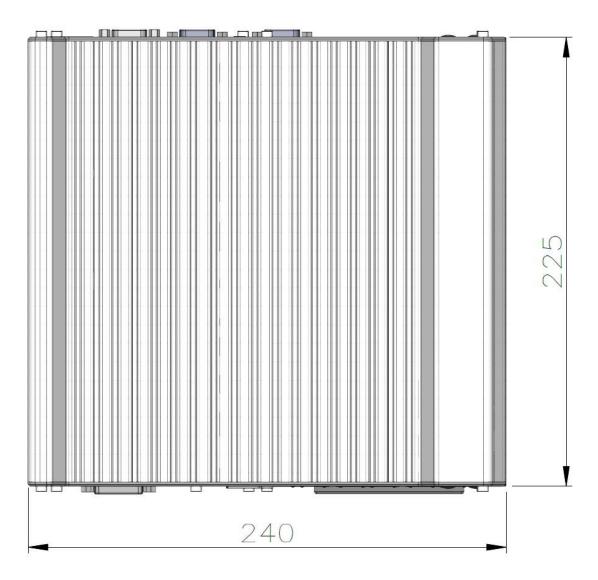




1.3.4 Nuvo-7164GC Bottom View

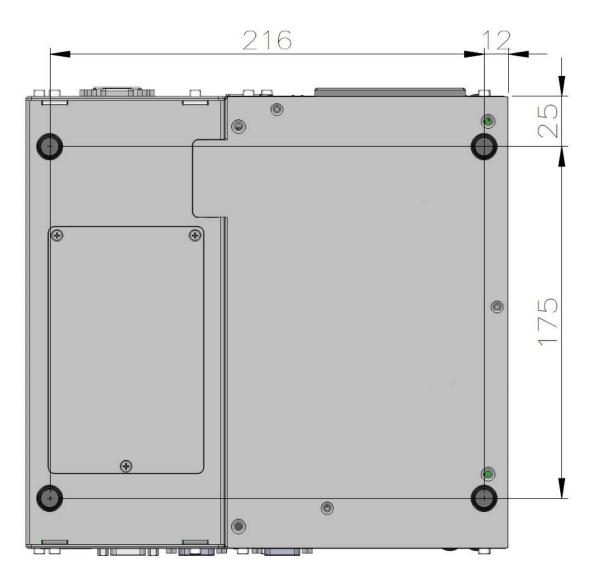




110.2

1.4 Nuvo-7166GC Dimensions

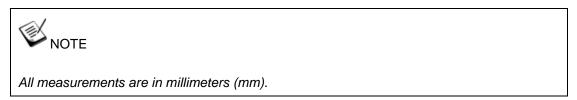


1.4.1 Nuvo-7166GC Front Panel View

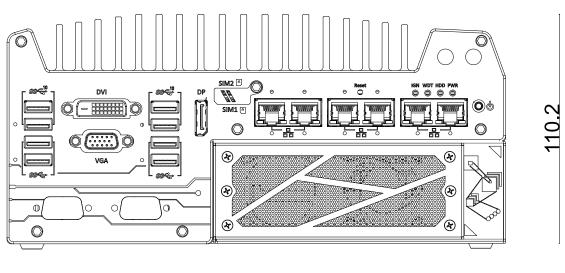


240.0

1.4.2 Nuvo-7166Gc Rear Panel View

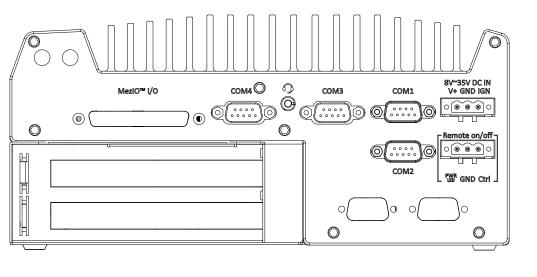


240.0

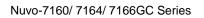




1.4.3 Nuvo-7166GC Top View

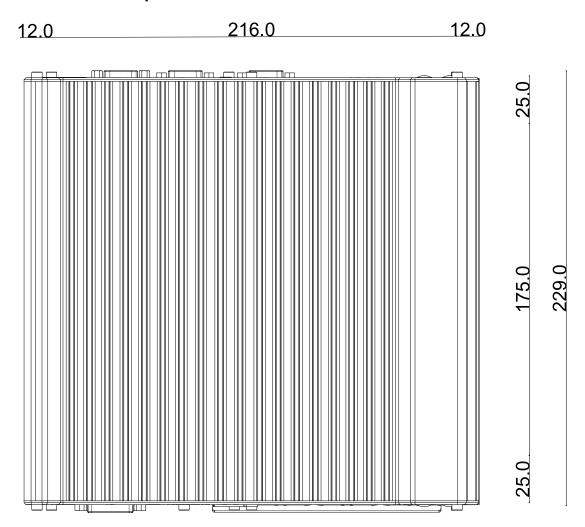



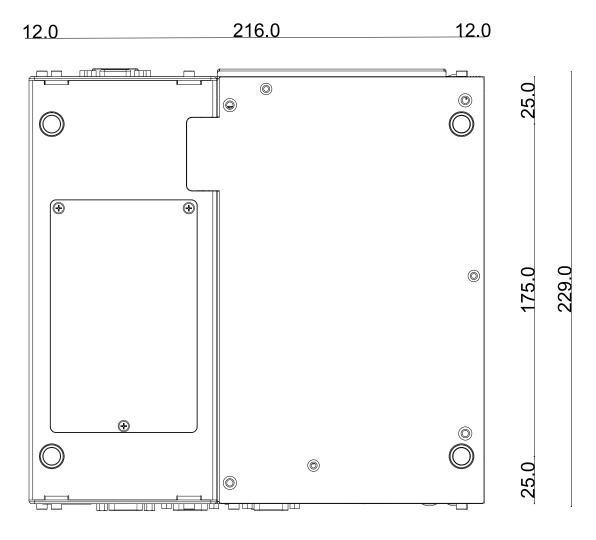

1.4.4 Nuvo-7166GC Bottom View



2 System Overview

Upon receiving and unpacking your Nuvo-7160GC/ Nuvo-7164GC/ Nuvo-7166GC system, please check immediately if the package contains all the items listed in the following table. If any item(s) are missing or damaged, please contact your local dealer or Neousys Technology.

2.1 Nuvo-7160GC Packing List

System Pack	Nuvo-7160GC	
1	Nuvo-7160GC system	
1	(If you ordered CPU/ RAM/ HDD/ graphics card, please verify these items)	
	Accessory box, which contains	
	CPU bracket	1
	 Neousys drivers & utilities DVD 	1
	Wall-mount bracket	2
2	Foot pad	4
	• 3-pin power terminal block	2
	 HDD thermal pad for 2.5" HDD/SSD (if HDD is not installed) 	1
	Screw pack	1
	Rubber spacer	4

2.2 Nuvo-7164GC Packing List

System Pack	Nuvo-7164GC	
1	Nuvo-7164GC	
1	(If you ordered CPU/ RAM/ HDD/ graphics card, please verify these items)	
	Accessory box, which contains	
	CPU bracket	1
	 Neousys drivers & utilities DVD 	1
2	Wall-mount bracket	2
2	Foot pad	4
	• 3-pin power terminal block	2
	 HDD thermal pad for 2.5" HDD/SSD (if HDD is not installed) 	1
	Screw pack	1

2.3 Nuvo-7166GC Packing List

System Pack	Nuvo-7166GC	
1	Nuvo-7166GC	1
	(If you ordered CPU/ RAM/ HDD/ graphics card, please verify these items)	
	Accessory box, which contains	
	CPU bracket	1
	 Neousys drivers & utilities DVD 	1
2	Wall-mount bracket	2
2	Foot pad	4
	• 3-pin power terminal block	2
	 HDD thermal pad for 2.5" HDD/SSD (if HDD is not installed) 	1
	Screw pack	1



2.4 Front Panel I/O


The Nuvo-7160GC system panel will be used for illustration demonstration.

	9 10

No.		ltem	Description	
1		USB3.1 Gen	USB3.1 Gen 2 port (Superspeed+) offers up to 10Gbps, twice the bandwidth	
			over existing SuperSpeed USB3.1 Gen 1 connection. It is also backwards	
		<u>2 port</u>	compatible with USB3.0 and USB2.0	
2		USB3.1 Gen	USB3.1 Gen 1 offers up to 5Gbps of data-throughput performance	
		<u>1 port</u>		
3		DVI port	DVI-D output supports resolution up to 1920x1200@60Hz and is compatible	
0			with other digital connections via an adapter.	
4		VGA port	VGA output supports resolution up to 1920x1200@60Hz	
-		<u>DisplayPort</u>	Support display resolutions up to 4096 x 2304. Compatible with HDMI/ DVI via	
5			respective adapter cable (resolution may vary).	
6		<u>SIM 1 & 2</u>	Install a 3G/4G module and insert a SIM card to access the operator's network.	
7		PoE+ GbE	6x Gigabit Ethernet ports by I219 and 5x I210	
<i>'</i>		<u>port</u>		
8		Reset button	Use this button to manually reset the system.	
		<u>LED</u>	From left to right, the LEDs are IGN (ignition control), WDT (watchdog timer),	
9		indicators	HDD (hard disk drive) and PWR (system power).	
10		Power button	Use this button to turn on or shutdown the system.	
		0	The cassette enclosure offers a separate compartment to manage thermal	
Area in	en	Cassette	conditions and reduce installation complications of an add-on card or a GPU	
Are	Enclosure	card for Nuvo-7160GC series.		
L				




2.4.1 USB3.1 Gen 2 Port

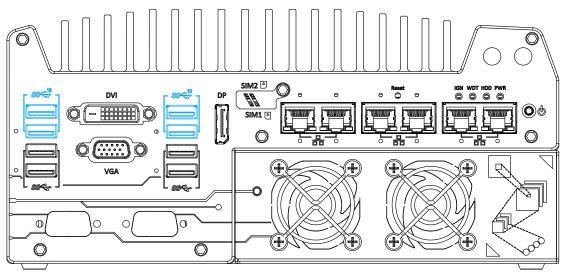

The system's USB 3.1 Gen 2 ports (10Gbps) are implemented via native xHCI (eXtensible Host Controller Interface) controller and are backward compatible with USB3.1 Gen.1 USB 2.0, USB 1.1 and USB 1.0 devices. Legacy USB is also supported so you can use USB keyboard/mouse in DOS environment

xHCI driver is supported natively in Windows 10, therefore you do not need to install xHCI driver in prior to utilize USB functions.

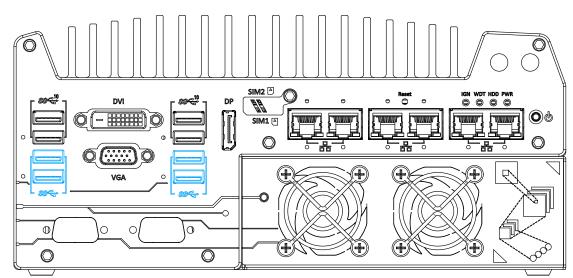


2.4.2 USB3.1 Gen 1 Port

The system's USB 3.0 Gen 1 ports (5Gbps) are implemented via native xHCI (eXtensible Host Controller Interface) controller and are backward compatible with USB 2.0, USB 1.1 and USB 1.0 devices. Legacy USB is also supported so you can use USB keyboard/mouse in DOS environment

xHCI driver is supported natively in Windows 10, therefore you do not need to install xHCI driver in prior to utilize USB functions.



2.4.3 DVI Port

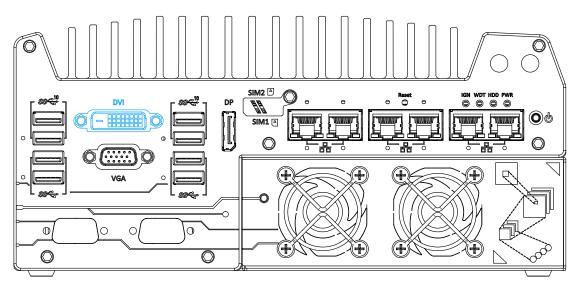


DVI-D transmits graphics data in digital format and therefore can deliver better image quality at high resolution. The DVI connector on the front panel can either output DVI signals or other digital signals (via an adapter/ cable) depending on the display device connected. It supports resolutions up to 1920x1200@60Hz.

The system supports triple independent display outputs by connecting display devices to VGA, DVI and DisplayPort. To support multiple display outputs and achieve best DVI output resolution in Windows, you need to install corresponding graphics driver. Please refer to section <u>OS Support and Driver Installation</u> for details.



2.4.4 VGA Port

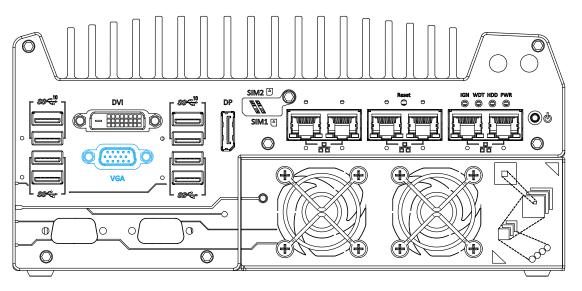

VGA connector is the most common video display connection. The VGA output supports up to 1920x1200@60Hz resolution.


The system supports triple independent display outputs by connecting display devices to VGA, DVI and DisplayPort. To support multiple display outputs and achieve best VGA output resolution in Windows, you need to install corresponding graphics drivers. Please refer to section <u>OS Support and Driver Installation</u> for details.

ΝΟΤΕ

Please make sure your VGA cable includes SDA and SCL (DDC clock and data) signals for correct communication with monitor to get resolution/timing information. A cable without SDA/ SCL can cause blank screen on your VGA monitor due to incorrect resolution/timing output.



2.4.5 DisplayPort

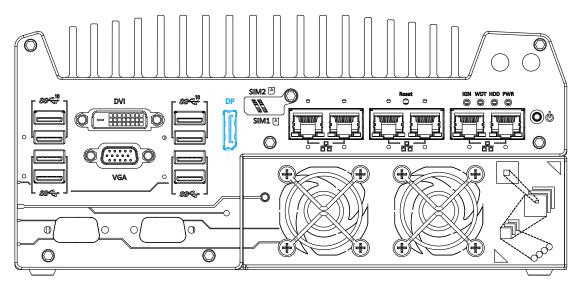

The system has a DisplayPort (DP) output which is a digital display interface that mainly connect video source and carry audio to a display device. When connecting a DisplayPort, it can deliver up to 4K UHD (4096 x 2304) in resolution. The system is designed to support passive DisplayPort adapter/ cable. You can connect to other display devices using DP-to-HDMI cable or DP-to-DVI cable.




DP-to-HDMI

DP-to-DVI

The system supports triple independent display outputs by connecting display devices to VGA, DVI and DisplayPort. To support multiple display outputs and achieve best DisplayPort output resolution in Windows, you need to install corresponding graphics drivers. Please refer to section <u>OS Support and Driver Installation</u> for details.



2.4.6 Micro-SIM (3FF) 1 & 2 Slots

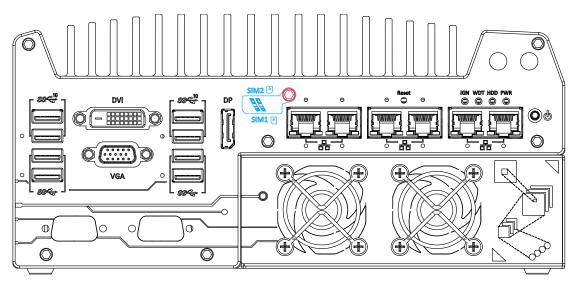


On the front panel, there are two panel-accessible SIM sockets. By installing 3G/4G modules onto the internal M.2 slot, you can have Internet access via telecom operator's network. The SIM slots can be accessed by loosening the screw (indicated in **red**) that holds the SIM slot cover and SIM cards are secured into the sockets via push-push type mechanisms. The push-push mechanism means the SIM card is push-to-install and push-to-retrieve. Please note that the SIM1 micro-SIM card must be inserted upside down (gold fingers facing upward) while SIM2 micro-SIM card must be inserted right-side up (gold fingers facing downward).



The dual SIM card functionality is only available when Sierra Wireless EM7455/7430 solution is installed. For other M.2 4G add-on solutions, SIM card slot 1 is the default functioning slot.



2.4.7 Ethernet Port/ PoE+

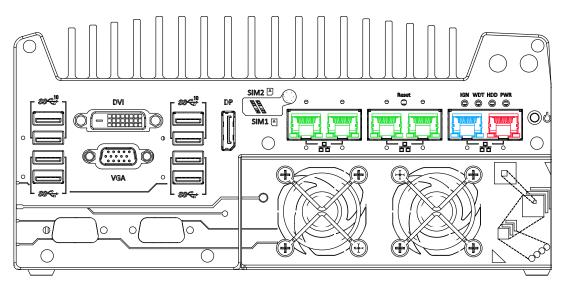

The ports marked in **green** (with optional PoE) and **red** implemented using Intel[®] I210 while the port marked in **blue** is implemented using Intel[®] I219-LM controller that supports Wake-on-LAN and is also compatible with <u>Intel[®] AMT (Active Management Technology)</u> to support advanced features such as remote SOL desktop and remote on/ off control. All Ethernet ports feature <u>panel screw fix holes</u> for a firm connection.

Power over Ethernet (PoE) supplies electrical power and data on a standard CAT-5/ CAT-6 Ethernet cable. Acting as a PoE PSE (Power Sourcing Equipment), compliant with IEEE 802.3at, each PoE port delivers up to 25W to a Powered Device (PD). PoE can automatically detect and determine if the connected device requires power or not, so it is compatible with standard Ethernet devices as well.

Each port has one dedicated PCI Express link for maximum network performance. Please refer to the table below for LED connection statuses.


LED Color	Status	Description	
Yellow	Off	Ethernet port is disconnected	
	On	Ethernet port is connected and no data transmission	
	Flashing	Ethernet port is connected and data is transmitting/receiving	
Speed LED (Left)			
LED Color	Status	Description	
Green or Orange	Off	10 Mbps	
	Green	100 Mbps	
	Orange	1000 Mbps	

Active/Link LED (Right)

To utilize the GbE port in Windows, you need to install corresponding driver for Intel[®] I210-IT/ I219-LM GbE controller.




2.4.8 Reset Button

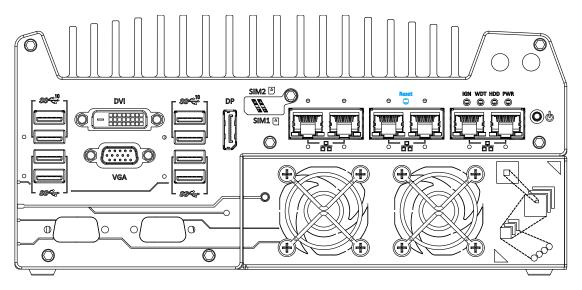

The reset button is used to manually reset the system in case of system halt or malfunction. To avoid unexpected reset, the button is purposely placed behind the panel. To reset, please use a pin-like object (eg. tip of a pen) to access the reset button

2.4.9 LED Indicators

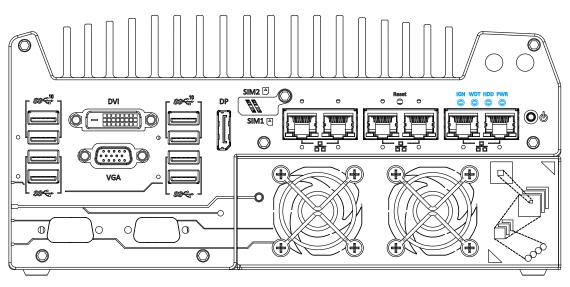


There are four LED indicators on the I/O panel: IGN, WDT, HDD and PWR. The descriptions of these three LED are listed in the following table.

Indicator	Color	Description	
IGN	Yellow	Ignition signal indicator, lid when IGN is high (12V/ 24V).	
WDT	Yellow	Watchdog timer LED, flashing when WDT is active.	
HDD	Red	Hard drive indicator, flashing when hard disk drive is active.	
PWR	Green	Power indictor, lid when system is on.	




2.4.10 Power Button

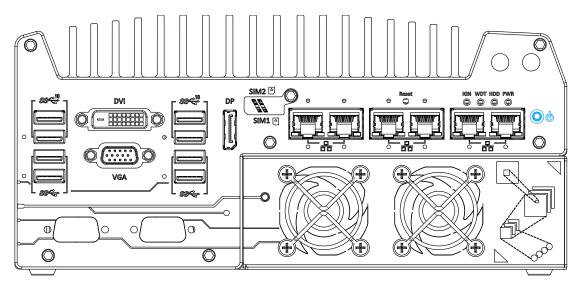

The power button is a non-latched switch for ATX mode on/off operation. To turn on the system, press the power button and the PWR LED should light-up green. To turn off the system, issuing a shutdown command in OS is preferred, or you can simply press the power button. To force shutdown when the system freezes, press and hold the power button for 5 seconds. Please note that there is a 5-second interval between on/off operations (i.e. once the system is turned off, there is a 5-second wait before you can power-on the system).



2.4.11 Cassette Module

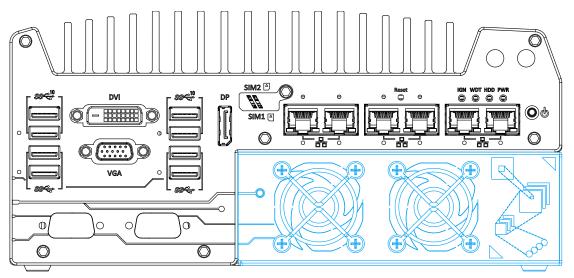


Neousys' patented expansion Cassette (R.O.C. Patent No. M456527) provides a separated compartment to accommodate an add-on card. It effectively manages thermal conditions of both the system and the add-on card. The modular concept brought by Cassette module also reduces the complexity of installing and replacing an add-on card in the fanless controller. The Cassette module incorporates an innovative mechanical design to effectively deal with the heat generated by GPU. This patented architecture (R.O.C. Patent No. M534371) creates a sealed wind tunnel to bring in cold air to the GPU and expels hot air via a system fan. The design offers the system extreme stability and reliability.

PCIe Expansion in Cassette Module

System	PCIe Configuration
Nuvo-7160GC	1x PCIe x16 slot@Gen3, 16-lanes PCIe signal; supports an NVIDIA® graphics card up to 120W TDP (Max. dimension 188 mm(L) x 121 mm(W), dual slot allocation).
Nuvo-7164GC	1x PCle x16 slot@Gen3, 16-lanes PCle signal; supports an NVIDIA® Tesla P4/T4 GPU
Nuvo-7166GC	2x PCIe x16 slot@Gen3, 8-lanes PCIe signal; supports an NVIDIA® Tesla T4 GPU and one additional performance/ application oriented PCIe card Addition PCIe card dimension restrictions 167.7 x 111.2mm Compatible Neousys add-on cards" PCIe-PoE550X/ PCIe-PoE354at/ 352at PB-2500J PCIe-USB380/ 340




2.5 Rear Panel I/O

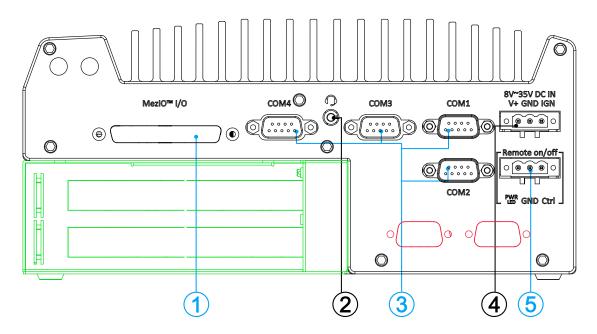

Nuvo-7160GC rear panel features MezIO[™] port, four (4) COM ports, 3-pin terminal and 3-pin on/ off control. The Cassette module can be located at the bottom of the enclosure and there are two reserved openings for D-sub9 connectors. The connectors of the installed PCI/ PCIe or graphics card within the Cassette module can be accessed from this side of the panel.

No.	Item	Description
1	MezIO [™] I/O	Reserved for MezIO TM I/O connector. Connector may vary depending on your choice of MezIO TM .
2	<u>4-Pole 3.5mm</u> headphone/ microphone jack	The 4-pole 3.5mm jack accepts microphone voice input and headphone speaker sound output.
3	COM ports 1-4	The four COM ports offer communication with external devices.
4	<u>3-pin terminal</u> block (DC/ ignition input)	Compatible with DC power input from 8~35V, the terminal block is also used for ignition signal input.
5	<u>3-pin Remote</u> on/ off control	Allows for external switch extension when the system is placed inside a cabinet.
Area in green	<u>Cassette</u> module	The cassette module offers a separate compartment to manage thermal conditions and reduce installation complications of an add-on card.
Area in red	Reserved port opening/ cover	The area indicated in red on the rear panel of Nuvo-7160GC series feature reserved port opening/ cover for additional D-sub 9 connectors.



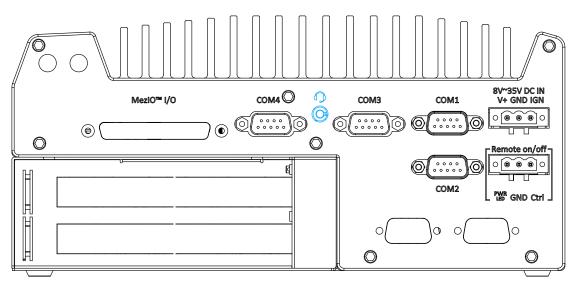


2.5.1 4-Pole 3.5mm Headphone/ Microphone Jack

The system audio function uses high definition audio Realtek ALC262 codec. There is a female 4-pole audio jack for headphone (speaker) output and microphone input. To utilize the audio function in Windows, you need to install corresponding drivers for both Intel[®] Q370 chipset and Realtek ALC262 codec.




2.5.2 COM Ports

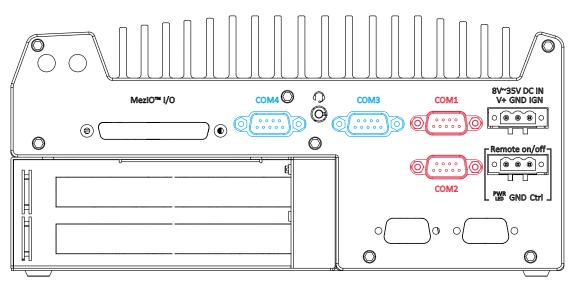

The system provides four COM ports for communicating with external devices. These COM ports are implemented using industrial-grade ITE8786 Super IO chip (-40 to 85°C) and provide up to 115200 bps baud rate.


COM1 and COM2 (in **red**) are software-configurable RS-232/422/485 ports. COM3 and COM4 (in **blue**) are standard 9-wire RS-232 ports. The operation mode of COM1 and COM2 can be set in BIOS setup utility. The following table describes the pin definition of COM ports.



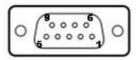

	COM1 & C	COM2	COM3 & COM4	
Pin#	RS-232 Mode	RS-422 Mode		RS-232 Mode
1	DCD			DCD
2	RX	422 TXD+	485 TXD+/RXD+	RX
3	ТΧ	422 RXD+		ТХ
4	DTR	422 RXD-		DTR
5	GND	GND	GND	GND
6	DSR			DSR
7	RTS			RTS
8	CTS	422 TXD-	485 TXD-/RXD-	CTS
9	RI			RI




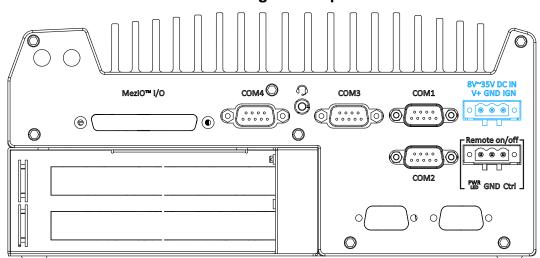

2.5.3 3-Pin Terminal Block for DC and Ignition Input

The system accepts a wide range of DC power input from 8 to 35V via a 3-pin pluggable terminal block, which is fit for field usage where DC power is usually provided. The screw clamping mechanism on the terminal block offers connection reliability when wiring DC power. In addition to DC power input, this terminal block can also accept ignition signal input (IGN) when ignition control module (eg. MezIO-V20-EP) is installed for in-vehicle applications.

Please make sure the voltage of DC power is correct before you connect it to the system. Supplying a voltage over 35V will damage the system.

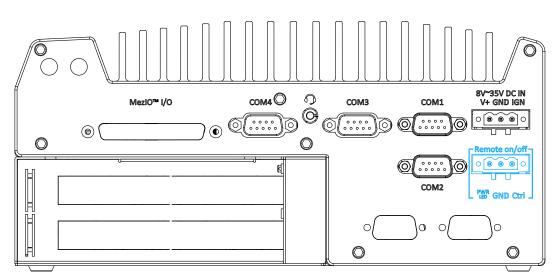

2.5.4 3-Pin Remote On/ Off

The "Remote On/ Off" 3-pin connection allows for external switch extension. It is useful when the system is placed in a cabinet or a not easily accessed location. You may connect an external status LED (20mA) indicator by connecting to PWR LED and GND.



2.6 Internal I/O Functions

In addition to I/O connectors on the front panel, the system also provides internal on-board connectors, such as remote on/off control, LED status output, internal USB 2.0 ports, etc. In this section, we'll illustrate these internal I/O functions.

2.6.1 Clear CMOS Button

The Clear CMOS button is used to manually reset the motherboard BIOS in case of system halt or malfunction. To avoid unexpected operation, the button is purposely placed behind the panel. To clear the CMOS, please refer to the following procedure.

- Please power off and unplug the system and refer to the section <u>Disassembling the</u> <u>System</u> on how to remove the front panel.
- 2. Once the front panel has been removed, the Clear CMOS button can be located at the top of the USB port (indicated in blue circle).




- 3. To clear the CMOS, press and hold the button for at least 5 seconds.
- 4. <u>Reinstall the system front panel</u> when done.

Clearing the CMOS will reset all BIOS settings to default and may result in down time!

If you have RAID volume configured, please backup all data as clearing the CMOS may result in data loss!



2.6.2 Dual SODIMM DRAM Slot

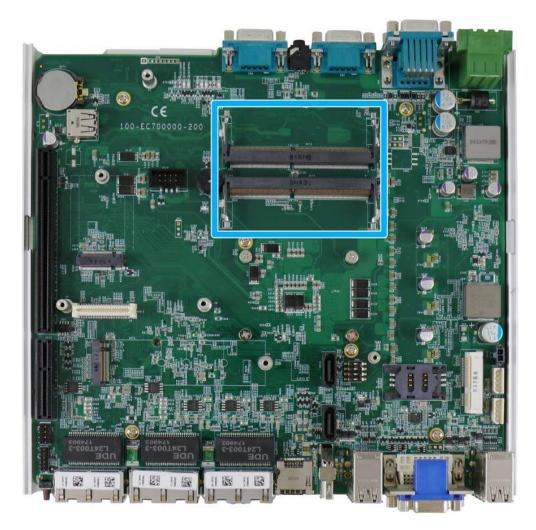


The system motherboard supports two 260-pin SODIMM socket for installing DDR4 memory module up to 64GB. Each slot supports single module DDR4 2666MHz SODIMM up to 32GB capacity.

NOTE

When changes are made to DRAM module(s), such as additionally install or remove and reinstall (into the same/ different slot, it will result in an approximately 30~60 seconds delay when booting up for the first time after such change(s).




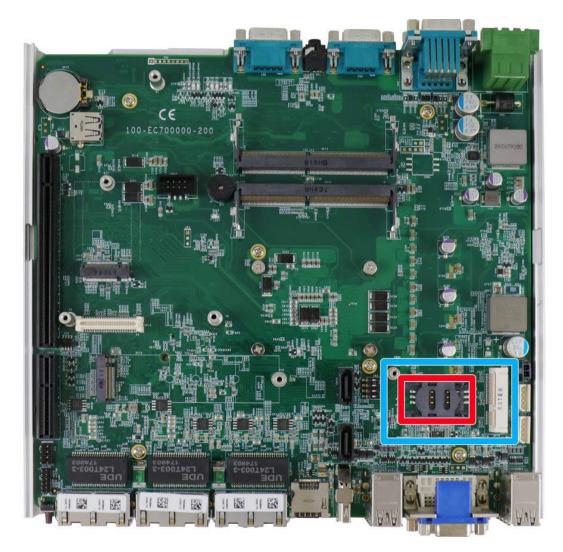


2.6.3 Dual Mode mSATA/ mini-PCIe Socket & Pin Definition

The system provides a dual mode mSATA/ mini-PCIe socket (indicated in **blue**) that is in compliance with mini-PCIe specification rev. 1.2. You can install either an mSATA SSD or mini-PCIe module into this socket and the system will automatically detect and configure it to run PCIe or SATA signals. This mini-PCIe socket is designed with SIM card (slot indicated in **red**) support. With a SIM card installed, your system can access the internet via your network provider's 3G/ 4G network.

For wireless (WIFI/ 3G/ 4G) communication, multiple SMA antenna apertures can be located on the front and rear panel.

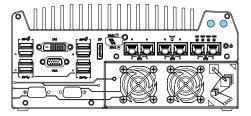

Front panel antennae opening

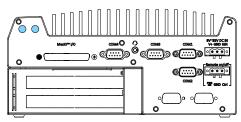

Rear panel antennae opening



Dual mode mSATA/ mini-PCle socket definition

51 4	9 47 45 43 41 39 3	37 35 33 31 29 27	25 23 21	19 17 15 13 11	97531			
62 60								
52 50	52 50 48 46 44 42 40 38 36 34 32 30 28 26 24 22 20 18 16 14 12 10 8 6 4 2							
Pin	Signal (mPCle)	Signal (mSATA)	Pin #	Signal (mPCle)	Signal (mSATA)			
1	WAKE#	-	2	+3.3Vaux	3.3V			
3	-	-	4	GND	GND			
5	-	-	6	+1.5V	+1.5V			
7	CLKREQ#	-	8	UIM_PWR	-			
9	GND	GND	10	UIM_DATA	-			
11	REFCLK-	-	12	UIM_CLK	-			
13	REFCLK+	-	14	UIM_RESET	-			
15	GND	GND	16	UIM_VPP	-			
Mecha	anical Key			1				
17	Reserved*	-	18	GND	GND			
19	Reserved*	-	20	W_DISABLE#	-			
21	GND	GND	22	PERST#	-			
23	PERn0	SATA_Rxp	24	3.3V	3.3V			
25	PERp0	SATA_Rxn	26	GND	GND			
27	GND	GND	28	+1.5V	+1.5V			
29	GND	GND	30	SMB_CLK	SMB_CLK			
31	PETn0	SATA_Txn	32	SMB_DATA	SMB_DATA			
33	PETp0	SATA_Txp	34	GND	GND			
35	GND	GND	36	USB_D-	-			
37	GND	GND	38	USB_D+	-			
39	3.3V	3.3V	40	GND	GND			
41	3.3V	3.3V	42	-	-			
43	GND	-	44	-	-			
45	Reserved	-	46	-	-			
47	Reserved	-	48	+1.5V	+1.5V			
49	Reserved	-	50	GND	GND			
51	Reserved	-	52	3.3V	3.3V			


Some off-the-shelf mini-PCIe 4G modules are not compliant to standard mini-PCIe interface. They use 1.8V I/O signals instead of standard 3.3V I/O and may have signal conflict. Please consult with Neousys for compatibility when in doubt!

Installing an incompatible 4G module may damage the system or the module itself may be damaged.




2.6.4 M.2 2242 (B Key), Mini-SIM Card Slot & Pin Definition

The dual SIM card functionality is only available when Sierra Wireless EM7455/7430 solution is installed. For other 4G add-on solutions, SIM card slot 1 is the default functioning slot.

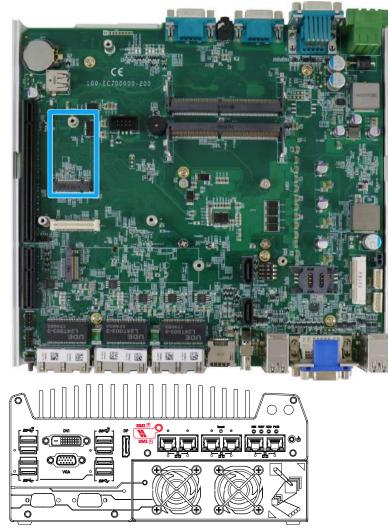


The system has an M.2 2242 slot (indicated in **blue**) that works with dual SIM slots (4G + 3G) on the front panel (indicated in **red**). By installing a 3G or 4G M.2 module and SIM card, you can access the internet via the provider's network.

For wireless 3G/4G, SMA antenna apertures are located on front/ rear panels.

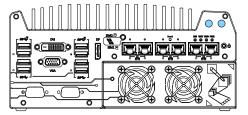

Front panel antennae opening

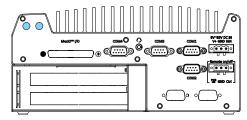


Rear panel antennae opening


1	11 21		75
Z Pin #		D:#	
1 Pin #	Signal -	Pin # 2	Signal +3V3
3	GND	4	+3V3
5	GND	6	FULL_CARD_POWER_OFF_N
5 7	USB D+	8	W_DISABLE_N
9	USB_D-	10	-
11	GND		
	nical Key		
21	-	20	-
23	-	22	-
25	-	24	-
27	GND	26	-
29	USB3.0-RX-	28	-
31	USB3.0-RX+	30	UIM1-RESET
33	GND	32	UIM1-CLK
35	USB3.0-TX-	34	UIM1-DATA
37	USB3.0-TX+	36	UIM1-PWR
39	GND	38	-
41	PERn0 / SATA-B+	40	UIM2-DET
43	PERp0 / SATA-B-	42	UIM2-DATA
45	GND	44	UIM2-CLK
47	PETn0 / SATA-A-	46	UIM2-RST
49	PETp0 / SATA-A+	48	UIM2-PWR
51	GND	50	PERST_N
53	REFCLKN	52	-
55	REFCLKP	54	-
57	GND	56 50	-
59 61	-	58	-
61 63	-	60 62	-
65	-	62 64	-
67	- RESET_N	66	UIM1_DETECT
69	CONFIG_1	68	-
71	GND	70	+3V3
73	GND	72	+3V3
75	-	74	+3V3

M.2 (B Key) Slot Pin Definition



2.6.5 SATA Ports

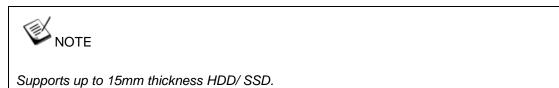

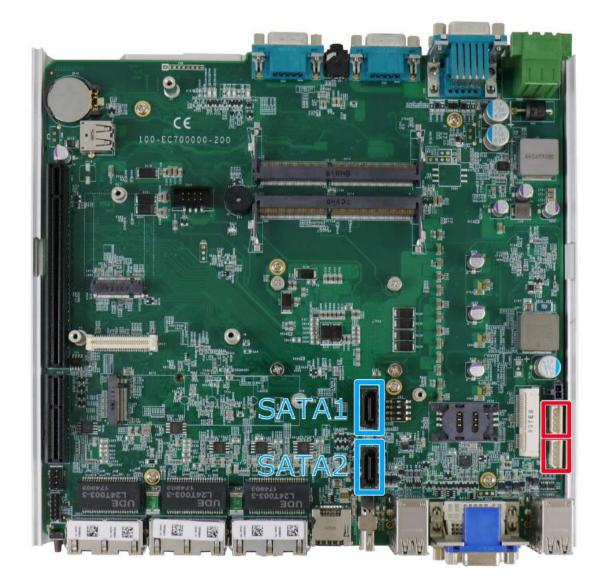

The system provides two SATA ports which support Gen3, 6 Gb/s SATA signals. Each SATA port (indicated in **blue**) features a 7-pin SATA connector and a 4-pin power connector.

The power connector (indicated in **red**) each accommodates a 2.5" HDD/ SSD in internal HDD bracket. Standard 22-pin SATA connectors are provided with the system. You may refer to the SATA Configuration section for SATA settings.



2.6.6 DIP Switch



The DIP switch (indicated in **blue**) should be already configured out of the factory. Users need only set the 4th DIP switch to ON for BIOS update and switch back it to the OFF position when BIOS upgrade has completed. The table below shows the system default DIP switch settings for reference purposes.


System	Default DIP switch setting	Enable BIOS upgrade
Nuvo-7160GC / Nuvo-7164GC	$ \begin{array}{c c} ON & DIP \\ \hline 1 & 2 & 3 & 4 \end{array} $	$ \begin{array}{c c} ON & DIP \\ \hline 1 & 2 & 3 & 4 \end{array} $
Nuvo-7166GC	$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	$ \begin{array}{c c} ON & DIP \\ \hline 1 & 2 & 3 & 4 \end{array} $
[



Changing any DIP switches to the ON or OFF position will result in extra detection time during the start up process.



2.6.7 On/ Off Ctrl & Status Output

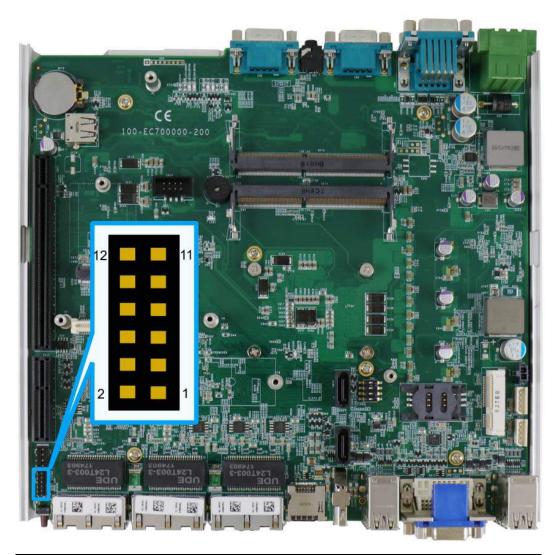

Pin#	Definition	Description
1	WDT_LED-	[Output] Watchdog timer indicator, flashing when Watchdog
2	WDT_LED+	timer is active
3	Standby Power-	[Output] Standby power indicator, on if DC power is applied
4	Standby Power+	and system is in S5 (standby) mode.
5	HDD-	[Output] Hard drive indicator, flashing when SATA hard
6	HDD+	drive is active.
7	Power-	[Output] System power indicator, on if system is turned on,
8	Power+	off if system is turned off.
9	Ctrl-	[Input] Remote on/off control, connects to an external
10	Ctrl+	switch to turn on/off the system (polarity is negligible).
11	IGN_LED-	[Output] Ignition control indicator, on if ignition control is on,
12	IGN_LED+	off if ignition control is off.




2.6.8 Internal USB 2.0 Port



The system's motherboard has an internal USB2.0 port on the PCBA. You can utilize this USB port to connect a USB protection dongle inside the chassis of the system.



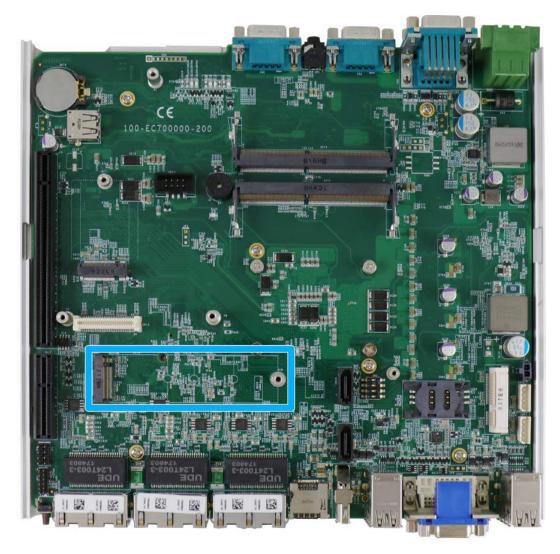

2.6.9 M.2 2280 (M Key) Slot for NVMe SSD or Optane[™] Memory

The system has a x4 PCIe M.2 2280 slot (also in compliance with SATA signal) for you to install an NVMe/ SATA SSD for the ultimate performance or an Intel[®] Optane[™] memory to accelerate the read/ write performances of traditional hard disk drive. An NVMe SSD offers exceptional performance over 2.5" SSDs while Intel[®] Optane[™] memory can dramatically boost your traditional hard disk drives' read/ write performances.



The M.2 slot will automatically detect and configure the slot to run PCIe or SATA signal depending on the installed device.

1	11 21		57 67	75
		m		
LL				
2	10 20			74
Pin #	Signal	Pin #	Signal	
1	GND	2	+3V3	
3	GND	4	+3V3	
5	PERN3	6	-	
7	PERP3	8	-	
9	GND	10	DAS/DSS_N	
11	PETN3	12	+3V3	
13	PETP3	14	+3V3	
15	GND	16	+3V3	
17	PERN2	18	+3V3	
19	PERP2	20	-	
21	GND	22	-	
23	PETN2	24	-	
25	PETP2	26	-	
27	GND	28	-	
29	PERN1	30	-	
31	PERP1	32	-	
33	GND	34	-	
35	PETN1	36	-	
37	PETP1	38	-	
39	GND	40	-	
41	PERn0 / SATA-B+	42	-	
43	PERp0 / SATA-B-	44	-	
45	GND	46	-	
47	PETn0 / SATA-A-	48	-	
49	PETp0 / SATA-A+	50	PERST_N	
51	GND	52	-	
53	REFCLKN	54	-	
55	REFCLKP	56	-	
57 Maaba	GND	58	-	
	nical Key	68		
67 69	- PEDET	68 70	SUSCLK	
71	GND	70	+3V3 +3V3	
73	GND	74	+3V3	
		/4		
75	GND	1		

M.2 (M Key) Slot Pin Definition





2.6.10 MezIO[™] Interface & Pin Definition


MezIO[™] is an innovative interface designed for integrating application-oriented I/O functions into an embedded system. It offers computer signals, power rails and control signals via a high-speed connector. MezIO[™] is also mechanically reliable benefited from its 3-point mounted mezzanine structure. A MezIO[™] module can leverage these signals to implement comprehensive I/O functions.

The system incorporates MezIOTM interface and universal mechanical design to accommodate Neousys' standard MezIOTM modules. For customers who want to develop their own MezIOTM module, Neousys provides MezIOTM design documents on a NDA basis. Please contact Neousys for further information



MezIO[™] Interface Pin Definition

MezIO[™] interface leverages FCI BergStak® board-to-board connector to provide interconnectivity of high-speed signals. The receptacle part on the PCBA is FCI 61082-063402LF while the plug part on the MezIO[™] module is FCI 61083-064402LF. Please refer to the following table for signal definition of its 60-pin connector.

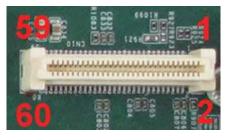

Function	Signal	Pin#	Pin#	Signal	Function
Description				Signal	Description
Reserved	Reserved	1	2	PCIE_TXP_0	PCIe data pair
Reserved	Reserved	3	4	PCIE_TXN_0	PCIe data pair
Reserved	Reserved	5	6	GND	Ground
Reserved	Reserved	7	8	PCIE_RXP_0	PCIe data pair
System S4 signal	SLP_S4#	9	10	PCIE_RXN_0	PCIe data pair
Ground	GND	11	12	CLK100_P_0	PCIe clock pair
Reserved	Reserved	13	14	CLK100_N_0	PCIe clock pair
Ground	GND	15	16	GND	Ground
Reserved	UID_LED	17	18	PCIE_TXP_1	PCIe data pair
Platform reset	PLT_RST#	19	20	PCIE_TXN_1	PCIe data pair
USB data pair	USBP5_N	21	22	PCIE_RXP_1	PCIe data pair
USB data pair	USBP5_P	23	24	PCIE_RXN_1	PCIe data pair
Ground	GND	25	26	GND	Ground
SMB bus	SMB_DATA	27	28	CLK100_P_1	PCIe clock pair
SMB bus	SMB_CLK	29	30	CLK100_N_1	PCIe clock pair
PCIe data pair	PCIE_TXP_3	31	32	GND	Ground
PCIe data pair	PCIE_TXN_3	33	34	PCIE_TXP_2	PCIe data pair
Ground	GND	35	36	PCIE_TXN_2	PCIe data pair
PCIe data pair	PCIE_RXP_3	37	38	GND	Ground
PCIe data pair	PCIE_RXN_3	39	40	PCIE_RXP_2	PCIe data pair
Power button	PWRBTN#	41	42	PCIE_RXN_2	PCIe data pair
Reserved	Reserved	43	44	RXD4	SIO COM4
PCH GPIO	GPIO_RISER3	45	46	TXD4	SIO COM4
PCH GPIO	GPIO_RISER2	47	48	RXD5	SIO COM5
PCH GPIO	GPIO_RISER1	49	50	TXD5	SIO COM5
Ground	GND	51	52	GND	Ground
3.3V power	P3V3	53	54	P1V8	1.8V power
3.3V power	P3V3	55	56	GND	Ground
5V power	P5V	57	58	P12V	12V power
5V power	P5V	59	60	P12V	12V power



3 System Installation

Before disassembling the system enclosure and installing components and modules, please make sure you have done the following:


- It is recommended that only qualified service personnel should install and service this product to avoid injury or damage to the system.
- Please observe all ESD procedures at all times to avoid damaging the equipment.
- Before disassembling your system, please make sure the system has powered off, all cables and antennae (power, video, data, etc.) are disconnected.
- Place the system on a flat and sturdy surface (remove from mounts or out of server cabinets) before proceeding with the installation/ replacement procedure.



3.1 Disassembling the System

To access system internal components, the system needs to be disassembled. To disassemble the system enclosure, you need to remove the Cassette module and screws on both I/O panels.

1. Turn the system upside-down and remove the four screws at the bottom of the Cassette module.

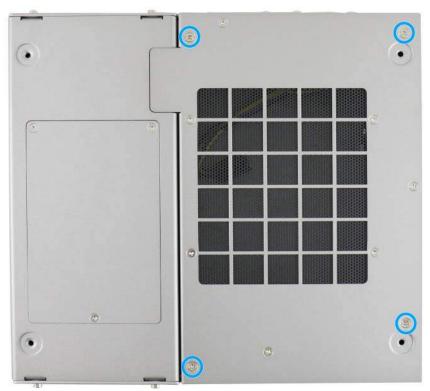

2. Gently wiggle and separate the Cassette module from the system.






3. On the rear I/O panel, remove the hexa-screws indicated below.



4. Remove the rear I/O panel.

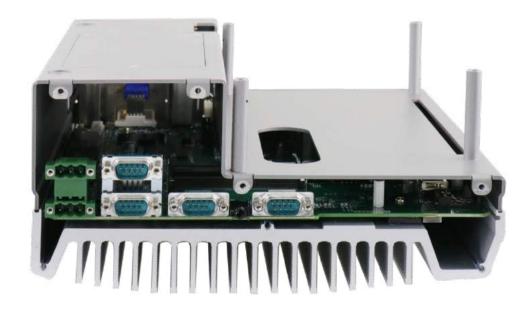







5. On the front I/O panel, remove the hexa-screws indicated below.

6. Remove the front I/O panel.

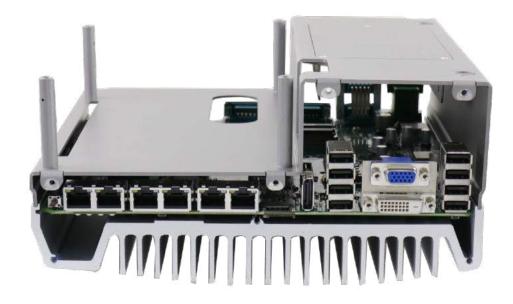

7. Gently lift the system's bottom panel.

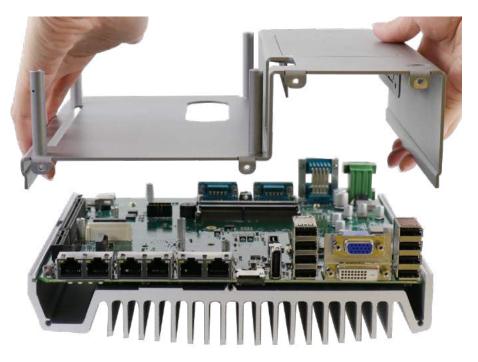

8. Once the bottom panel have been removed, you should have access to the system's internal I/O interfaces.






3.2 Installing Internal Components

3.2.1 CPU Installation Procedure

- 1. To install the CPU, you will need to separate the heatsink and the motherboard.
- 2. To do so, remove the nine screws indicated below (if you are installing the CPU for the first time, you need not remove the screws indicated in **red** as they are not yet installed and the screws can be found in the accessory box).

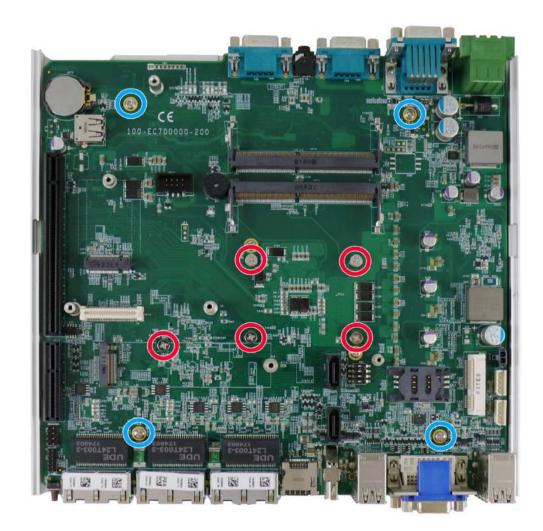



3. Gently separate the motherboard from the heatsink, you'll see the CPU socket protective cover, place finger tips underneath the sign "REMOVE" for leverage and gently lift the cover.





With the protective cover removed, please be careful when handling the motherboard. DO NOT touch the pins in the LGA socket!



4. Remove the CPU from its container/ tray. Match the two notches on the side to the protrusions in the socket, gently lower the CPU into the socket.




5. Locate the CPU retention bracket from the accessory box. Place the retention bracket on the CPU and hold it in place.






6. Turn the motherboard around and secure the bracket by tightening two M3 P-head screws.

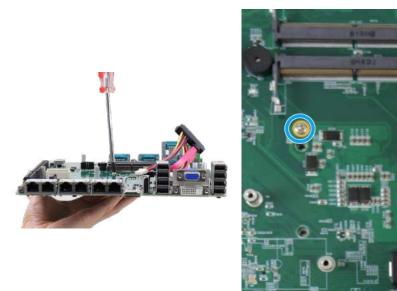


Hold CPU bracket firmly and turn the motherboard around

Secure two M3 P-head screws

7. Remove all thermal pads' protective films on the heatsink.

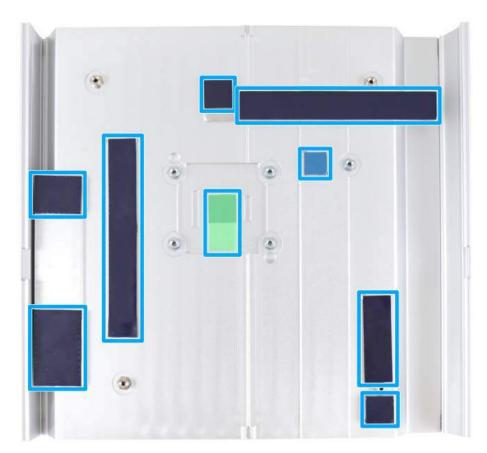


8. With the four motherboard standoffs aligned, gently lower the motherboard onto the heatsink and secure the four screws. If you need to install other components, please refer to respective sections.

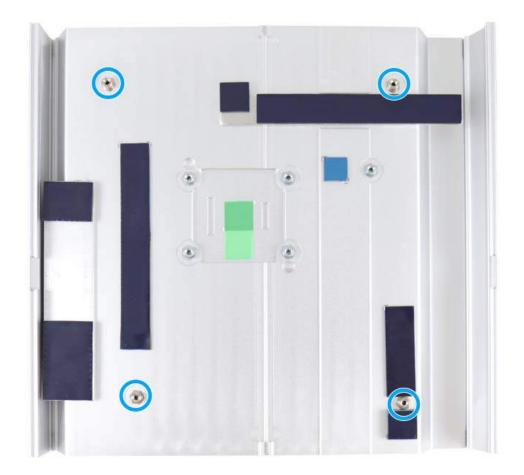



9. Once the motherboard has been installed, you're ready to secure the five screws that help the heatsink apply pressure to the CPU/ chipset die. You'll want to apply even pressure to the corners by gradually tightening each screw. Please refer to the recommended order when tightening the screws.

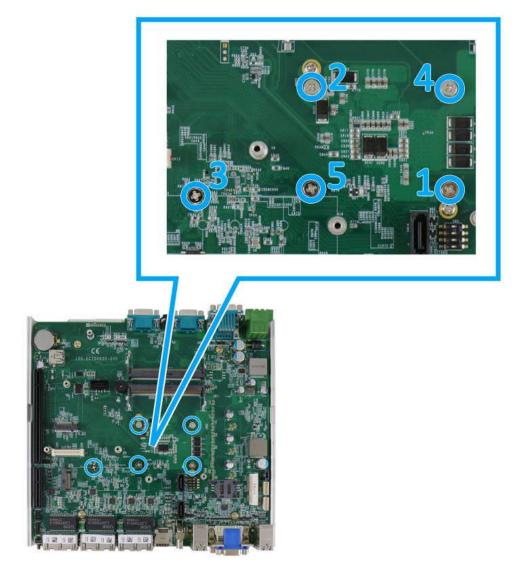

- 10. Reinstall the system panels and Cassette module when done.
- 11. If you need to install other components, please refer to respective sections.



3.2.2 DDR4 SO-DIMM Installation

There are two SO-DIMM memory slots (indicated in **blue**) on the motherboard that supports a total maximum of 64GB DDR4-2666. Please follow the procedures below to replace or install the memory modules.

- 1. Please refer to the section "Disassembling the System".
- 2. Locate the SODIMM memory module slots on the motherboard.



3. To install the memory module, insert gold fingers into the slot at 45-degree angle, push down on the memory module to clip the module into position.





4. Push the memory module down until it is clipped-in.




- 5. Repeat steps 3 and 4 to install the other module.
- 6. <u>Reinstall the system enclosure</u> and panel when done.
- 7. If you need to install other components, please refer to respective sections.



3.2.3 mPCle Module, Mini-SIM (2FF) Card and Antennae Installation

The system has an mPCIe slot (indicated in **blue**)coupled with Mini-SIM socket (indicated in **red**)for installing 3G/ 4G module. For installation, please refer to the following instructions.

- 1. Please refer to the section "Disassembling the System".
- 2. Locate the mPCIe and SIM card slots on the motherboard.

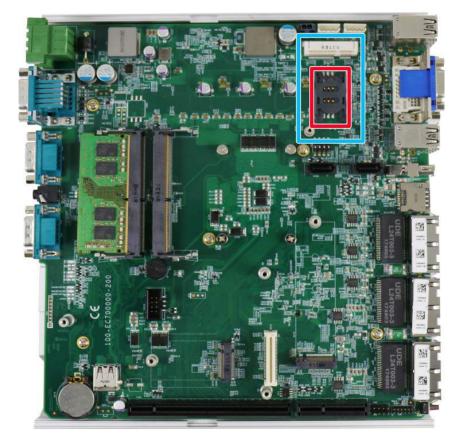

 Before installing the mPCIe module, you need to insert the Mini-SIM card. Slide the SIM slot holder and lift the SIM card holder. Insert the Mini-SIM card (pins facing up), shut the SIM holder and slide it to lock the SIM card in-place.




Slide and lift SIM card holder



Insert Mini-SIM card with pins facing up



4. Secure the Mini-SIM card by sliding the holder.

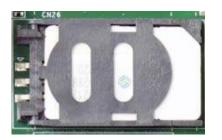

5. Insert the mPCIe module on a 45 degree angle into the mPCIe slot and secure the module.






Insert on 45 degree angle

Secure the module

6. Clip on the IPEZ-to-SMA cable to the module and secure the antenna to the front or rear panel. Please refer to the module's manual for clip-on connection.



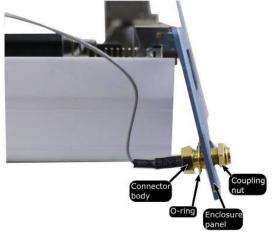

Clip on IPEZ-to-SMA cable

Secure antenna to rear panel


- 7. <u>Reinstall the system enclosure</u> and panel when done.
- 8. If you need to install other components, please refer to respective sections.



3.2.4 M.2 2242 (B Key) Module and Micro-SIM (3FF) Card Installation

The system has an M.2 slot (indicated in **blue**) for installing 3G/4G or a WiFi module that can be coupled with dual Micro-SIM card slots (indicated in **red**). For installation, please refer to the following instructions.

- 1. Please refer to the section "Disassembling the System".
- 2. Locate the M.2 2242 (B Key) and SIM card slots on the motherboard.

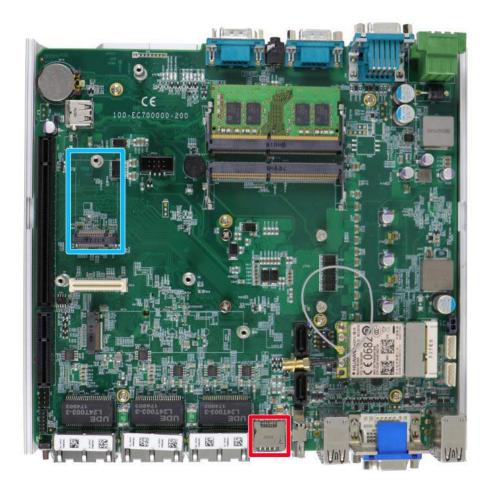

3. Insert the module on a 45 degree angle.






4. Gently press down and secure the module with an M2.5 P-head screw.



 Clip on the IPEZ-to-SMA cable to the module and secure the antenna to the front or rear panel. Please refer to the module's manual for clip-on connection. If you need to install other components, please refer to respective sections.

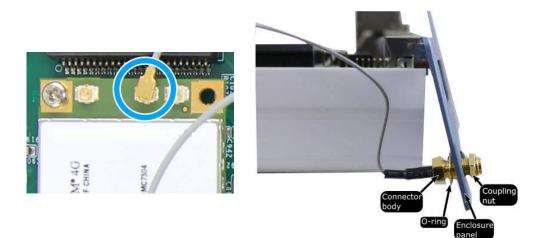


Clip on IPEZ-to-SMA cable

Secure antenna to rear panel

- 6. With the motherboard exposed, the SIM card is inserted with the gold fingers facing downward. If you are inserting the SIM card with the system upright (heatsink fins upwards), the gold fingers should be facing upward. The SIM socket is a push-push type. The push-push mechanism means the SIM card is push-to-install and push-to-retrieve
- 7. <u>Reinstall the system enclosure</u> and panel when done.
- 8. If you need to install other components, please refer to respective sections.



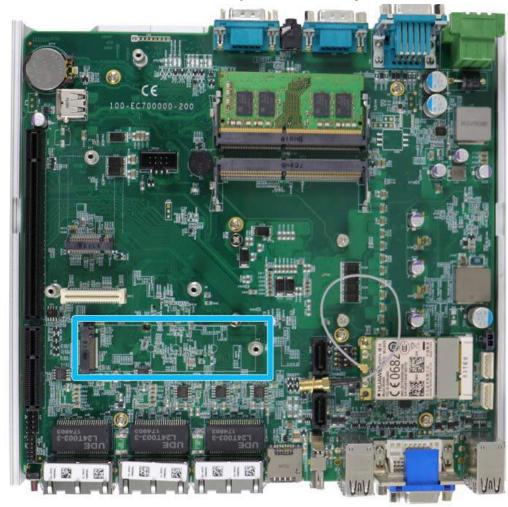

3.2.5 M.2 2280 NVMe SSD or Intel[®] Optane[™] Memory Installation

The system has a x4 PCIe M.2 2280 slot for you to install an NVMe SSD for the ultimate performance or an Intel® Optane[™] memory to accelerate the read/ write performances of traditional hard disk drive. An NVMe SSD offers exceptional performance over 2.5" SSDs while Intel® Optane[™] memory can dramatically boost your traditional hard disk drives' read/ write performances. For installation, please refer to the following instructions.

- 1. Please refer to the section "<u>Disassembling the System</u>", you may not need to completely dismantle the system to gain access to the M.2 slot.
- 2. Insert the module on a 45 degree angle.




3. Gently press down and secure the module with an M2.5 P-head screw.





- 4. <u>Reinstall the system enclosure</u> and panel when done.
- 5. If you need to install other components, please refer to respective sections.
- 6. Please refer to the section <u>Intel[®] Optane[™] Memory BIOS Setup and Driver Installation</u> for traditional hard drive acceleration.



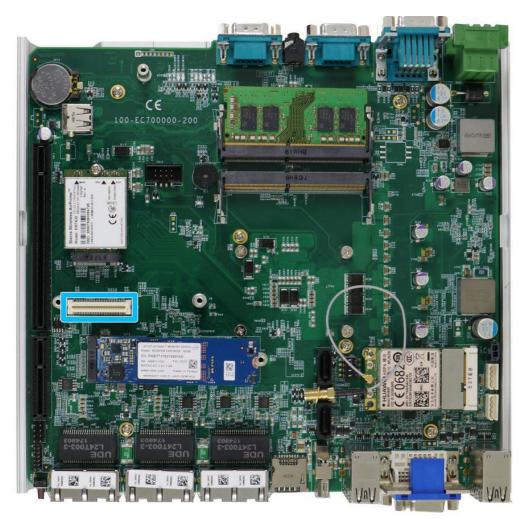

3.2.6 MezIO[™] Module Installation (Optional)


MezIO[™] is an innovative interface designed for integrating application-oriented I/O functions into an embedded system. It offers computer signals, power rails and control signals via a high-speed connector. MezIO[™] is also mechanically reliable benefited from its 3-point mounted mezzanine structure. A MezIO[™] module can leverage these signals to implement comprehensive I/O functions.

The system incorporates MezIO[™] interface and universal mechanical design to accommodate Neousys' standard MezIO[™] modules. For customers who want to develop their own MezIO[™] module, Neousys provides MezIO[™] design documents on a NDA basis. Please contact Neousys for further information.

 Please refer to the section "<u>Disassembling the System</u>", you may not need to completely dismantle the system to gain access to the MezIOTM interface.



2. The MezIOTM module is secured by the three stand-mounts indicated in the illustration below..

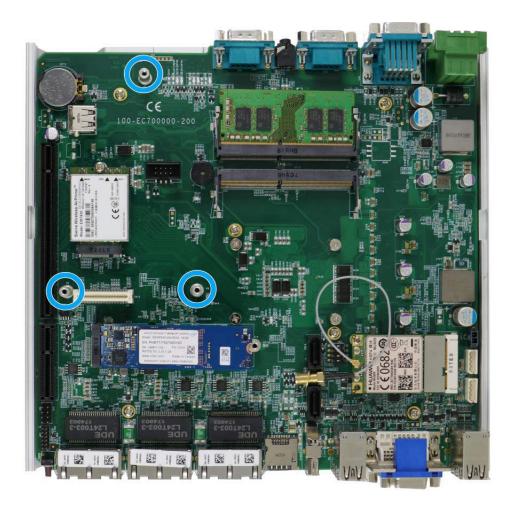



3. Gently lower the MezIO[™] module onto the three stand-mounts while matching the MezIO[™] interface. Secure the module using the supplied screws.



- 4. <u>Reinstall the system enclosure</u> and panel when done.
- 5. If you need to install other components, please refer to respective sections.



3.2.7 HDD/ SSD Installation



Supports up to 15mm thickness HDD/ SSD.



The system has two SATA ports (indicated in **blue**) and two four pin power connectors (indicated in **red**). The SATA and power cables should already be connected on the motherboard so users only need to install the HDD/ SSD. Please refer to the following instructions on how to install 2.5" SATA HDD/SSD.

1. Turn the system upside-down and remove the three screws indicated in the illustration below and lift the tray out of the system.





2. Take the HDD/ SSD thermal pad out of the accessory box and place it in the middle of the tray. Remove the protective film covering the HDD/ SSD thermal pad.



 Place the HDD/ SSD (with labels facing up) and match the SATA connector end to the side with two screw holes (indicated in blue), secure the HDD/ SSD with the supplied flathead screws (4 per drive).



4. At the tray opening, you should be able to locate the 22-pin SATA cable, connect it to the installed HDD/ SSD.





5. Gently put the tray back into the system with the connector side being inserted into the system first and secure the tray with three screws.




6. If you need to install other components, please refer to respective sections.



3.2.8 Ethernet/ PoE+ Port Panel Screw Fix

The system's RJ45 Ethernet ports have panel screw fix holes (indicated in **blue circles**) for a firm cable connection.

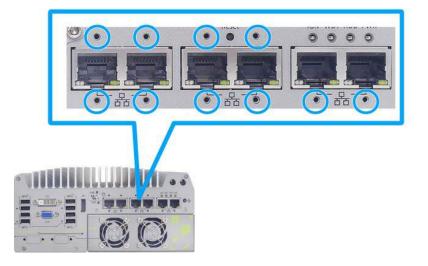

1. To install and make use to the panel screw fix connection, you must acquire panel screw fix cables such as the cable shown below.



2. Simply insert the RJ45 connector into the RJ45 port and secure the top and bottom screws using your fingers or a screw driver.





Ports 5 and 6 have only the bottom panel screw fix hole.



3.3 Nuvo-7160GC Graphics Card Installation

To reduce the risk of damage, **DO NOT** remove the graphics card from the antistatic bag before it is ready to be installed into the Cassette module!



The Cassette module provides a separated compartment to accommodate an add-on card. It compartmentalizes the heat generated and effectively manages thermal conditions of both the system and the add-on card. The modular design reduces the complexity of installing and replacing the add-on card in the fanless controller. The mechanical design creates a sealed wind tunnel to bring in cold air to the GPU and expels hot air via a system fan to offer the system extreme stability and reliability. To install a PCIe graphics card into the Cassette module, please refer to the following procedure:

- 1. Turn the system upside-down and remove the four screws.



2. Gently wiggle the Cassette module and separate it from the system enclosure.



3. Remove the screws to open the Cassette cover.





4. Remove the bezel cover(s).



5. Attach the three rubber stands (provided in the accessory box) to the positions indicated on the back of the graphics card and one (provided in the accessory box) on the inside of the Cassette module's cover.





3 rubber stands on back of graphics1cardCard

1 rubber stand on the inside of Cassette module cover

6. Insert the graphics card into the PCIe slot while making sure the bezel is properly inserted into the notch, the card is secured in place with screw(s) and the 6-pin power is connected to the graphics card. A 6-pin to 8-pin cable is also provided and can be found in the accessory box.



7. If you need to remove the graphics card out of the Cassette module, remove the screws, disconnect the 6-pin connector and flip the white lever outwards to disengage the PCIe slot.





8. Once the graphics card has been installed, place and secure the cover back onto the Cassette module.



9. Gently lower the Cassette module onto the system, press firmly to ensure the PCIe slot is properly engaged and secure the Cassette module.





Lower Cassette module onto system

Secure Cassette with screws



3.4 Nuvo-7164GC/ Nuvo-7166GC Tesla Inference

Accelerator Installation

To reduce the risk of damage, **DO NOT** remove Tesla P4/ T4 from the antistatic bag before it is ready to be installed into the Cassette module!



The Cassette module provides a separated compartment to accommodate an NVIDIA[®] Tesla[®] P4/T4 inference accelerator. It compartmentalizes the heat generated and effectively manages thermal conditions of both the system and the inference accelerator. The modular design reduces the complexity of installing and replacing the NVIDIA[®] Tesla[®] P4/T4 inference accelerator in the fanless controller. The mechanical design creates a sealed wind tunnel to bring in cold air to the inference accelerator and expels hot air via a system fan to offer the system extreme stability and reliability. To install the inference accelerator into the Cassette module, please refer to the following procedure:

1. Turn the system upside-down and remove the four screws.







2. Gently wiggle the Cassette module and separate it from the system enclosure.

3. Remove the screws to open the Cassette cover.






4. Remove the Cassette module cover and bezel cover(s).




Nuvo-7164GC

Nuvo-7166GC

 When installing the Tesla inference accelerator, please remove the air tunnel (both Nuvo-7164GC/ Nuvo-7166GC) and bracket (Nuvo-7164GC only) by removing the screws shown below.

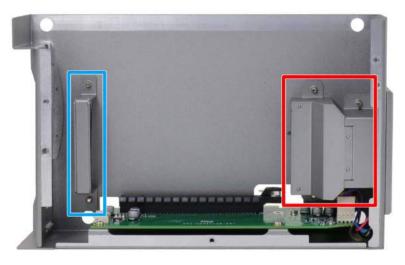

Bracket and air duct

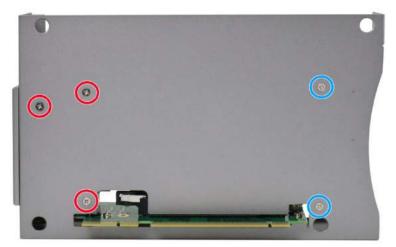

Remove air duct and bracket screws




6. Remove the Tesla P4/T4 inference accelerator from the static bag and insert it into the PCIe slot while making sure the bezel is properly inserted into the notch and make sure the fan's 4-pin connector to the PCB board.




Nuvo-7166GC

7. If you need to remove the graphics card out of the Cassette module, remove the screws securing the air duct/ bracket (if installed) and flip the white lever outwards to disengage the PCIe slot.

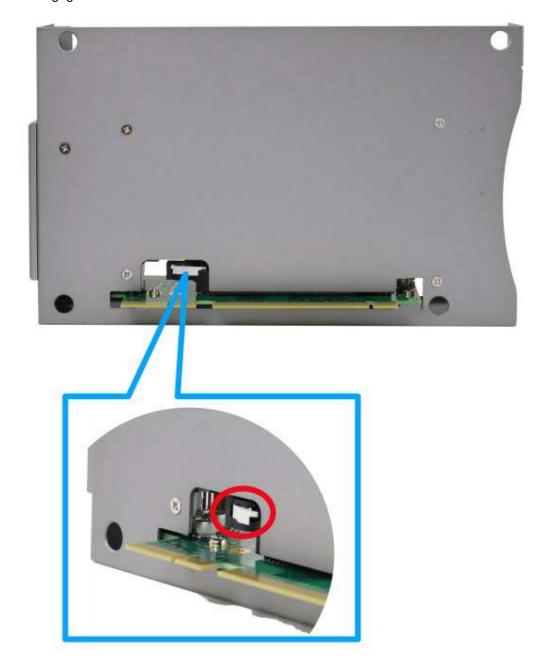



8. For Nuvo-7164GC and Nuvo-7166GC, secure **three screws** for the air duct and for Nuvo-7164GC, also secure **two screws** for the bracket, back into place.

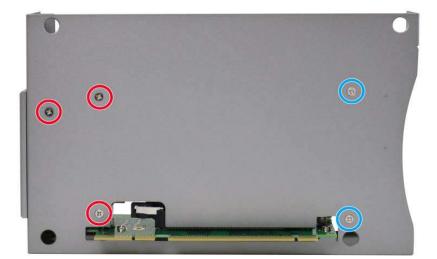



Nuvo-7164GC



Nuvo-7166GC



9. Once the graphics card has been installed, place and secure the cover back onto the Cassette module.



10. Gently lower the Cassette module onto the system, press firmly to ensure the PCIe slot is properly engaged and secure the Cassette module.






Lower Cassette module onto system

Secure Cassette with screws



3.5 Installing the System Enclosure

 To reinstall the system enclosure, the bottom panel on top of the motherboard while making sure both sides are inserted into the heatsink (indicated in blue).

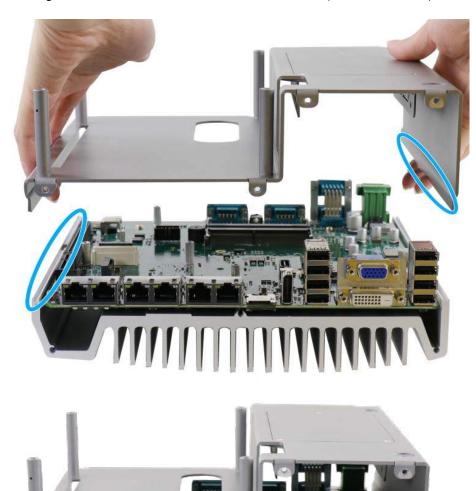





2. Install front/ rear panel and secure screws indicated in blue.

Install front panel and secure screws




Install rear panel and secure screws

3. Gently lower the Cassette module onto the system enclosure, press firmly to ensure the PCIe slot is properly engaged.



4. Secure the screws indicated to complete the enclosure installation process.

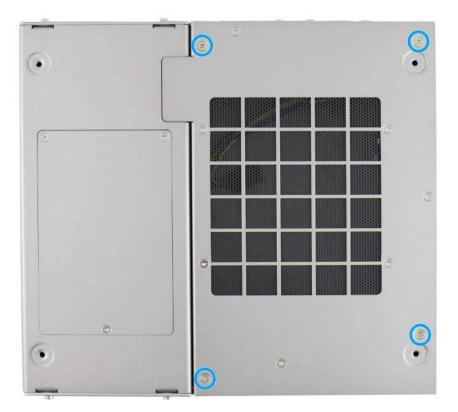



3.6 Wall Mount and Anti-vibration Damping Bracket Installation

The system ships with dedicated wall mount.




You will need to remove the four (4) rubber stands at the bottom of the enclosure if they have been attached.

3.6.1 Wall Mount Bracket Installation


To install the system as a wall mount device, please refer to the following instructions.

Take out the two wall mount brackets and four (4) M4 screws out of the accessory box.
 Fix the wall mount brackets to the system enclosure using M4 screws.

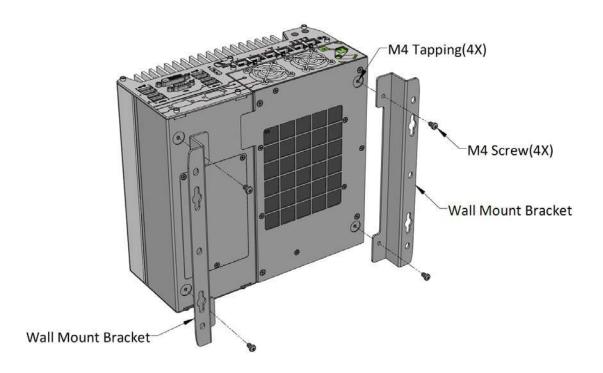





2. Place the system on a flat surface and secure it with screws or you can make use of the keyhole hangers to suspend the system on the wall for easy removal.

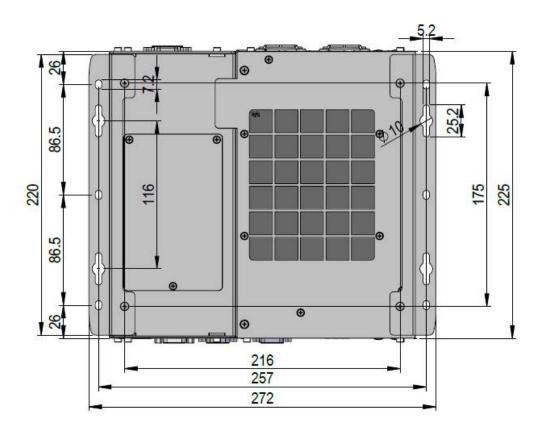

3. When wall mounting, place the heatsink fins perpendicular to the ground for better heat dissipation efficiency.

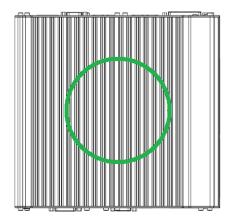

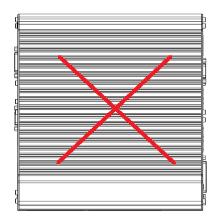




3.6.2 Anti-vibration Damping Bracket Installation (Optional)



You will need to remove the four (4) rubber stands at the bottom of the enclosure if they have been attached.

The optional patented anti-vibration damping bracket offers superior operating vibration resistance up to 1Grm with HDD or up to 5Grm with SSD. To install the bracket, please refer to the following installation procedure.

 Take out anti-vibration damping bracket, eight (8) M4 screws and eight (8) sleeves from the accessory box. Insert the M4 screws into the sleeves and through the anti-vibration grommets to secure the system to the bracket; and the bracket to a flat surface.

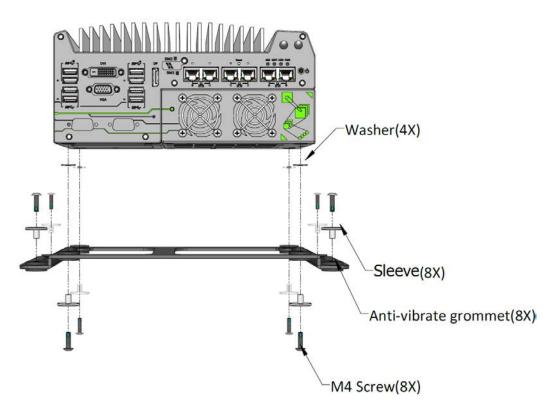

The damping bracket performs best when the system is installed horizontally.




3.7 **Powering On the System**

There are three methods to power on the system

- Pressing the power button
- Using an external non-latched switch by connecting to the remote on/ off plug
- Sending a LAN packet via Ethernet (Wake-on-LAN)

3.7.1 Powering On Using the Power Button

This is the simplest way to turn on your system. The power button on the front panel is a non-latched switch and behaves as the ATX-mode on/off control. With DC power connected, pushing the power button will turn on the system and the PWR LED indicator will light up. Pushing the button when system is on will turn off the system. If your operating system supports ATX power mode (i.e. Microsoft Windows or Linux), pushing the power button while the system is in operation will result in a pre-defined system behavior, such as shutdown or hibernation.

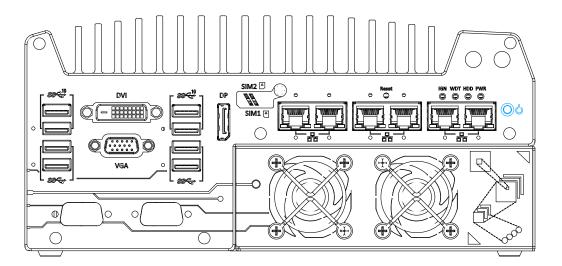




3.7.2 Powering On Using External Non-latched Switch

If your application demands the system to be placed inside a cabinet, you may use an external non-latched switch to power on/ off the system. The system provides a 3-pin "Remote On/ Off" plug for connecting a non-latched switch and acts as the ATX-mode power on/off control switch. The external non-latched switch acts exactly the same as the power button on the front panel. To setup and power on/ off the system using an external non-latched switch (ATX-mode), please follow the steps described below.

- 1. Acquire a non-latched switch with 3-pin plug.
- 2. Connect the non-latched switch to the Remote On/ Off 3-pin plug.

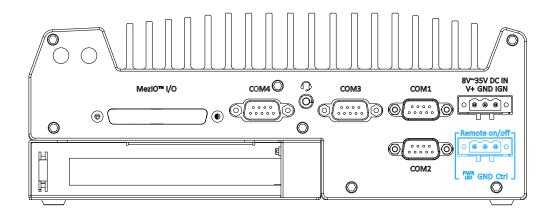


3. With DC power connected, pushing the power button will turn on the system and the PWR LED indicator will light up. Pushing the button when system is on will turn off the system. If your operating system supports ATX power mode (i.e. Microsoft Windows or Linux), pushing the power button while the system is in operation will result in a pre-defined system behavior, such as shutdown or hibernation.



3.7.3 Powering On Using Wake-on-LAN

Wake-on-LAN (WOL) is a mechanism to wake up a computer system from a S5 (system off with standby power) state via issuing a magic packet. The system's Wake-on-LAN compatible GbE port is shown below.

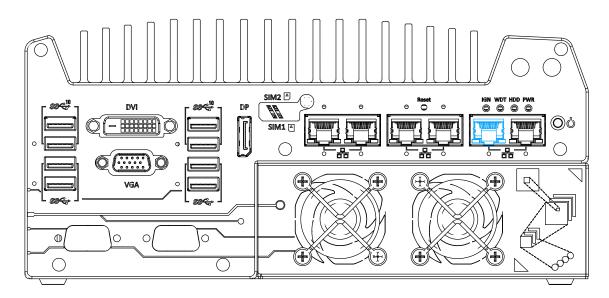

Please make sure the Intel chipset and Ethernet driver has been properly installed prior to setting up WOL function.

To enable WOL function, please set up WOL settings in the BIOS and in the operating system by follow the steps described below.

- 1. When the system boots up, press F2 to enter BIOS setup utility.
- 2. Go to the [Power]>[Wake On LAN] and set it to [Enabled].
- Press F10 to "Save changes and exit BIOS" and allow the system boot into the operating system.
- Once booted into the Windows system, press "Windows key + E", right-click on

"Network>Properties>Change adapter settings". Locate and double-click on the adapter Intel® I219 Gigabit Network Connection, click on Configure...

🖗 Ethernet	1 Properties		×	
Networking	Sharing			
Connect us	ing:			
📄 Intel	(R) Ethemet Connection (2) I219-LM			
	Config	ure		
This c <u>o</u> nne	ction uses the following items:		_	
🗹 🕂 🖸	ient for Microsoft Networks		^	
	e and Printer Sharing for Microsoft Networks			
🗹 📮 QoS Packet Scheduler				
Internet Protocol Version 4 (TCP/IPv4)				
Link-Layer Topology Discovery Mapper I/O Driver				
Microsoft Network Adapter Multiplexor Protocol				
Microsoft LLDP Protocol Driver			\mathbf{v}	



5. Click on the **Power Management** tab and check the following options. Click on OK when done.

Intel(R) Ethernet	t Connection (2	2) 1219-LM Prop	erties	×		
Teaming	VLANs	Driver	Details	Events		
General	Link Speed	Advanced	Power N	lanagement		
(intel)	Power Saver and Wake on LAN Options					
Power Saver O	•					
		without waking s		^		
	to NS requests w ficient Ethernet	vithout waking sy	stem	~		
Wake on LAN:				•		
Wake on	Magic Packet			^		
	Pattern Match		_			
✓ Wake on	Magic Packet fro	om power off stat	e	¥ .		
Respond to A	RP requests with	nout waking syste	em			
the system f	from sleep or hib	to ARP requests ernate. The syst still maintain its r	em can remair	nin 🔨		
				Ť		
			ОК	Cancel		

Magic Packet

The magic packet is a broadcast frame containing anywhere within its payload 6 bytes of all 255 (FF FF FF FF FF FF in hexadecimal), followed by sixteen repetitions of the target computer's 48-bit MAC address.

For example, NIC's 48-bit MAC Address is 78h D0h 04h 0Ah 0Bh 0Ch

DESTINATION SOURCE MISC

FF FF FF FF FF FF

78 D0 04 0A 0B 0C 78 D0 04 0A 0B 0C

78 D0 04 0A 0B 0C 78 D0 04 0A 0B 0C

78 D0 04 0A 0B 0C 78 D0 04 0A 0B 0C

78 D0 04 0A 0B 0C 78 D0 04 0A 0B 0C

78 D0 04 0A 0B 0C 78 D0 04 0A 0B 0C

- 78 D0 04 0A 0B 0C 78 D0 04 0A 0B 0C
- 78 D0 04 0A 0B 0C 78 D0 04 0A 0B 0C
- 78 D0 04 0A 0B 0C 78 D0 04 0A 0B 0C

MISC CRC


There are some free tools available on Internet that can be used to send a magic packet. Please refer to the following link to understand more about <u>Magic Packet</u>.



4 System Configuration

4.1 BIOS Settings

The system is shipped with factory-default BIOS settings meticulously programmed for optimum performance and compatibility. In this section, we'll illustrate some of BIOS settings you may need to modify. Please always make sure you understand the effect of change before you proceed with any modification. If you are unsure of the function you are changing, it is recommended to change one setting at a time to see its effect(s).

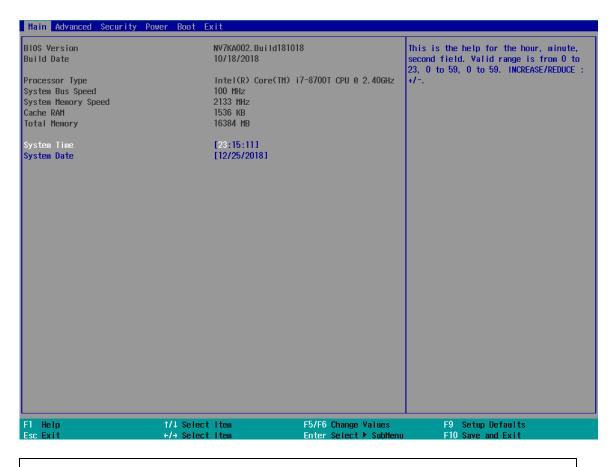

NOTE NOTE

Not all BIOS settings will be discussed in this section. If a particular setting/ function you are after requires specific BIOS settings but is not discussed in this section, please contact Neousys Technical Support staff.



4.1.1 COM Port Configuration

The system's <u>COM1/ COM2</u> ports support RS-232 (full-duplex), RS-422 (full-duplex) and RS-485 (half-duplex) mode. You can set the COM1 operating mode via BIOS settings. Another option in BIOS called "*Slew Rate*" defines how sharp the rising/falling edge is for the output signal of COM1. For long-distance RS-422/ 485 transmissions, you may set the "*Slew Rate*" option as "High" to improve signal quality. For RS-422/485 communication, the "*RS-422/ 485 Termination*" option determines whether to enable/disable internal termination of RS-422/485 transceiver according to your wiring configuration (e.g. with or without external termination).

Advanced			
Peripheral Configuration			
COH1 HS Mode Set COH1 as Slew Rate RS-422/485 Termination	<enab i<br="">O i sab «RS-23 <low» <d i="" sab<="" th=""><th>led> 2></th><th></th></d></low» </enab>	led> 2>	
COH2 HS Hode Set COH2 as Slew Rate RS-422/485 Termination	<enab i<br=""><d i="" sab<br=""><rs-23 <low> <d i="" sab<="" th=""><th>led> 2></th><th></th></d></low></rs-23 </d></enab>	led> 2>	
COM3 HS Mode	<enab i<br=""><d i="" sab<="" td=""><td>led></td><td></td></d></enab>	led>	
COM4 HS Mode	<enabl <disab< td=""><td></td><td></td></disab<></enabl 		
COM5 (for Mezl0) HS Mode	<enab i<br=""><d i="" sab<="" td=""><td></td><td></td></d></enab>		
COM6 (for Mezl0)	<d i="" sab<="" td=""><td>led></td><td></td></d>	led>	
HD Audio	<enab i<="" td=""><td>ed></td><td></td></enab>	ed>	
F1 Help Esc Exit	1/↓ Select Item		nange Values ≥lect ▶ SubMenu

To set COM port operating mode:

- 1. Press F2when the system boots up to enter the BIOS setup utility.
- 2. Go to [Advanced] \rightarrow [Peripheral Configuration].
- 3. Set the [Set COM1 Mode as] option to the desired mode.
- 4. Once set, press **F10** to save setting and exit.



4.1.2 COM Port High Speed Mode

The high speed mode of each COM port effectively allows for the port's baud rate generator to operate at 8x the speed with an effective baud rate of 921,600 bps (115,200 x 8). Please refer to the following instructions on how to enable the high speed mode for your COM port (COM1 used as an example).

Advanced			
Peripheral Configuration			Enable/Disable high-speed mode for COM1.
СОН1	<enabled></enabled>		When enabled, input clock for baud rate generator is multiplied by 8.
HS Mode	<disabled></disabled>		Consequently baud rate configured in
Set COM1 as	<rs-232></rs-232>		user's application will actually operate
Slew Rate			at 8x speed. This option allows a
RS-422/485 Termination	<disabled></disabled>		maximal baud rate of 921,600 bps
R5 4227400 Termination	ZD129D1605		(115, 200 x 8) for COM1.
COM2	<enabled></enabled>		,
HS Mode	<disabled></disabled>		
Set COM2 as	<rs-232></rs-232>		
Slew Rate	<low></low>		
RS-422/485 Termination	<disabled></disabled>		
соиз	<enabled></enabled>		
HS Mode	<disabled></disabled>	HS Mode	
COM4	<enabled></enabled>	Disabled	
HS Mode	<disabled></disabled>	Enabled	
COM5 (for Mez10)	<enab led=""></enab>		
HS Mode	<d i="" led="" sab=""></d>		
COM6 (for Mez10)	<d i="" led="" sab=""></d>		
HD Audio	<enabled></enabled>		
F1 Help 1/4 :	Select Item	F5/F6 Change Values	F9 Setup Defaults
Esc Exit +/+ :	Select Item	Enter Select ► SubMenu	

To set COM port high speed mode:

- 1. Press **F2** when the system boots up to enter the BIOS setup utility.
- 2. Go to [Advanced] > [Peripheral Configuration].
- 3. Enable or set the [Set COM1 Mode as] option to the desired mode.
- 4. Highlight **[HS Mode]** and press ENTER to bring up options, highlight **[Enable]** and press ENTER.
- 5. Once set, press **F10** to save setting and exit.



4.1.3 Delay for PEG Initialization

This setting offers delay in milliseconds for PEG port initialization and PCI enumeration. By increasing the delay value, it may eliminate compatibility issue(s) with some PCIe add-on cards.

Advanced			
PEG Port Configuration			Delay in milli-seconds for PEG port
x16 PEG Port Enable Root Port Max Link Speed	Not Present <enabled> <auto></auto></enabled>		initialization and PCI enumeration. Increasing this value may help to eliminate compatibility issue with some PCIe add-on cards.
Delay for PEG Init	[100]		
		Yes] [No]	
F1 Help 1/J	Select Item	F5/F6 Change Values	F9 Setup Defaults
	Select Item	Enter Select ► SubMenu	F10 Save and Exit

To set PEG delay in milliseconds:

- 1. When system boots up, press F2 to enter BIOS setup utility.
- Go to [Advanced] > [System Agent (SA) Configuration] > [PEG Port Configuration] > [Delay for PEG Init] and press ENTER.
- 3. A small window appears and you may enter a maximum delay value of up to 30,000ms.
- 4. When done, press F10 to "Exit Saving Changes"



4.1.4 SATA Configuration

The SATA controller of your system supports two (2) operating modes: AHCI and Intel RST Premium With Intel Optane System Acceleration mode. The AHCI mode, which exposes SATA's advanced capabilities such as hot swapping and native command queuing, is supported in several later version of operating systems. The Intel RST Premium With Intel Optane System Acceleration mode allows the user to greatly accelerate SATA hard drive read/ write speeds by installing an Optane memory into the M.2 slot. Please refer to the section "Intel RST Premium With Intel Optane System Acceleration" for details.

Advanced				
SATA And RST Configuration				Determines how SATA controller(s) operate.
SATA Controller(s) SATA Mode Selection		< Enabled> <ahcl></ahcl>		
SATA Port #1 Port Enable/Disable SATA Device Type		Empty <enabled> <hard disk="" driv<="" th=""><th>e></th><th></th></hard></enabled>	e>	
SATA Port #2 Port Enable/Disable Hot Plug SATA Device Type		Empty <enabled> <disabled> <hard disk="" driv<="" td=""><td>e></td><td></td></hard></disabled></enabled>	e>	
mSATA Port Enable/Disable SATA Device Type	AHCI	SATA	Mode Selection	
M.2 2242 B-key Port Enable/Disable SATA Device Type		ST Premium With Solid State Dr	Intel Optane System Accele ive>	ration
H.2 2280 H-key Port Enable/Disable SATA Device Type		Empty <enabled> <solid dr<="" state="" td=""><td>ive></td><td></td></solid></enabled>	ive>	
F1 Help Esc Exit	1/↓ Select +/+ Select		F5/F6 Change Values Enter Select ► SubMenu	F9 Setup Defaults F10 Save and Exit

Recommended SATA controller mode settings:

- If you're using Windows 10, or Linux with kernel 4.15.18 or later, you can select **AHCI** mode for better performance.
- If you are looking for faster hard drive read/ write performance, please install an SSD (M.2, mPCIe, SATA) or install an Intel[®] Optane[™] memory for hard drive acceleration.



To set SATA controller mode:

- 1. When system boots up, press F2 to enter BIOS setup utility.
- 2. Go to [Advanced] > [SATA Configuration].
- 3. Highlight the SATA, mSATA or M.2 port you wish to set and press ENTER to bring up setting options. Scroll to and highlight the setting you wish to set and press ENTER.

F1 Help Esc Exit	1/↓ Select +/+ Select		F5/F6 Change Values Enter Select ► SubMenu	F9 Setup Defaults F10 Save and Exit
1.2 2280 M-key Port Enable/Disable SATA Device Type		Empty ≪Enabled> ≪Solid State Dr	rive>	
1.2 2242 B-key Port Enable/Disable SATA Device Type		Empty <enabled> <solid dr<="" state="" td=""><td>rd Disk Drive Iid State Drive rive></td><td></td></solid></enabled>	rd Disk Drive Iid State Drive rive>	
I <mark>SATA</mark> Port Enable/Disable SATA Device Type		<solid stat<="" td=""><td>SATA Device Type</td><td></td></solid>	SATA Device Type	
SATA Port #2 Port Enable/Disable Hot Plug SATA Device Type		Empty <enabled> <disabled> <hard disk="" driv<="" td=""><td>lê></td><td></td></hard></disabled></enabled>	lê>	
SATA Port #1 Port Enable/Disable SATA Device Type		Empty <enabled> <hard disk="" driv<="" td=""><td>/e></td><td></td></hard></enabled>	/e>	
SATA Controller(s) SATA Mode Selection		<enabled> <ahcl></ahcl></enabled>	X	
SATA And RST Configuration	1			Identify the SATA port is connected to Solid State Drive or Hard Disk Drive

- 4. Repeat step 3 to set other SATA ports.
- 5. Press F10 to "Exit Saving Changes".




4.1.5 Fan Control Configuration



Nuvo-7160GC supports fixed and auto fan speed settings. Nuvo-7164GC and Nuvo-7166GC support fixed fan speed setting, only!

The fan control configuration allows users to set the fan operation mode to auto or fixed speeds operation. The auto mode configuration also offers minimum temperature setting to trigger the fan and the maximum temperature setting before the fan operates at 100% rotation speed.

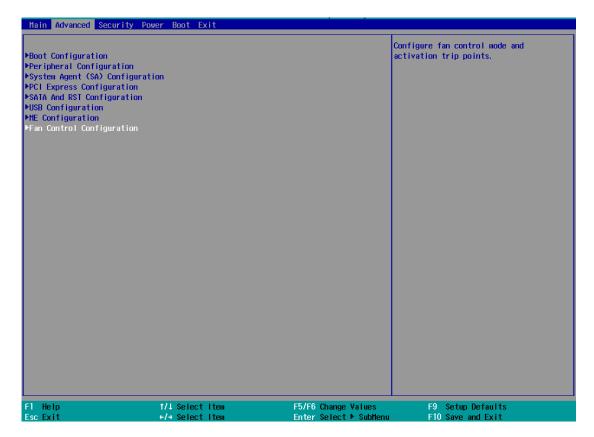



To set Fan Control Configuration to Auto mode (Nuvo-7160GC only):

- 1. When system boots up, press F2 to enter BIOS setup utility.
- 2. Go to [Advanced] > [Fan Control Configuration] and press ENTER.
- 3. To set auto fan control, highlight [Fan Control Mode] and press ENTER, highlight [Auto]

Advanced			
Fan Control Configuration			Select fan control mode. In Auto mode, fan speed is automatically controlled
Fan Control Mode	<auto></auto>		according to temperature sensor reading. For Nuvo-71646C, Fixed Speed mode shall
Fan Start Trip Point Fan Max. Trip Point	[30] [60]		be used.
		Fan Control Mode Auto Fixed Speed	
F1 Help Esc Exit	1/↓ Select Item +/→ Select Item	F5/F6 Change Values Enter Select ▶ SubMenu	F9 Setup Defaults F10 Save and Exit



- 4. Use the up/ down arrow keys to highlight Fan Start Trip Point or Fan Max. Trip Point and press ENTER, a window appears and you may enter the temperature in degree Celsius.
 - Fan Start Trip Point: The minimum temperature which the fan being to operate
 - Fan Max. Trip Point: The maximum temperature where the fan begins to operate at 100% rotation speed

Advanced			
Fan Control Configuration			Specify tht trip point in degrees
Fan Control Mode	<auto></auto>		Celsius to start the fan. Fan speed is automatically controlled between start
Fan Start Trip Point	[30]		and max. trip point according to reading of on-board temperature sensor.
Fan Max. Trip Point	[60]		
		[Yes] [No]	
	1/↓ Select Item +/→ Select Item	F5/F6 Change Values Enter Select ► SubMenu	F9 Setup Defaults F10 Save and Exit

5. When done, press F10 to "Exit Saving Changes".



To set Fan Control Configuration to Fixed Speed mode:

- 1. When system boots up, press F2 to enter BIOS setup utility.
- 2. Go to [Advanced] > [Fan Control Configuration] and press ENTER.
- 3. To set auto fan control, highlight [Fan Control Mode] and press ENTER, highlight [Fixed Speed].

Advanced			
Fan Control Configuration			Select fan control mode. In Auto mode, fan speed is automatically controlled
Fan Control Mode	<auto></auto>		according to temperature sensor reading.
Fan Control Hode Fan Start Trip Point Fan Max. Trip Point	[30] [60] Far	n Control Mode	according to temperature sensor reading. For Nuvo-7164GC, Fixed Speed mode shall be used.
	Select Item Select Item	F5/F6 Change Values Enter Select ► SubMenu	F9 Setup Defaults F10 Save and Exit



- 4. Highlight **[Fan Speed]** and press ENTER.
- 5. A window appears and you may use the up/ down arrow keys to select between 20~100% as your fixed fan rotation speed.

Advanced			
Fan Control Configuration			ecify fan speed (20% ~ 100%) when it's nfigured in fixed speed mode.
Fan Control Mode	<fixed spe<="" th=""><th></th><th>ningureu in rixeu specu muue.</th></fixed>		ningureu in rixeu specu muue.
Fan Speed	<80%>	Fan Speed 20% 30% 40% 50% 60% 70% 80% 90% 100%	
F1 Help Esc Exit	1/↓ Select Item +/→ Select Item	F5/F6 Change Values Enter Select ► SubHenu	F9 Setup Defaults F10 Save and Exit

6. When done, press F10 to "Exit Saving Changes".



4.1.6 **TPM** Availability

Trusted Platform Module (TPM) is a hardware-based cryptoprocessor to secure hardware by integrating cryptographic keys into devices. The system is designed with on-board TPM 2.0 module. As TPM 2.0 requires 64-bit Windows 10 with UEFI boot mode, it is enabled in BIOS by default.

Main Advanced	Security	Power	Boot	Exit
Current TPM Devic TPM State TPM Active PCR Ha TPM Hardware Supp BIOS Supported Ha TrEE Protocol Ver TPM Availability TPM Operation Clear TPM	ash Algori ported Has ash Algori	h Algor	i thm	<tph (ftph)="" 2.0=""> All Hierarchies Enabled, UnOwned SHA256 SHA1, SHA256 SHA1, SHA256, SH3_256 <1.1> <available> <no operation=""> []</no></available></tph>
Supervisor Passwo	ord			Not Installed
Set Supervisor Pa	assword			TPH Availability Available Hidden
F1 Help Esc Exit			↓ Selec + Selec	ct Item F5/F6 Change Values ct Item Enter Select ▶ SubMenu

To enable TMP availability:

- 1. When system boots up, press F2 to enter BIOS setup utility.
- Go to [Security] > [TPM Availability], press ENTER to bring up Options, Available/ Hidden.
- 3. Highlight your selection, press ENTER and press F10 to "Exit Saving Changes".



4.1.7 Auto Wake on S5

When the system is set to operate in S5 state, the user can specify a time to turn on the system, daily or monthly.

Main Advanced Security Po	Poot D		
nami Auvanceu Security Po	wer BUUT E)	KIU	
CPU Configuration Power & Performance			
PoE Enable Vake on LAN Enable Vato Wake on S5 Wake on S5 Time		<enabled> <disabled> <by d:<br="" every="">[00:00:00]</by></disabled></enabled>	ay>
Power On after Power Failure		<\$5 - Power	0ff>
			Auto Wake on S5 Disabled By Every Day By Day of Honth
1 Help	1/↓ Select		F5/F6 Change Values
sc Exit	+/+ Select	Item	Enter Select 🕨 SubMenu

Value	Option	Description
Auto Wake on S5	Disabled	The system does not turn on when operating in state S5.
	By Every Day	The system turns on each day when operating in state S5. Specify the time of day.
	By Day of Month	The system turns on each month when operating in state S5. Specify the day and time.

Highlight your selection, press ENTER and press F10 to "Exit Saving Changes".



4.1.8 Power On After Power Failure Option

This option defines the behavior of System series when DC power is supplied.

	Power Boot Exit		
▶CPU Configuration			
Power & Performance			
PoE Enable	<enabled></enabled>		
Wake on LAN Enable Auto Wake on S5	<d i="" led="" sab=""> <d i="" led="" sab=""></d></d>		
Power On after Power Failur	e <\$5 - Power Off	>	
	Power Or	n after Power Failure	
	SO - Pow S5 - Pow	ier Un ier Off	
El lista	t/l Salaat Itaa		
	1/4 Select Item +/+ Select Item	F5/F6 Change Values Enter Select ▶ SubMenu	
F1 Help Esc Exit Value	←/→ Select Item		
Esc Exit	+/→ Select Item		upplied.
Esc Exit Value	+/+ Select Item Description System is powered o	Enter Select ▶ SubMenu	


To set "Power On after Power Failure" option:

- 1. When system boots up, press F2 to enter BIOS setup utility.
- 2. Go to [Power] > [Power On after Power Failure].
- 3. Scroll down to highlight [Power On after Power Failure], press ENTER to bring up setting options, S0 Power On or S5 Power Off, and press ENTER to select the setting.
- 4. Press F10 to "Exit Saving Changes".



4.1.9 **Power & Performance (CPU SKU Power Configuration)**

The system supports various 8th Gen Coffee Lake LGA1151 CPUs. A unique feature, "**SKU Power Config**" is implemented in BIOS to allow users to specify user-defined SKU power limit. Although the system is designed to have best thermal performance with CPUs of 35W TDP, you can install a 65W CPU and limit its SKU power (to 35W) to obtain more computing power. This feature gives you the flexibility of CPU selection and great balance between computing power and operating temperature range.

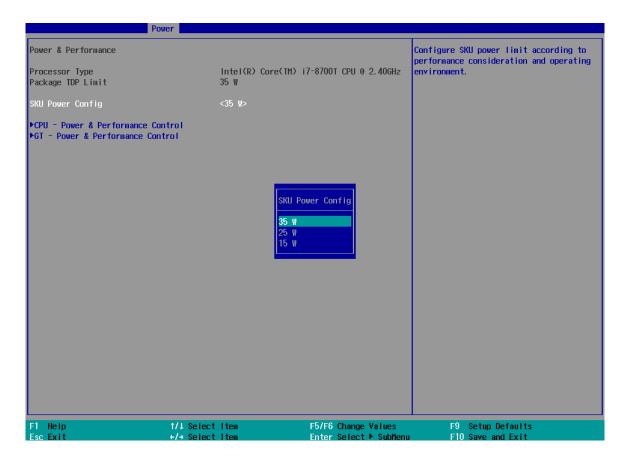

To configure the CPU SKU power limit:

- 1. When the system boots up, press F2 to enter BIOS setup utility.
- 2. Go to [Power] \rightarrow [Power & Performance].
- 3. Select a proper value of SKU power limit for [SKU Power Config] option.
- 4. Press F10 to "Exit Saving Changes".



4.1.10 Wake on LAN Option

Wake-on-LAN (WOL) is a mechanism which allows you to turn on your System series via Ethernet connection. To utilize Wake-on-LAN function, you have to enable this option first in BIOS settings. Please refer "<u>Powering On Using Wake-on-LAN</u>" to set up the system.



To enable/ disable "Wake on LAN" option:

- 1. When system boots up, press F2 to enter BIOS setup utility.
- 2. Go to [Power]> [Wake on LAN].
- 3. Press ENTER to bring up setting options, scroll to the setting you desire and press ENTER to set.
- 4. Press F10 to "Exit Saving Changes.



4.1.11 Boot Menu

The Boot menu in BIOS allows you to specify the system's boot characteristics by setting bootable device components (boot media) and method. Or, you may press F12 upon system start up and select a device you wish boot from.

	y Rower Boot Exit		
Boot Type Quick Boot Quick Boot Network Stack PXE Boot capability Add Boot Options ACP1 Selection USB Boot EF1 Device First Timeout Automatic Failover WDT for Booting PLogacy	<pre><dual boo<br=""><enabledb <disabledb <disabledb <cast5 <cast5 <cast5 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cast6 <cas< th=""><th>p b b</th><th>Legacy Boot Order Settings</th></cas<></cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast6 </cast5 </cast5 </cast5 </disabledb </disabledb </enabledb </dual></pre>	p b b	Legacy Boot Order Settings
FI Help	1/1 Select item	F5/F6 Change Values	and the second second second
Esc built	-/- Select Iten	Enter Select + Subflenu	F9 Setup Defaults F10 Save and Exit
Value			
	s/+ Select Iten	Enter Select + Subflenu	F10 Save and Exit
Value	Option	Enter Select > Sublem Description	t media listed are
Value	Option Dual Boot Type Legacy Boot	Description Both legacy and EFI boo approved as boot media Only legacy boot media	t media listed are
Value	Option Dual Boot Type Legacy Boot Type	Description Both legacy and EFI boo approved as boot media. Only legacy boot media.	t media listed are listed are approved as
Value	Option Dual Boot Type Legacy Boot	Description Both legacy and EFI boo approved as boot media. Only legacy boot media. Only UEFI boot media list	t media listed are listed are approved as
Value Boot Type	Option Dual Boot Type Legacy Boot Type UEFI Boot Type	Description Both legacy and EFI boo approved as boot media Only legacy boot media boot media. Only UEFI boot media list boot media.	t media listed are listed are approved as sted are approved as
Value	Option Dual Boot Type Legacy Boot Type	Description Both legacy and EFI boo approved as boot media Only legacy boot media boot media. Only UEFI boot media list boot media. The system starts up fast	t media listed are listed are approved as sted are approved as ster because BIOS skips
Value Boot Type	 */4 Select Hes Option Dual Boot Type Legacy Boot Type UEFI Boot Type Enabled 	Description Both legacy and EFI boo approved as boot media. Only legacy boot media boot media. Only UEFI boot media list boot media. The system starts up fast various hardware function	t media listed are bt media listed are listed are approved as sted are approved as ster because BIOS skips on tests
Value Boot Type	Option Dual Boot Type Legacy Boot Type UEFI Boot Type	Description Both legacy and EFI boo approved as boot media. Only legacy boot media boot media. Only UEFI boot media list boot media. The system starts up fast various hardware function The system starts up slop	FI0 Save and Fitt ot media listed are ot media listed are listed are approved as sted are approved as ster because BIOS skips on tests ower because BIOS goes
Value Boot Type	Option Dual Boot Type Legacy Boot Type UEFI Boot Type Enabled Disabled	Description Both legacy and EFI boo approved as boot media Only legacy boot media boot media. Only UEFI boot media list boot media. The system starts up fast various hardware function The system starts up slot through various hardware	F10 Save and Exit ot media listed are . listed are approved as sted are approved as ster because BIOS skips on tests ower because BIOS goes re functions tests
Value Boot Type Quick Boot	 */4 Select Hes Option Dual Boot Type Legacy Boot Type UEFI Boot Type Enabled 	Description Both legacy and EFI boo approved as boot media. Only legacy boot media boot media. Only UEFI boot media list boot media. The system starts up fast various hardware function The system starts up slop	F10 Save and Exit ot media listed are . listed are approved as sted are approved as ster because BIOS skips on tests ower because BIOS goes re functions tests
Value Boot Type Quick Boot	Option Dual Boot Type Legacy Boot Type UEFI Boot Type Enabled Disabled	Description Both legacy and EFI boo approved as boot media. Only legacy boot media boot media. Only UEFI boot media list boot media. The system starts up fast various hardware function The system starts up slot through various hardware The system is available	FI0 Save and Exit ot media listed are ot media listed are listed are approved as sted are approved as ster because BIOS skips on tests ower because BIOS goes re functions tests for network access




PXE Boot	Disabled	Only UEFI Network Stack is supported: Preboot	
capability		eXecution Environment (PXE) is not supported	
	Enabled	By enabling the PXE boot, one can choose to	
		boot via I219 Only/ I210 Only or All NICs.	
Add Boot Options	First	Newly detected boot media are placed at the top	
		of the boot order.	
	Last	Newly detected boot media are placed at the	
		bottom of the boot order.	
ACPI Selection	1.0B/ 3.0/ 4.0/	Advanced Configuration and Power Interface	
	5.0/ 6.0	allows the operating system to control system	
		power management	
USB Boot	Enabled	Allow boot from bootable USB devices.	
	Disabled	Does not allow boot from bootable USB devices	
EFI Device First	Enabled	Set to boot bootable EFI media first.	
	Disabled	Will not boot bootable EFI media first.	
Timeout	1, 2, 3, etc (in	Boot delay time in seconds to give the user time	
	seconds)	to activate the hotkey to access the BIOS	
Automatic	Enabled	Automatically checks for the next bootable	
Failover		device when the set default device fails.	
	Disabled	Will only boot from the designated device.	
WDT for booting	Disabled, 1, 3, 5,	WDT ensures a successful system boot by	
	10 (minutes)	specifying a timeout value	



4.1.12 Boot Type (Legacy/ UEFI)

The system supports both Legacy and Unified Extensible Firmware Interface (UEFI) boot modes. UEFI is a specification proposed by Intel to define a software interface between operating system and platform firmware. Most modern operating systems, such as Windows 10 and Linux support both Legacy and UEFI boot modes. The Legacy boot mode uses MBR partition for disk and VBIOS for video initialization, the UEFI boot mode uses GPT partition which supports greater than 2TB partition size and GOP driver for faster video initialization.

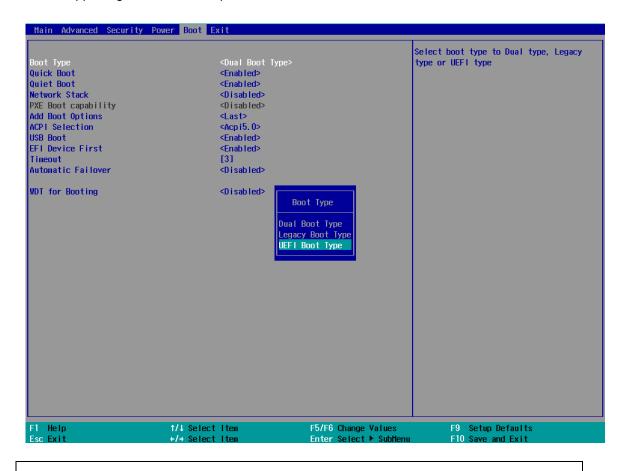

NOTE

If you choose Legacy mode, you will not be able to create disk partitions greater than 2TB or use TPM 2.0 function.

To configure Boot Type:

- 1. When system boots up, press F2 to enter BIOS setup utility.
- 2. Go to **[Boot]>[Boot Type]**, press Enter to bring up options, Dual Boot (Legacy+UEFI), Legacy Boot Type, UEFI Boot Type.
- 3. Highlight your selection and press Enter.
- 4. Press F10 to "Exit Saving Changes".



4.1.13 Position New Boot Device

The "Add Boot Options" allow you to determine whether a newly added device (eg. USB flash disk) is to boot as the first device to boot or the last in the boot sequence.

To set the newly-installed boot device as the first or last boot device:

- 1. Press **F2**when the system boots up to enter the BIOS setup utility.
- 2. Go to [Boot] > [Add Boot Options] menu.
- 3. Select [First] or [Last] for your newly-added boot device and press ENTER.

Main Advanced Security	Power Boot Ex	it	
Boot Type Quick Boot Quiet Boot Network Stack PXE Boot capability Add Boot Options ACP1 Selection USB Boot EFI Device First Timeout		<pre>CDual Boot Type> <enabled> <enabled> <disabled> <disabled> <disabled> <last> <acpi5.0> <enabled> <enabled> <iast> <i< td=""><td></td></i<></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></iast></enabled></enabled></acpi5.0></last></disabled></disabled></disabled></enabled></enabled></pre>	
Autonatic Failover WDT for Booting		<pre><d i="" led="" sab=""> </d></pre> Add Boo First Last Auto	ot Options
F1 Help Esc Exit	t/↓ Select +/+ Select		F5/F6 Change Values Enter Select ► SubHenu

4. Once set, press **F10** to save setting and exit.



4.1.14 Watchdog Timer for Booting

The watchdog timer secures the boot process by means of a timer. Once the timer expires, a reset command is issued to initiate another booting process. There are two options in BIOS menu, "*Automatically after POST*" and "*Manually after Entering OS*". When "*Automatically after POST*" is selected, the BIOS automatically stops the watchdog timer after POST (Power-On Self Test) OK. When "*Manually after Entering OS*" is selected, the user must stop the watchdog timer once booted into the OS. This guarantees the system can always boot into the OS, otherwise another booting process will be initiated. For information about programming watchdog timer, please refer to <u>Watchdog Timer & Isolated DIO</u>.

Main Advanced Security	Power Boot Exit	· · · · ·
Boot Type Quick Boot Network Stack PXE Boot capability Add Boot Options ACPI Selection USB Boot EFI Device First Timeout Automatic Failover WDT for Booting	حات حوال حوال حوال حوال حوال حوال حوال حوال	al Boot Type> abled> abled> sabled> sabled> sabled> sabled> sabled> sabled> wDT for Booting Disabled 1 Hin. 3 Hin. 5 Hin. 10 Hin.
F1 Help Esc Exit	1/1 Select Ite +/+ Select Ite	

To set the watchdog timer for boot in BIOS:

- 1. When system boots up, press F2 to enter BIOS setup utility.
- 2. Go to **[Boot]** menu.
- 3. Disable or select timeout value for **[WDT for Booting]** option.
- 4. Once you give a timeout value, the **[WDT Stop Option]** option appears. You can select *"Automatically after POST"* or *"Manually after Entering OS"*.
- 5. Press F10 to "Exit Saving Changes.



4.1.15 Legacy/ UEFI Boot Device

When you wish to set a designated boot device, you may set it as the first device to boot in Legacy or UEFI Boot Device setting. Or if you wish to manually select a boot device, you may do so by pressing F12 when the system boots up.



To set boot order for devices in UEFI Boot Device:

- 1. When system boots up, press F2 to enter BIOS setup utility
- 2. Go to [Boot] > [UEFI Boot Device]
- Highlight the device you wish to make boot order changes to and press F5/ F6 or +/ to change device boot order.

To select boot order for devices in Legacy Boot Device:


- 1. When system boots up, press F2 to enter BIOS setup utility
- Go to [Boot] > [Legacy Boot Device], you can choose the type of device to list by selecting "By Device or By Device Type".
- Highlight the device you wish to make boot order changes to and press F5/ F6 or +/ to change device boot order.



4.2 AMT Configuration

Intel® AMT (Active Management Technology) is a hardware-based technology for remotely managing target PCs via Ethernet connection. The system supports AMT function via its Ethernet port implemented with Intel I219-LM. Prior to using the AMT function to remotely control the system, you need to configure AMT password and network settings.

1. Connect Ethernet cable tol219-LM Ethernet port(indicated in blue).

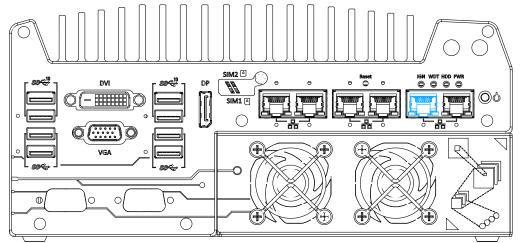

2. When the system boots up, press F10 to enter the MEBx configuration menu.

Intel(R) Management Engine BlOS Extension v11.0.0.0005/Intel(R) ME v11.0.25.3001 Copyright(C) 2003-15 Intel Corporation. All Rights Reserved				
MAIN MENU				
HEBx Login > Intel(R) ME General Settings > Intel(R) AMT Configuration MEBx Exit				
Intel(R) ME Password				
[†↓]=Move Highlight	[Enter]=Select Entry	[Esc]=Exit		

3. Highlight MEBx Login and press Enter, a prompt will appear asking for password. The default password is "admin". For further MEBx configuration details, please refer to Intel® MEBX User Guide.



4.3 RAID Configuration


To set up a RAID 0 or 1 volume in Legacy or UEFI mode, you need to have at least two hard drives or SSDs installed. The system supports RAID configurations in RAID 0 (striping) or RAID 1 (mirror) mode. Users can select the configuration that best suit their needs with RAID 0 (striping) mode offering better hard drive read/ write performances while RAID 1 (mirror) offers better data security.

Please back up hard drive data before you create or modify RAID volume(s) as the process may cause irreversible data deletion. When creating a RAID volume, it is also recommended to use hard drives from the same batch (same brand, model, capacity, rpm rate, etc.) to avoid performance or capacity allocation issues.

4.3.1 Legacy Mode RAID Configuration

To set up RAID configuration, you need to pre-configure the SATA mode setting in the BIOS. Please refer to the following steps:

- 1. When system boots up, press F2 to enter BIOS setup utility.
- Go to [Advanced] > [SATA And RST Configuration] > [SATA Mode Selection] > highlight [Intel RST Premium With Intel Optane System Acceleration] and press ENTER.

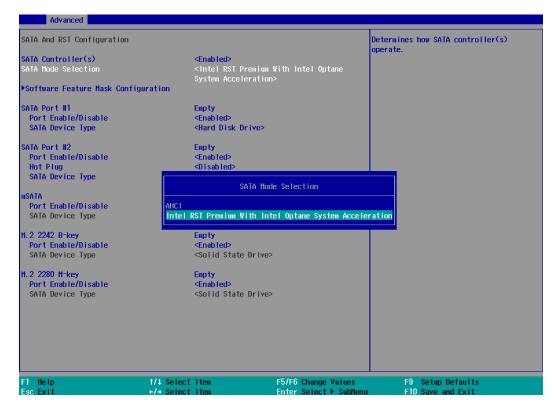



3. Go to [Boot] > highlight [Legacy Boot Type] and press ENTER to set boot type.

Main Advanced Security Powe	er Boot Exit		
Boot Type Quick Boot Quiet Boot PXE Boot to LAN Add Boot Options ACPI Selection USB Boot EFI Device First Timeout Automatic Failover	<legacy boot<br=""><enabled> <disabled> <last> <acpi5.0> <enabled> <enabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled> <inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></inabled></enabled></enabled></acpi5.0></last></disabled></enabled></legacy>	Туре>	Select boot type to Dual type, Legacy type or UEFI type
WDT for Booting	<disabled></disabled>	Boot Type Dual Boot Type Legacy Boot Type UEFI Boot Type	
F1 Help Esc Exit	↑/↓ Select Item +/→ Select Item	F5/F6 Change Values Enter Selectト SubMenu	F9 Setup Defaults F10 Save and Exit

- 4. Press F10 to "Exit Saving Changes" and reboot the system.
- 5. When the system reboots, press **[Ctrl + I]** to enter the RAID configuration utility.
- 6. Once you're in the Configuration Utility, highlight [Create RAID Volume] and press ENTER.

	1. Create RA 2. Delete RA 3. Reset Dis Volumes: defined.	<mark>IB Volume</mark> ID Volume ks to Non-RAID ——[DISK/VOLUME INF	4. Recovery Volume Options 5. Acceleration Options 6. Exit ORMATION J
Phys ID 0 1	ical Devices: Device Model Samsung SSD 850 Samsung SSD 850		Size Type/Status(Vol ID) 476.9GB Non-RAID Disk 476.9GB Non-RAID Disk

 The following screen allows you to enter the Name of the RAID volume you wish to create. Enter a name and press ENTER to access the RAID Level setting.

Copyright (C) Intel	Technology - Option ROM - 16.7.0.3513 Corporation. All rights reserved. REATE VOLUME MENU]
RAID Level:	953.9 GB
	[HELP] me that has no special characters and is characters or less.

 For RAID Level, use the up and down arrow key to select between RAID0 (Stripe) or RAID1 (Mirror) settings. Select a RAID mode and press ENTER to access Stripe Size setting (not applicable to Mirror mode).

Copyright (C) Intel	Technology - Option ROM - 16.7.0.3513 Corporation, All rights reserved. EATE VOLUME MENU]
RAID Level: Disks: Strip Size: Capacity: Sync:	Select Disks 64KB 953.9 GB
RAID 0: St	TIPES data (performance).
RAID 0: St	ripes data (performance).

 For Stripe Size, use the up and down arrow key to select between 4KB, 8KB, 16KB, 32KB, 64KB, 128KB for your RAID volume stripe size and press ENTER to access the Capacity setting.

*RAID1(Mirror) does not offer Stripe Size options.


Copyright (C) Intel	Technology - Option ROM - 16.7.0.3513 Corporation. All rights reserved. REATE VOLUME MENU]
Name: RAID Level:	Volume1 RAIDO(Stripe) Select Disks 953.9 GB
	[HELP]
	owing are typical values: RAIDO - 128KB RAID10 - 64KB SAID10 - 64KB
	RAID5 – 64KB

10. You may enter the RAID volume capacity you wish to create at this step and press the Enter key to complete your RAID settings. By default, the maximum capacity will be applied. Once you have entered a capacity, press ENTER to confirm.


Copyright (C) Intel	Technology - Option ROM - 16.7.0.3513 Corporation. All rights reserved. REATE VOLUME MENU 1
Name: RAID Level:	Volume1 RAIDO(Stripe) Select Disks 128KB
	HELP 1
disks. Entering a lower	es the maximum capacity using the selected capacity allows you to create a second ume on these disks.



11.Reviewed your settings and if you wish to change any setting(s), you will need to press [ESC] and start again from **Step 5**.If all settings are correct and you wish to continue, with "**Create Volume**" highlighted, press ENTER to begin creating the RAID volume.

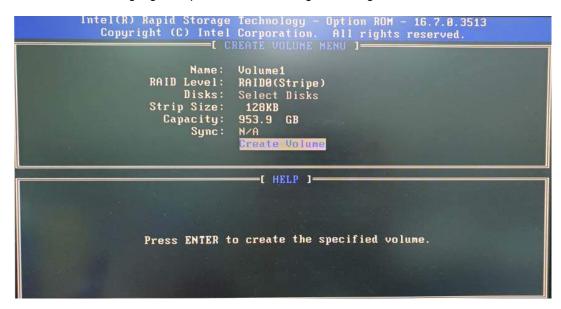

12.A data deletion warning will appear, enter "Y" to continue and "N" to stop the volume creation process.

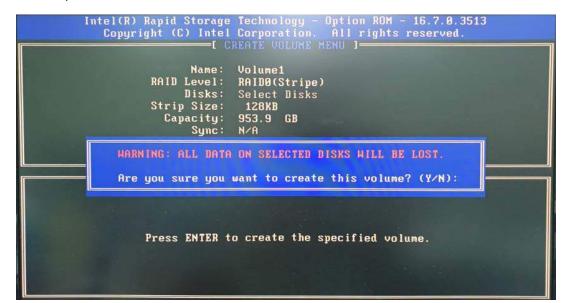



13.Once the RAID volume has been created, the configuration utility will bring you back to the main screen showing the RAID volume and their member disks.

	2. Delete	RAID Volume RAID Volume RAID Volume Visks to Non-RAID C DISK/VOLUME	4. Recovery Volum 5. Acceleration Op 6. Exit	
RAID ID 0	Volumes: Name Volume1	Level RAID0(Stripe)	Strip Size Statu 128KB 953.9GB Norma	
Phys ID 0 1		Serial # 60 S39FNCAJ401483A 60 S39FNCAJ401481T	Size Type/3 476.9GB Member 476.9GB Member	

14. The above process was to create a RAID-0 volume. If you wish to create a RAID-1 volume, please perform steps 5 to 13 in this section and select RAID-1 during step 8.



4.3.2 UEFI Mode RAID Configuration

To enable RAID functionality in UEFI mode:

- 1. When system boots up, press F2 to enter BIOS setup utility.
- Go to [Advanced] > [SATA And RST Configuration] > [SATA Mode Selection] > highlight [Intel RST Premium With Intel Optane System Acceleration] and press ENTER.

Advanced			
SATA And RST Configuration		Det	termines how SATA controller(s)
on the not contrigutation			erate.
SATA Controller(s)	<enabled></enabled>		
SATA Mode Selection	<intel i<="" rst="" td=""><td>Premium With Intel Optane</td><td></td></intel>	Premium With Intel Optane	
	System Acce	leration>	
Software Feature Mask Confi	iguration		
SATA Port #1	Empty		
Port Enable/Disable	<enabled></enabled>		
SATA Device Type	<hard disk="" i<="" td=""><td>Drive></td><td></td></hard>	Drive>	
SATA Port #2	Empty		
Port Enable/Disable	<enabled></enabled>		
Hot Plug	<disabled></disabled>		
SATA Device Type			
		SATA Mode Selection	
mSATA			
Port Enable/Disable	AHCI		
SATA Device Type	Intel RST Premium 1	∦ith Intel Optane System Accelerati	ion
M. 2 2242 B-key	Empty		-
Port Enable/Disable	<enabled></enabled>		
SATA Device Type	<solid state<="" td=""><td>e Drive></td><td></td></solid>	e Drive>	
M.2 2280 M-key	Empty		
Port Enable/Disable	<enabled></enabled>		
SATA Device Type	<solid state<="" td=""><td>e Drive></td><td></td></solid>	e Drive>	
21			
-1	1/↓ Select Item	F5/F6 Change Values	
F1 Help			F9 Setup Defaults



3. Go to [Boot], highlight [UEFI Boot Type] and press ENTER to set boot type.

Main Advanced Security Po	ower Boot Exit		
Boot Type Quick Boot Quiet Boot Network Stack PXE Boot capability Add Boot Options ACPI Selection USB Boot EFI Device First Timeout Automatic Failover WDT for Booting	 UEF1 Boot 	Type> Boot Type Dual Boot Type Legacy Boot Type UEFI Boot Type	Select boot type to Dual type, Legacy type or UEFI type
F1 Help Esc Exit	t/↓ Select Item +/+ Select Item	F5/F6 Change Values Enter Select ▶ SubMenu	F9 Setup Defaults F10 Save and Exit

- 4. Press F10 to "Exit Saving Changes" and reboot the system.
- 5. When the system reboots, press [F3] to enter the Configuration Utility.
- 6. Once you're in the Configuration Utility, highlight [Intel® Rapid Storage Technology] and press ENTER.



7. The following screen shows Non-RAID physical disks and the option "**Create RAID**

Volume". Highlight "**Create RAID Volume**" and press ENTER to begin creating your RAID volume.

Intel(R) Rapid Storage Technology			
Intel(R) Rapid Stora	ge Technology		
Intel(R) RST 16.7.0.3	513 RAID Driver		This page allows you to create a RAID volume
▶Create RAID Volume			
	ks: D 850 pro 5126B s39FNCAJ401483A, 4 D 850 pro 5126B s39FNCAJ401481T, 4		
F1 Help Esc Exit	1/4 Select Item	F5/F6 Change Values Enter Select ▶ SubMenu	F9 Setup Defaults F10 Save



8. The Name option allows you to name your RAID volume. Press ENTER when ready to go to the next option.

Intel(R) Rapid Storage Technology			
Intel(R) Rapid Storage Technology			
Create RAID Volume			Enter a unique volume name that has no special characters and is 16 characters
Name: RAID Level:	Volume1 <raido (stripe)<="" td=""><td>></td><td>or less.</td></raido>	>	or less.
Select Disks: SATA 0.0, Samsung SSD 850 PRO 512GB S39FNCAJ401483A, 476.9GB SATA 0.1, Samsung SSD 850 PRO 512GB S39FNCAJ401481T, 476.9GB	< >		
Strip Size: Capacity (MB):	<16КВ> [0]		
▶Create Volume			
Select at least two disks			
	elect Item elect Item	F5/F6 Change Values Enter Select ► SubMenu	F9 Setup Defaults F10 Save



 The RAID Level option allows you to select RAID-0 (stripping) or RAID-1 (mirror) for your RAID volume. Press ENTER when ready.

Intel(R) Rapid Storage Technology				
Create RAID Volume		Select RAID Level		
Name: RAID Level:	Volume1 <raido (stripe)=""></raido>			
Select Disks: SATA 0.0, Samsung SSD 850 PRO 512G S39FNCAJ401483A, 476.9GB SATA 0.1, Samsung SSD 850 PRO 512G S39FNCAJ401481T, 476.9GB				
Strip Size: Capacity (MB):	<16KB> [0]			
▶Create Volume	RAID Leve			
Select at least two disks	RAIDO (Str RAIDI (Hir Recovery			
		ô Change Values F9 Setup De r Select⊧ SubMenu F10 Save	faults	



10. The Select Disks option allows you to select disk drives for your RAID volume. Highlight a drive and press ENTER, use up/ down arrow keys to highlight "x" and press ENTER to confirm the selection. A minimum of two disk drives must be selected for RAID-0 or RAID-1 configuration. Press ENTER when ready.

Intel(R) Rapid Storage Technology			
Intel(R) Rapid Storage Technology			
Create RAID Volume			X - to Select Disk
Name: RAID Level:	Volume1 <raido (stripe)=""></raido>		
Select Disks: SATA 0.0, Samsung SSD 850 PRO 512GB S39FNCAJ401483A, 476.9GB SATA 0.1, Samsung SSD 850 PRO 512GB S39FNCAJ401481T, 476.9GB	<x> <x></x></x>		
Strip Size: Capacity (MB):	<64KB> [976768]		
►Create Volume	0.1, Samsung SSD 850 PRO	512GB \$39FNCAJ401481T,	, 476.968
		F5/F6 Change Values	F9 Setup Defaults

11. The Stripe Size option allows you to configure the stripe size of your RAID volume. Available stripe sizes are 4KB, 8KB, 16KB, 32KB, 64KB, 128KB, use the up and down arrow keys to highlight and press ENTER to confirm the stripe size selection.

*RAID1(Mirror) does not offer Stripe Size options.

Intel(R) Rapid Storage Technology			
Create RAID Volume		Strip size help	
Name: RAID Level:	Volume1 <raido (stripe)=""></raido>		
Select Disks: SATA 0.0, Samsung SSD 850 PRO 512GB S39FNCAJ401483A, 476.9GB SATA 0.1, Samsung SSD 850 PRO 512GB S39FNCAJ401481T, 476.9GB	<∞		
Strip Size: Capacity (HB): ▶Create Volume	<64KB> [976768]		
	elect Iten F5/F6 Change Values elect Iten Enter Select ≻ SubHenu	F9 Setup Defaults F10 Save	

12. The Capacity (MB) option allows you to configure the storage capacity of your RAID volume. By default, the full storage capacity will be applied. Once you have entered a capacity, press ENTER to confirm.

Intel(R) Rapid Storage Technology			
Intel(R) Rapid Storage Technology			
Create RAID Volume		Capacity in MB	
Name: RAID Level:	Volume1 <raido (stripe)=""></raido>		
Select Disks: SATA 0.0, Samsung SSD 850 PRO 512GB S39ENCAJ401483A, 476.9GB SATA 0.1, Samsung SSD 850 PRO 512GB S39ENCAJ401481T, 476.9GB	ф ф		
Strip Size: Capacity (HB):	< <mark>64KB</mark> > [976768]		
▶Create Volume	976768 [Yes] [No]		
F1 Help 1/4 Sele		F9 Setup Defaults F10 Save	

 The Create Volume option is the final step in the volume creation process. Highlight "Create Volume" and press ENTER to begin creating your RAID volume base on the settings you just configured.


Intel(R) Rapid Storage Technology			
Intel(R) Rapid Storage Technology			
Create RAID Volume		Create a volume with the settings specified above	
Name: RAID Level:	Volume1 <raido (stripe)=""></raido>		
Select Disks: SATA 0.0, Samsung SSD 850 PRO 512GB S39FNCAJ401483A, 476.9GB SATA 0.1, Samsung SSD 850 PRO 512GB S39FNCAJ401481T, 476.9GB	<x> <x></x></x>		
Strip Size: Capacity (MB):	<64KB> [976768]		
▶Create Volume			
F1 Help 1/4 Select		Change Values F9 Setup Defaults	



14. A summary and status of the RAID volume will be shown when the RAID volume is successfully created.

Intel(R) Rapid Storage Technology			
Intel(R) RST 16.7.0.3513	RAID Driver		Select to see more information about the RAID Volume
RAID Volumes: ⊁Volume1, RAIDO (Stripe),	953.9GB, Normal		
F1 Help Esc Exit	1/4 Select Item +/→ Select Item	F5/F6 Change Values Enter Select ► SubHenu	F9 Setup Defaults F10 Save

15. Press F10 to save and Esc to exit the Intel® Rapid Storage Technology configuration page.

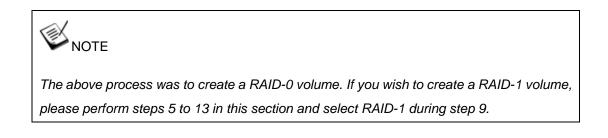



5 OS Support and Driver Installation

5.1 Operating System Compatibility

The system supports most operating system developed for Intel® x86 architecture. The following list contains the operating systems which have been tested by Neousys Technology.

- Microsoft Window 10 (x64)
- Fedora 29**
- Ubuntu 16.04.5 LTS** & Ubuntu18.04.0 LTS**

NOTE

For other Linux OS, Linux kernel should upgrade to 4.15.18.

*For Linux system, user may need to manually compile and install the driver for Intel graphics or I210 GbE controller if the driver is not embedded in kernel. You can visit Intel website for further information.

** For distributions, graphics driver and RAID function may not be completely implemented in its kernel. You may encounter restrictions when using these features, such as triple independent display and RAID. For optimum operation, it is the users' responsibility to manually check for new drivers and upgrades!

Neousys may remove or update operating system compatibility without prior notice. Please contact us if your operating system of choice is not on the list.



5.2 Driver Installation

The system comes with a "Drivers & Utilities" DVD that offers "one-click" driver installation process. It automatically detects your Windows operating system and installs all necessary drivers for you system with a single click.

5.2.1 Install Drivers Automatically

The system comes with a "Drivers & Utilities" DVD that offers "one-click" driver installation process. It automatically detects your Windows operating system and installs all necessary drivers for you system with a single click.

To install drivers automatically, please refer to the following procedures.

 Insert the "Drivers & Utilities" DVD into a USB DVD-drive connect to your system. A setup utility launches and the following dialog appears.



Click on "**Automatic Driver Installation**" and the setup utility will automatically detect your Windows operating system and install all necessary drivers. The installation process takes about 6~8 minutes depending on your Windows version. Once driver installation is done, the setup utility reboots your Windows and you may begin using your system.



5.2.2 Install Drivers Manually

You can also manually install each driver for the system. Please note when installing drivers manually, you need to install the drivers in the following sequence mentioned below.

Windows 10 (x64)

The recommended driver installation sequence is

- 1. Chipset driver (x:\Driver_Pool\Chipset_CFL\Win_10_64\SetupChipset.exe)
- 2. Graphics driver (x:\Driver_Pool\Graphics_CFL_SKL_APL\Win_10_64\igxpin.exe)
- 3. Audio driver (x:\Driver_Pool\Audio_ALC262\Win_ALL_64\Setup.exe)
- LAN driver

 (x:\Driver_Pool\GbE_I210_I350\Win_10_64_CFL\APPS\PROSETDX\Winx64\DxSetup.exe)
- 5. ME driver (x:\Driver_Pool\ME_CFL\Win_10_64\SetupME.exe)



5.3 Driver Installation for Watchdog Timer Control

Neousys provides a driver package which contain function APIs for Watchdog Timer control function. You should install the driver package (WDT_DIO_Setup.exe) prior to use these functions. Please note that you must install WDT_DIO_Setup_v2.2.9.x or later versions.

Windows 10 (x64)

Please execute the driver setup program in the following directory.

x:\Driver_Pool\WDT_DIO\Win7_8_10_64\WDT_DIO_Setup_v2.2.9.x(x64).exe

Windows 10 (WOW64)

Please execute the driver setup program in the following directory.

x:\Driver_Pool\WDT_DIO\Win7_8_10_WOW64\WDT_DIO_Setup_v2.2.9.x(wow64).exe



5.4 Intel[®] Optane[™] Memory BIOS Setup and Driver Installation

The system is compatible with Intel[®] Rapid Storage Technology that supports the installation of Intel[®] OptaneTM memory to significantly boost traditional hard disk drive read and write performances. Intel® OptaneTM memory is Intel® RST's latest system acceleration solution featuring a dual-media/disk combination (ultrafast media for file and block caching + slow media for storage capacity) that is presented to the host OS as a single SSD. The ultrafast media utilizes PCIe NVMe SSDs that are based on Intel® OptaneTM technology with read speed of up to 3000Mb/ sec and write speed of up to 2000Mb/ sec.

To setup Intel[®] Optane[™] memory, please perform the following steps:

- 1. Press the power button to startup your system (please restart if your system is already up and running) and press F2 to enter BIOS.
- 2. Go to "Advanced > SATA And RST Configuration".





3. Go to "SATA Mode Selection", press the Enter key to bring up options, select "Intel RST Premium With Intel Optane System Acceleration" and press ENTER to select the option.

Advanced		Nuvo-7000 Si	eries Setup Utility	Rev.
SATA And RST Configuration				Determines how SATA controller(s) operate.
SATA Controller(s)		<enabled></enabled>		
SATA Mode Selection		<intel premiu<br="" rst="">System Acceleratio</intel>	n With Intel Optane nn>	
≻Software Feature Mask Con				
SATA Port #1		Empty		
Port Enable/Disable		<enabled></enabled>		
SATA Device Type		<hard disk="" drive=""></hard>		
SATA Port #2		Empty		
Port Enable/Disable		<enabled></enabled>		
Hot Plug		<d i="" led="" sab=""></d>		
SATA Device Type		b roab roa		
		SATA M	ode Selection	
mSATA Port Enable/Disable SATA Device Type	AHCI Intel R	ST Premium With In	ntel Optane System Accele	ration
М. 2		Empty		
Port Enable/Disable		<enabled></enabled>		
SATA Device Type		<solid driv<="" state="" td=""><td><u>;></u></td><td></td></solid>	<u>;></u>	
-1 Help	t/↓ Select	ltem	F5/F6 Change Values	F9 Setup Defaults
Esc Exit	+/+ Select	Item	Enter Select ► SubMenu	F10 Save and Exit



4. Go to "M.2 2280 NVMe Storage Device" and press the Enter key to bring up the selection, select "RST Controlled" and press the Enter key to select the option.

Advanced		Nuvo-7000 Ser	ies Setup Uti	lity
SATA And RST Configuration				
SATA Controller(s) SATA Hode Selection H.2 2280 NVHe Storage Device ⊳Software Feature Mask Configur		<enabled> <intel !<br="" premium="" rst="">System Acceleration: <rst controlled=""></rst></intel></enabled>		tane
SATA Port #1 Port Enable/Disable SATA Device Type		Empty <enabled> <hard disk="" drive=""></hard></enabled>		
SATA Port #2 Port Enable/Disable Hot Plug SATA Device Type		Empty <enabled> <disab <hard 2="" 2280="" h.="" nvh<="" td=""><td>e Storage Dev</td><td>ice</td></hard></disab </enabled>	e Storage Dev	ice
mSATA Port Enable/Disable SATA Device Type		Empty <enabl <solid< td=""><td></td><td></td></solid<></enabl 		
H.2 Port Enable/Disable SATA Device Type		Empty <enabled> <solid drive="" state=""></solid></enabled>		
F1 Help Esc Exit	1/1 Select +/+ Select		F5/F6 Change Enter Select	

- 5. Press F10 to save and exit, and allow the system to boot into Windows.
- 6. In Windows, download Intel® RST driver if you don't already have it on hand. Right-click




and left-click on "Run as administrator" to

execute the setup file.

on the SetupOptaneMemory.exe



7. Follow the 6 step setup procedure as instructed.

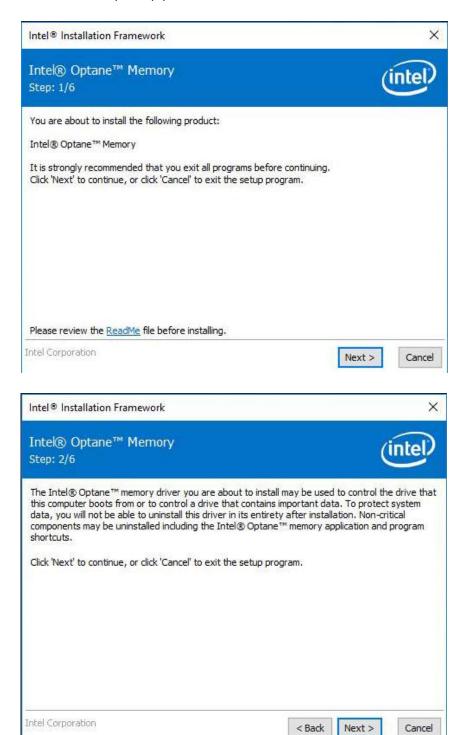



8. Check the "I accept the terms in the License Agreement" box and click on "Next >" to continue the installation process.

Intel [®] Installation Framework	>
Intel® Optane™ Memory Step: 3/6	intel
LIMITATION MAY NOT APPLY TO YOU. YOU MAY AL VARY FROM JURISDICTION TO JURISDICTION. TERMINATION OF THIS AGREEMENT. Intel may ter violate its terms. Upon termination, you will immedia copies of the Software to Intel. APPLICABLE LAWS. Claims arising under this Agreed Delaware, excluding its principles of conflict of laws Contracts for the Sale of Goods. You may not expo export laws and regulations. Intel is not obligated u are in writing and signed by an authorized represer GOVERNMENT RESTRICTED RIGHTS. The Software Use, duplication, or disclosure by the Government i FAR52.227-14 and DFAR252.227-7013 et seq. or i Government constitutes acknowledgment of Intel's Manufacturer is Intel Corporation, 2200 Mission Col	LSO HAVE OTHER LEGAL RIGHTS THAT minate this Agreement at any time if you ately destroy the Software or return all ment will be governed by the laws of and the United Nations Convention on rt the Software in violation of applicable under any other agreements unless they itative of Intel. is provided with "RESTRICTED RIGHTS." is subject to restrictions as set forth in ts successor. Use of the Software by the proprietary rights therein. Contractor or
☑ I accept the terms in the License Agreement.	·
ntel Corporation	< Back Next > Cancel
Intel® Installation Framework	>
Intel® Optane™ Memory Step: 4/6	(intel)
You are about to install the following components: Intel® Optane™ Memory Click 'Next' to install to the default folder, or dick 'Cł	nange' to choose another destination folder.
C:\Program Files\Intel\Intel(R) Optane Memory	
Create a desktop shortcut	Change




Intel® Installation Framework	
Intel® Optane™ Memory Step: 5/6	(intel)
Please wait while the product is being installed.	
Intel Corporation	

9. When done, click on "Finish" and restart the system.


Intel®	Installation Framework	×
Intel Step:	® Optane™ Memory 6/6	(intel)
	You have successfully installed the following product: Intel® Optane™ Memory	
	Inters optime memory	
	Please restart your PC to implement these changes. Would you like to restar now?	t your PC
	• Yes, I want to restart this computer now.	
	\bigcirc No, I will restart this computer later.	
	Note: A restart (not 'Shut down') is required to complete the installation proc	ess.
Intel Co	rporation	Finish



10. Upon system restart, the following initialization screen will appear. Click on Next to continue.

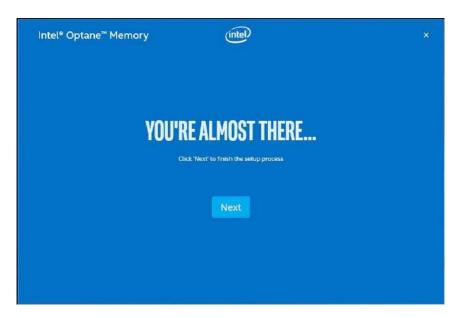


 In the Setup section, you will see your Intel® Optane[™] memory drive and compatible drive(s) that can be accelerated. Click on the downward arrow to bring up a selection of drives to be accelerated. Click on "Enable" when ready.

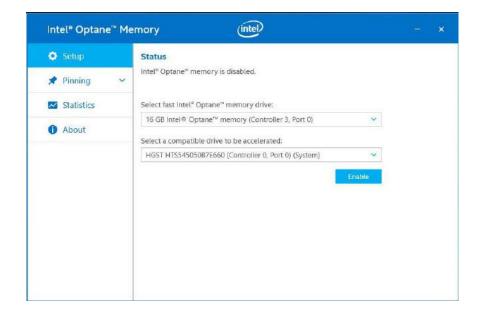




12. The data backup warning will appear, please backup any data you may have stored on your Intel® Optane[™] memory module before proceeding. Check the box "Erase all data on Intel® Optane[™] memory module" and click on Continue.

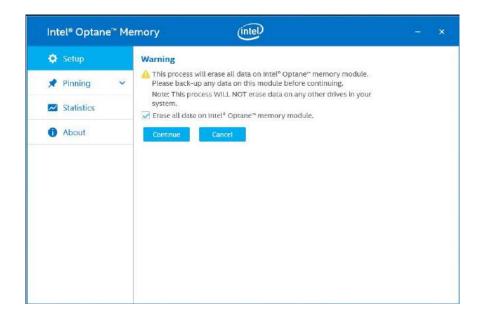


 When the Intel® Optane[™] memory module has been enabled, the installation window and a notification window at the bottom right corner will prompt you to restart the system.

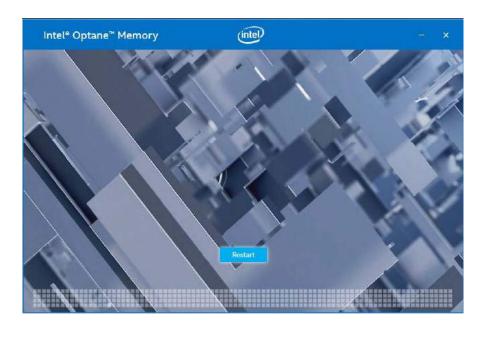


Intel® Optane™ Memory	×
Operation completed	
Please restart your computer to comp	lete the process.
	Restart



 Upon system restart, a successful enablement message will appear to indicate the Intel® Optane[™] memory module has been enable successfully.

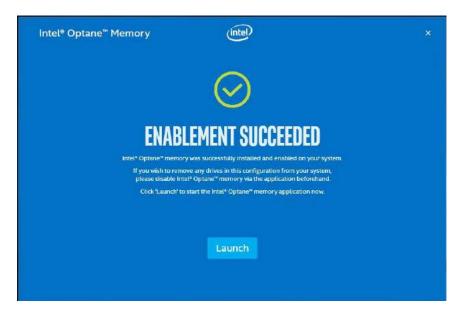

15. Once enabled, the RST software Setup section should show your configuration information.

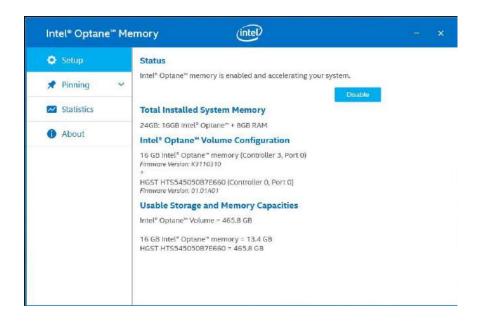



Appendix A Using WDT & DIO

The watchdog timer (WDT) function to ensure reliable system operation. The WDT is a hardware mechanism to reset the system if the watchdog timer is expired. Users can start the WDT and keeping resetting the timer to make sure the system or program is running. Otherwise, the system shall be reset.

In this section, we'll illustrate how to use the function library provided by Neousys to program the WDT functions. Currently, WDT driver library supports Windows 10 x64 and WOW64 platform. For other OS support, please contact Neousys Technology for further information.

Installing WDT_DIO Library

The WDT_DIO function library is delivered in the form of a setup package named **WDT_DIO_Setup.exe**. In prior to program WDT, you should execute the setup program and install the WDT library. Please use the following WDT_DIO_Setup packages according to your operating systems and application.

- For Windows 10 64-bit OS with 64-bit application (x64 mode), please install WDT_DIO_Setup_v2.2.9.x(x64).exe or later version.
- For Windows 10 64-bit OS with 32-bit application (WOW64 mode), please install WDT_DIO_Setup_v2.2.9.x(wow64).exe or later version.



WDT and DIO Library Installation

To setup WDT & DIO Library, please follow instructions below.

1. Execute **WDT_DIO_Setup.2.2.9.x.exe**. and the following dialog appears.


🦺 Setup - Neousys Nuvo/Nuv	ris/POC Series WDT & DIO Library
	Welcome to the Neousys Nuvo/Nuvis/POC Series WDT & DIO Library Setup Wizard
	This will install Neousys Nuvo/Nuvis/POC Series WDT & DIO Library version Ver. 2.0 on your computer.
	It is recommended that you close all other applications before continuing.
	Click Next to continue, or Cancel to exit Setup.
	[Next >] Cancel

 Click "Next >" and specify the directory of installing related files. The default directory is C:\Neousys\WDT_DIO.

🥠 Setup - Neousys Nuvo/Nuvis/POC Series WDT & DIO Library
Select Destination Location Where should Neousys Nuvo/Nuvis/POC Series WDT & DIO Library be installed?
Setup will install Neousys Nuvo/Nuvis/POC Series WDT & DIO Library into the following folder.
To continue, click Next. If you would like to select a different folder, click Browse.
C:\Weousys\WDT_DIO Browse
At least 5.6 MB of free disk space is required.
< <u>B</u> ack <u>N</u> ext > Cancel



 Once the installation has finished, a dialog will appear to prompt you to reboot the system. The WDT & DIO library will take effect after the system has rebooted.

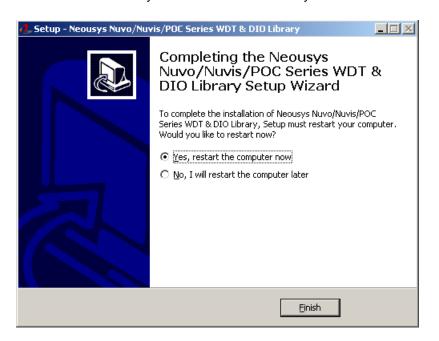

4. When programming your WDT or DIO program, the related files are located in

Header File:	\Include
Library File:	\Lib
Function	\Manual
Reference:	
Sample Code:	\Sample\WDT_Demo (Demo for Watchdog Timer)

 \Box



WDT Functions

InitWDT

Syntax	BOOL InitWDT(void);		
Description:	Initialize the WDT function. You should always invoke InitWDT() before set or start watchdog timer.		
Parameter	None		
Return Value	TRUE: Successfully initialized		
	FALSE: Failed to initialize		
Usage	BOOL bRet = InitWDT()		

SetWDT

	1		
Syntax	BOOL SetWDT(WORD tick, BYTE unit);		
Description	Set timeout value and unit for watchdog timer When InitWDT()		
Description	Set timeout value and unit for watchdog timer. When InitWDT()		
	is invoked, a default timeout value of 255 seconds is assigned.		
Parameter	tick		
Falameter	WORD value (1 ~ 65535) to indicate timeout ticks.		
	unit		
	BYTE value (0 or 1) to indicate unit of timeout ticks.		
	0 : unit is minute		
	1: unit is second		
Return Value	If value of unit is correct (0 or 1), this function returns TRUE,		
Return value	otherwise FALSE.		
	WORD tick=255;		
Usage	BYTE unit=1; //unit is second.		
	BOOL bRet = SetWDT(tick, unit); //timeout value is 255		
	seconds		



StartWDT

, ,			
Syntax	BOOL StartWDT(void);		
Description	Starts WDT countdown. Once started, the WDT LED indicator will begin blinking. If ResetWDT() or StopWDT is not invoked before WDT countdowns to 0, the WDT expires and the system resets.		
Parameter	None		
Return Value	If the timeout value is given in correct format (WDT started), this function returns TRUE, otherwise FALSE		
Usage	BOOL bRet = StartWDT()		

ResetWDT

Syntax	BOOL ResetWDT(void);
Description	Reset the timeout value to the value given by SetWDT().If ResetWDT() or StopWDT is not invoked before WDT
	countdowns to 0, the WDT expires and the system resets.
Parameter	None
Return Value	Always returns TRUE
Usage	BOOL bRet = ResetWDT()

StopWDT

Syntax	BOOL StopWDT(void);
Description	Stops the countdown of WDT. When WDT has stopped, the WDT LED indicator stops blinking.
Parameter	None
Return Value	Always returns TRUE
Usage	BOOL bRet = StopWDT()




Appendix B PoE On/ Off Control

The system offers 802.3at PoE+ ports and users are allowed to manually turn on or off the power supply of each PoE port. This can be useful in power device (PD) fault-recovery or power reset. The APIs are part of Neousys WDT_DIO driver package. Please follow the instructions in <u>Appendix AWatchdog Timer & Isolated DIO</u> for installation before programming PoE on/off control function.

Syntax	BYTE GetStatusPoEPort (Byte port);
Description	Get current on/off status of designated PoE port.
Parameter	port
	BYTE value specifies the index of PoE port. Please refer to the following illustration, <i>port</i> should be a value of $1 \sim 4$
Return Value	BYTE value indicating PoE on/off status
	0 if port is disabled (off)
	1 if port is enabled (on)
Usage	BYTE bEnabled = GetStatusPoEPort (1); //Get on/off status of PoE
	Port#1

GetStatusPoEPort

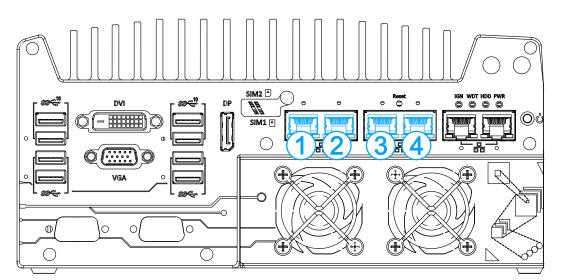


PoE+ ports on the front panel



EnablePoEPort

Syntax	BOOL EnablePoEPort (BYTE port);
Description	Turn on PoE power of designated PoE port.
Parameter	port
	BYTE value specifies the index of PoE port. Please refer to the following illustration, <i>port</i> should be a value of 1 ~ 4
Return Value	TRUE if enabled success
	FALSE if fail to enable.
Usage	BOOL bRet = EnablePoEPort (1); //Turn on PoE Port#1

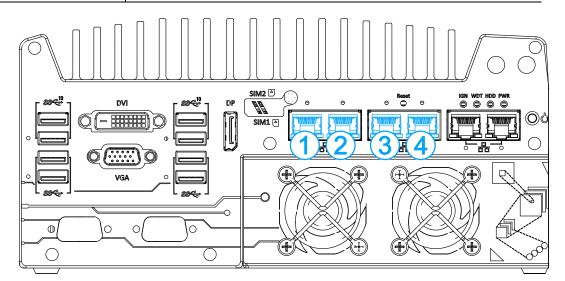


PoE+ ports on the front panel



DisablePoEPort

Syntax	BOOL DisablePoEPort (BYTE port);
Description	Turn off PoE power of designated PoE port
Parameter	port
	BYTE value specifies the index of PoE port. Please refer to the following illustration, <i>port</i> should be a value of $1 \sim 4$
Return Value	TRUE if disabled success
	FALSE if fail to disable
Usage	BOOL bRet = DisablePoEPort (1); //Turn off PoE Port#1

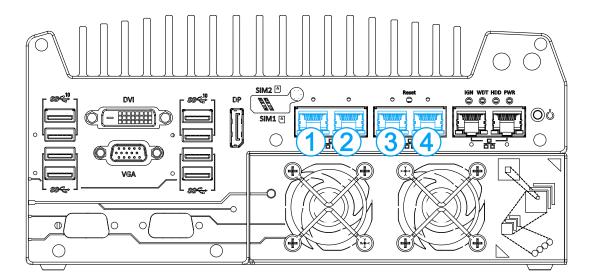

PoE+ ports on the front panel