


User Manual

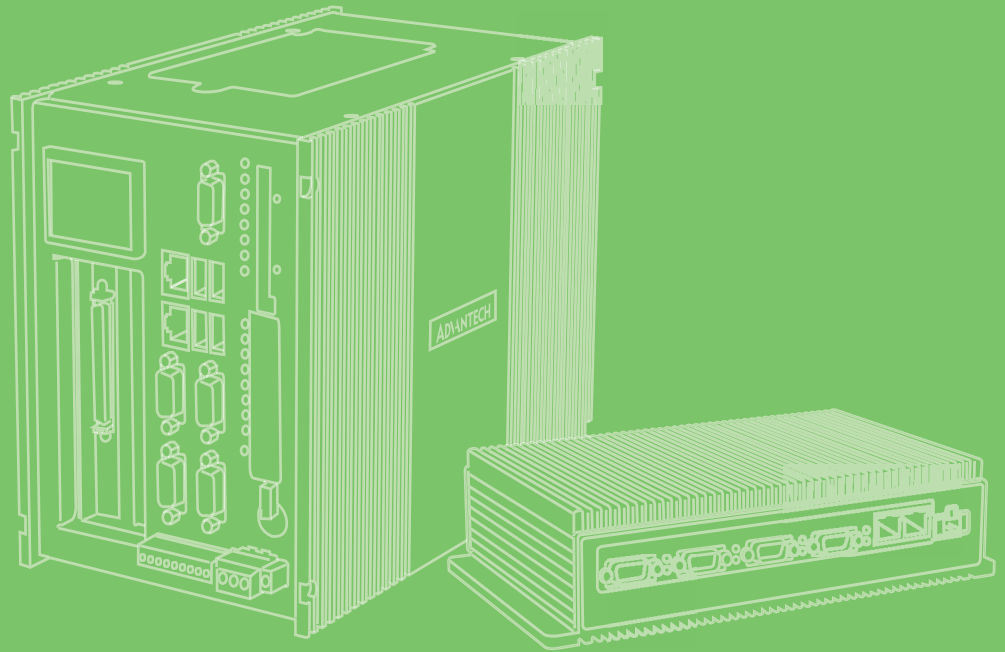

UNO-2362G

嵌入式工業電腦
Automation Computer with
AMD[®] Dual Core T40E
Processors, 1 x GbE, 1 x mPCIe,
and HDMI/DP

ADVANTECH

Enabling an Intelligent Planet

限用物質含有情況標示聲明書
Declaration of the Containment of Restricted Substances

設備名稱：嵌入式工業電腦		型號（型式）：UNO-2362G（系列型號請參見次頁說明書）				
Equipment name		Type designation (Type)				
單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr+6)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated- diphenyl ethers (PBDE)
電路板	—	○	○	○	○	○
其它固定組件 (螺絲)	—	○	○	○	○	○
機殼（外殼、 支架 …）	○	○	○	○	○	○
記憶體 / 硬碟	—	○	○	○	○	○
配件（線材）	○	○	○	○	○	○
<p>備考 1. “超出 0.1 wt %” 及 “超出 0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值 Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicates that the percentage content of the restricted substance exceeds the reference value percentage.</p> <p>備考 2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2: “○” indicates that the percentage content of the restricted substance does not exceed the reference value percentage. .</p> <p>備考 3. “—” 係指該項限用物質為排除項目。 Note 3: The “—” indicates that the restricted substance corresponds to the exemption.</p>						

申請商：研華股份有限公司
 地址：台北市內湖區瑞光路 26 巷 20 弄 1 號
 電話：02 2792 7818

Copyright

The documentation and the software included with this product are copyrighted 2020 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. Information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties, which may result from its use.

Acknowledgments

IBM, PC/AT, PS/2 and VGA are trademarks of International Business Machines Corporation.

AMD® are trademarks of Advanced Micro Devices, Inc.

Microsoft Windows and MS-DOS are registered trademarks of Microsoft Corp.

All other product names or trademarks are properties of their respective owners.

Support

For more information on this and other Advantech products, please visit our websites at: <http://www.advantech.com>

For technical support and service, please visit our support website at:

<http://support.advantech.com/>

*UNO-2362G

UNO-2362G-T2AE

UNO-2362G-T2BE

UNO-2362G-T2CE

UNO-2362G-T3AE

UNO-2362G-T3BE

UNO-2362G-T3CE

UNO2362GT2A1401E-T, UNO2362GT2A1402E-T, UNO2362GT2A1403E-T,
UNO2362GT2A1404E-T, UNO2362GT2A1405E-T, UNO2362GT2A1501E-T,
UNO2362GT2A1502E-T, UNO2362GT2A1503E-T, UNO2362GT2A1504E-T,
UNO2362GT2A1505E-T, UNO2362GT2A1601E-T, UNO2362GT2A1602E-T,
UNO2362GT2A1603E-T, UNO2362GT2A1604E-T, UNO2362GT2A1605E-T,
UNO2362GT2A1701E-T, UNO2362GT2A1702E-T, UNO2362GT2A1703E-T,
UNO2362GT2A1704E-T, UNO2362GT2A1705E-T, UNO2362GT2A1801E-T,
UNO2362GT2A1802E-T, UNO2362GT2A1803E-T, UNO2362GT2A1804E-T,
UNO2362GT2A1805E-T, UNO2362GT2A1901E-T, UNO2362GT2A1902E-T,
UNO2362GT2A1903E-T, UNO2362GT2A1904E-T, UNO2362GT2A1905E-T,
UNO2362GT2A2001E-T, UNO2362GT2A2002E-T, UNO2362GT2A2003E-T
UNO2362GT2A2004E-T, UNO2362GT2A2005E-T, UNO2362GT2A2101E-T
UNO2362GT2A2102E-T, UNO2362GT2A2103E-T, UNO2362GT2A2104E-T
UNO2362GT2A2105E-T, UNO2362GT2A2201E-T, UNO2362GT2A2202E-T
UNO2362GT2A2203E-T, UNO2362GT2A2204E-T, UNO2362GT2A2205E-T
UNO2362GT2A2301E-T, UNO2362GT2A2302E-T, UNO2362GT2A2303E-T
UNO2362GT2A2304E-T, UNO2362GT2A2305E-T, UNO2362GT2A2401E-T
UNO2362GT2A2402E-T, UNO2362GT2A2403E-T, UNO2362GT2A2404E-T
UNO2362GT2A2405E-T, UNO2362GT2A2501E-T, UNO2362GT2A2502E-T
UNO2362GT2A2503E-T, UNO2362GT2A2504E-T, UNO2362GT2A2505E-T
C-UNO2362G-ACP

Product Warranty (2 years)

Advantech warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Advantech, or which have been subject to misuse, abuse, accident or improper installation. Advantech assumes no liability under the terms of this warranty as a consequence of such events.

Because of Advantech's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If an Advantech product is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time and freight. Please consult your dealer for more details.

If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, CPU speed, Advantech products used, other hardware and software used, etc.) Note anything abnormal and list any onscreen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
3. If your product is diagnosed as defective, obtain an return merchandise authorization (RMA) number from your dealer. This allows us to process your return more quickly.
4. Carefully pack the defective product, a fully-completed Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

Declaration of Conformity

CE

This product has passed the CE test for environmental specifications when shielded cables are used for external wiring. We recommend the use of shielded cables. This kind of cable is available from Advantech. Please contact your local supplier for ordering information.

FCC Class A

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Technical Support and Assistance

1. Visit the Advantech website at support.advantech.com/ where you can find the latest information about the product.
2. Contact your distributor, sales representative, or Advantech's customer service center for technical support if you need additional assistance. Please have the following information ready before you call:
 - Product name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

Safety Precaution - Static Electricity

Follow these simple precautions to protect yourself from harm and the products from damage.

- To avoid electric shock, always disconnect the power from your PC chassis before you work on it. Don't touch any components on the CPU card or other cards while the PC is on.
- Disconnect power before making any configuration changes. The sudden rush of power as you connect a jumper or install a card may damage sensitive electronic components.

[甲類警語]

警告使用者：此為甲類資訊技術設備，於居住環境中使用時，可能會造成射頻擾動，在此種情況下，使用者會被要求採取某些適當的對策。

Safety Instructions

1. Read these safety instructions carefully.
2. Keep this User Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage.
7. The openings on the enclosure are for air convection. Protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient over-voltage.
12. Never pour any liquid into an opening. This may cause fire or electrical shock.
13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
14. If one of the following situations arises, get the equipment checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment does not work well, or you cannot get it to work according to the user's manual.
 - The equipment has been dropped and damaged.
 - The equipment has obvious signs of breakage.
15. **DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO BELOW -10 °C (-14 °F) OR ABOVE 60 °C (140 °F). THIS COULD DAMAGE THE EQUIPMENT. THE EQUIPMENT SHOULD BE IN A CONTROLLED ENVIRONMENT.**
16. **CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER, DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.**
ATTENTION: Danger d'explosion si la batterie est mal REMPLACÉ. REMPLACER UNIQUEMENT PAR LE MEME TYPE OU EQUIVALENT RECOMMANDÉ PAR LE FABRICANT, jeter les piles usagées SELON LES INSTRUCTIONS DU FABRICANT.
17. The sound pressure level at the operator's position according to IEC 704-1:1982 is no more than 70 dB (A).

DISCLAIMER: This set of instructions is given according to IEC 704-1. Advantech disclaims all responsibility for the accuracy of any statements contained herein.

安全指示

1. 請仔細閱讀此安全操作說明。
2. 請妥善保存此用戶手冊供日後參考。
3. 用濕抹布清洗設備前，請從插座拔下電源線。請不要使用液體或去汙噴霧劑清洗設備。
4. 對於使用電源線的設備，設備周圍必須有容易接觸到的電源插座。
5. 請不要在潮濕環境中使用設備。
6. 請在安裝前確保設備放置在可靠的平面上，意外跌落可能會導致設備損壞。
7. 設備外殼的開口是用於空氣對流，從而防止設備過熱。請不要覆蓋這些開口。
8. 當您連接設備到電源插座上前，請確認電源插座的電壓是否符合要求。
9. 將電源線佈置在人們不易絆到的位置，並不要在電源線上覆蓋任何雜物。
10. 請注意設備上的所有警告和注意標語。
11. 如果長時間不使用設備，請將其同電源插座斷開，避免設備被超標的電壓波動損壞。
12. 請不要讓任何液體流入通風口，以免引起火災或者短路。
13. 請不要自行打開設備。為了確保您的安全，請由經過認證的工程師來打開設備。
14. 如遇下列情況，請由專業人員來維修：
 - 電源線或者插頭損壞；
 - 設備內部有液體流入；
 - 設備曾暴露在過於潮濕的環境中使用；
 - 設備無法正常工作，或您無法通過用戶手冊來使其正常工作；
 - 設備跌落或者損壞；
 - 設備有明顯的外觀破損。
15. 請不要把設備放置在超出我們建議的溫度範圍的環境，即不要低於 -20°C (-4°F) 或高於 60°C (140°F)，否則可能會損壞設備。
16. **注意：**若電池更換不正確，將有爆炸危險。因此，只可以使用製造商推薦的同一種或者同等型號的電池進行替換。請按照製造商的指示處理舊電池。
17. 根據 IEC 704 - 1:1982 規定，操作員所在位置音量不可高於 70 分貝。
18. **限制區域：**請勿將設備安裝於限制區域使用。
19. **免責聲明：**請安全訓示符合 IEC 704 - 1 要求。研華公司對其內容之準確性不承擔任何法律責任。
20. 本產品於國內裝置使用時，其電源僅限使用機架電源模組所提供直流電源輸入，不得使用交流電源及附加其他電源轉換裝置提供電源，其電源輸入電壓及電流請依說明書規定使用。

Contents

Chapter 1	Overview.....	1
1.1	Introduction	2
1.2	Hardware Specifications	2
1.2.1	General	2
1.3	System Hardware.....	3
1.3.1	I/O Interfaces	3
1.3.2	Environment.....	3
1.4	Safety Precautions	4
1.5	Chassis Dimensions.....	4
	Figure 1.1 UNO-2362G Chassis Dimensions	4
1.6	Accessories.....	5
Chapter 2	Hardware Functionality	7
2.1	Introduction	8
	Figure 2.1 Front Panel of UNO-2362G	8
	Figure 2.2 Rear Panel of UNO-2362G.....	8
2.2	UNO-2362G Interface (COM1~COM2).....	8
2.2.1	RS-232 Interface (COM 1).....	8
2.2.2	Automatic Data Flow Control Function for RS-485.....	8
2.3	LAN: Ethernet Connector	9
2.4	Power Connector	9
2.5	USB Connector	9
2.6	DisplayPort/HDMI Display Connector	9
2.7	RTC Battery Specification	10
	Figure 2.3 RTC Battery Location	10
2.8	Power Button/Power Management	10
2.9	Reset Button	10
2.10	PCI Express Mini Card Socket.....	11
Chapter 3	Initial Setup	13
3.1	Inserting a mSATA	14
3.2	Chassis Grounding.....	14
	Figure 3.1 Chassis Grounding Connection	14
3.3	Connecting Power	14
3.4	Installing a Hard Disk	15
3.5	BIOS Setup	16
3.6	Din Rail Kit Assembly.....	17
3.7	Daisy Chain for Ethernet.....	17
Appendix A	System Setting & Pin Assignment...19	
A.1	System I/O Address and Interrupt Assignment	20
	Table A.1: Interrupt Assignments.....	20
A.2	Board Connectors and Jumpers	21
	Figure A.1 Connector & Jumper Locations (front).....	21
	Table A.2: Connectors and Jumpers	21
A.3	RS-232 Standard Serial Port.....	22
	Table A.3: RS-232 Serial Port Pin Assignments	22
A.4	RS-485 Serial Port (COM2)	22
	Table A.4: RS-485 Serial Port Pin Assignments	22

A.5	Power Connector (PWR)	23
	Table A.5: Power connector pin assignments	23
A.6	USB Connector	23
	Table A.6: USB 2.0 Connector Pin Assignments.....	23
A.7	HDMI Display Connector	24
	Table A.7: HDMI Display Connector	24
A.8	DisplayPort Display Connector	25
	Table A.8: DisplayPort adaptor cable pin assignment.....	25
A.9	Clear CMOS (JP2).....	26
	Table A.9: JP2 Clear CMOS.....	26
A.10	System Power AT or ATX Selection (JP1).....	26
	Table A.10:AT/ATX Selection	26

Chapter 1

Overview

This chapter overviews UNO-2362G's specifications.

Sections include:

- Introduction
- Hardware specification
- Safety precautions
- Chassis dimensions

1.1 Introduction

UNO-2362G is an embedded Application Ready Platform (ARP) that can shorten development time. It offers diverse networking interfaces to fulfill varying needs in different projects. UNO-2362G includes AMD's latest G-series technology and provides multiple interfaces including up to 2 serial ports, 1 x GbE LAN, 4 x USB ports. UNO-2362G supports two display types, DisplayPort and HDMI for various high resolution requirements.

UNO-2362G can operate in wide temperatures (from -10 ~ 60 °C / 14 ~ 140 °F). UNO-2362G uses an AMD G-series CPU with built-in memory up to 2G DDR3 RAM.

UNO-2362G provides great expansion including 2 x Mini PCIe and SIM card support. With these expansions and iDoor technology the UNO-2362G offers great expandability from Wi-Fi, 3G, I/O expansion and fieldbus card with iDoor technology.

With excellent OS and driver support, such as Windows XP/7/8, WES7, and embedded Linux, users can integrate applications easily in an application ready platform that provides versatile functions fulfilling diverse requirements.

1.2 Hardware Specifications

1.2.1 General

- **Certification:** CE, UL, CCC, FCC, BSMI
- **Dimensions (W x D x H):** 190 x 107 x 47 mm (7.5 x 4.2 x 1.8 in)
- **Enclosure:** Aluminum
- **Mounting:** Stand, Wall, VESA (Optional)
- **Power Consumption:** 14W(Typical)/24W(Max)
- **Power Requirements:** 24V+-15% @1A, AT/ATX
- **Weight:** 1.0 kg (2.2 lb)
- **OS Support:** Windows XP/7/8, WES7, Linux Fedora
- **System Design** Fanless
- **Remote Management:** Built-in Advantech DiagAnywhere agent on WES7

1.3 System Hardware

- **CPU:** AMD® G-series T40E 1.0GHz dual core (Socket: BGA413)
- **Memory:** 2 GB DDR3 SDRAM built-in
- **Indicators:** LEDs for power, battery, LAN (Active, Status) and HDD
- **Storage:**
 HDD: 1 x drive bay for SATA 2.5" HDD (Compatible with 9.5 mm (3.74 in) height HDD) (Optional)
 mSATA: 1 x Full Size Mini PCIe (Optional)
 CFast drive by iDoor Technology (Optional)
 Note: iDoor technology is only compatible with mSATA storage.
- **Display:** 1 x HDMI, 1 x DP (2 x independent displays)
- **Watchdog Timer:** NCT6776F, programmable 256 levels timer interval, from 1 to 255 sec
- **Mini PCIe Expansion:**
 2 x Full size Mini PCIe slots with 1 x SIM card (First slot (CN5) set as mSATA default)
- **iDoor Expansion Slot:** Yes

1.3.1 I/O Interfaces

- **Serial Ports** 1 x RS-232, 1 x RS-485 with DB9 connectors; automatic RS-485 data flow control
- **Serial Port Speed:** RS-232: 50 ~ 115.2 kbps
 RS-485: 50 ~ 115.2 kbps (Max.)
- **LAN:** 2 x 10/100/1000Base-T RJ-45 ports
 Supports 1 x GbE Daisy-Chain for Ethernet with auto-bypass protection enabled.
- **USB Ports:** 4 x USB ports

1.3.2 Environment

- **Humidity:** 95% @ 40 °C (85 °F) (non-condensing)
- **Operating Temperature:** -10 ~ 60 °C (14 ~ 140 °F) @ 5 ~ 85% RH. (with air flow)
- **Safety Cert. Temperature:** -10 ~ 50 °C (14 ~ 122 °F)
- **Shock Protection:** IEC 60068-2-27
 mSATA: 50 G @ wall mount, half sine, 11 ms
 HDD: 20 G @ wall mount, half sine, 11 ms
- **Vibration Protection:** IEC 60068-2-64 (Random 1 Oct./min, 1hr/axis.)
 mSATA: 2 Grms @ 5 ~ 500 Hz,
 HDD: 0.75 Grms @ 5 ~ 500 Hz

1.4 Safety Precautions

The following sections describe how to make each connection. In most cases, you will simply need to connect a standard cable.

Warning! Always disconnect the power cord from your chassis whenever you are working on it. Do not connect while the power is on. A sudden rush of power can damage sensitive electronic components. Only experienced electronics personnel should open the chassis.



Warning! Toujours débrancher le cordon d'alimentation de votre boîtier lorsque vous êtes travailler. Ne branchez pas lorsque l'appareil est allumé. Un afflux soudain de puissance peut endommager les composants électroniques sensibles. Seulement connu personnel de l'électronique devraient ouvrir le châssis.




Caution! Always ground yourself to remove any static electric charge before touching UNO-2362G. Modern electronic devices are very sensitive to static electric charges. Use a grounding wrist strap at all times. Place all electronic components on a static-dissipative surface or in a static-shielded bag.



Caution! Toujours à la terre pour éliminer toute charge d'électricité statique avant toucher UNO-2362G. Appareils électroniques modernes sont très sensibles à charges d'électricité statique. Utilisez un bracelet antistatique à tout moment. Placez tous composants électroniques sur une surface antistatique ou dans un statique-sac blindé.



1.5 Chassis Dimensions

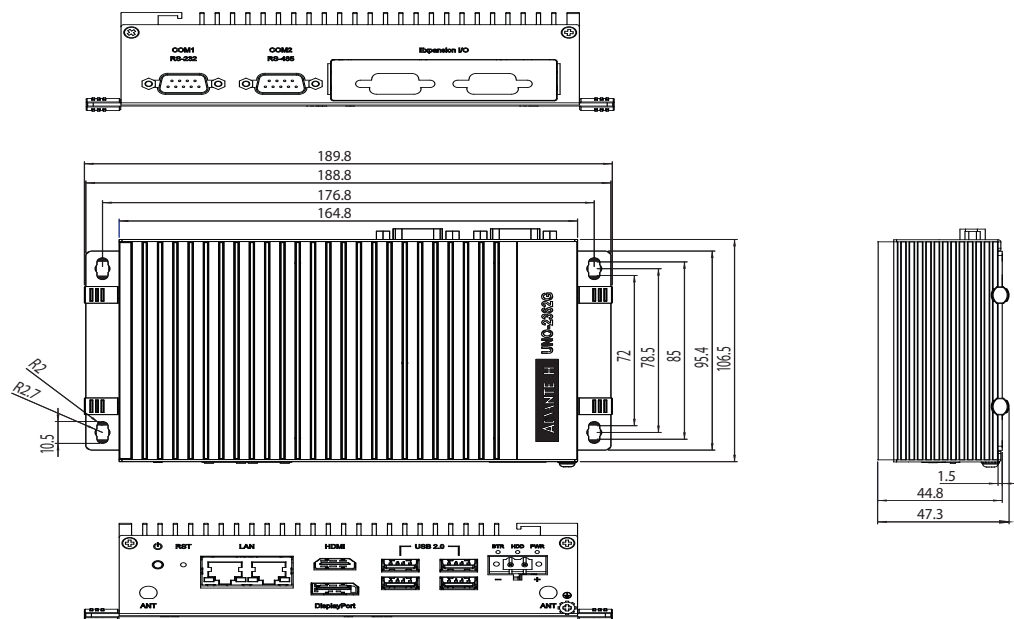

1.6 Accessories

Please refer below for the accessory list:

- 2-pin connector for power wiring (Advantech P/N: 1652002205)
- SATA cable (power and signal) (Advantech P/N: 1700022118-01)
- 1 PCS jumper (Advantech P/N: 1653302122)
- 4 PCS screws for HDD (Advantech P/N:1930000687)
- 4 PCS screws for mPCIe slot (Advantech P/N:1935020300)
- 4 PCS screws for UNO Mounting (Advantech P/N:1935040620)
- Driver DVD
- Warranty card

If anything is missing or damaged, contact your distributor or sales representative immediately.

Chapter 2

Hardware Functionality

This chapter details how to setup the UNO-2362G's hardware functions, including connecting peripherals, setting switches, and indicators.

Sections include:

- Introduction
- RS-232 Interface
- RS-485 Interface
- LAN / Ethernet Connector
- Power Connector
- USB Connector
- DP/HDMI Display Connector
- mPCIe Socket

2.1 Introduction

The following figures show the connectors on UNO-2362G. The following sections detail information about each peripheral.

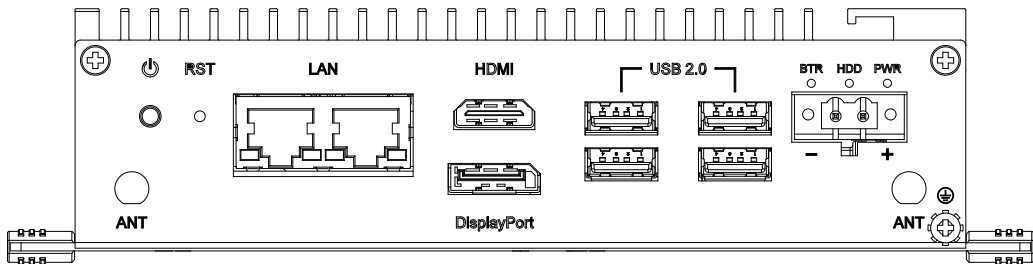


Figure 2.1 Front Panel of UNO-2362G

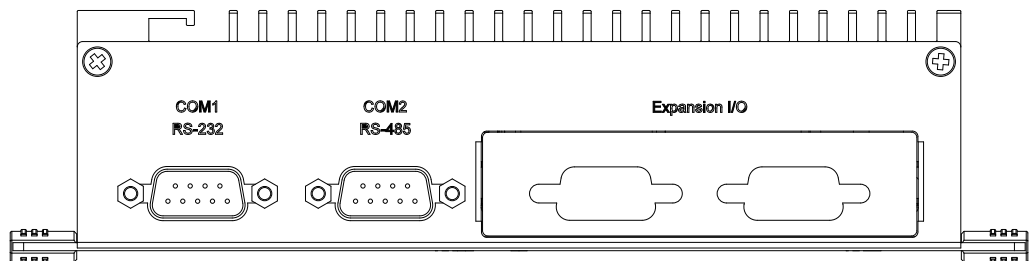


Figure 2.2 Rear Panel of UNO-2362G

2.2 UNO-2362G Interface (COM1~COM2)

UNO-2362G offers one standard RS-232 and one RS-485 (with cable) serial communication interface ports: COM1 ~ COM2.

The IRQ and I/O address range of COM1 to COM2 are listed below:

COM1: 3F8h, IRQ4

COM2: 2F8h, IRQ3

2.2.1 RS-232 Interface (COM 1)

The UNO-2362G offers one RS-232 serial communication interface ports: COM1. Please refer to Appendix A.3 for their pin assignments.

2.2.2 Automatic Data Flow Control Function for RS-485

In RS-485 mode, UNO-2362G automatically detects the direction of incoming data and switches its transmission direction accordingly. No handshaking signal (e.g. RTS signal) is necessary. This lets you conveniently build an RS-485 network with just two wires. More importantly, application software previously written for half duplex RS-232 environments can be maintained without modification.

2.3 LAN: Ethernet Connector

UNO-2362G is equipped with one Gigabit LAN controller. The controller chip used is the Realtek 8111E Ethernet controller with Marvell 88E6172 Giga Ethernet switch with daisy chain technology that is fully compliant with IEEE 802.3u 10/100Base-T CSMA/CD standards and IEEE 802.3ab specification for 1000Mbps Ethernet. The Ethernet port provides two standard RJ-45 jacks on board, and LED indicators on the front side to show its Link (100Mbps orange LED, 1000Mbps green LED) and Active (flashing green LED) status.

2.4 Power Connector

The UNO-2362G comes with a Phoenix connector that carries 24V_{DC} external power input, and features reversed wiring protection. Therefore, it will not cause any damage to the system by reversed wiring of ground line and power line. Please refer to Appendix A.5

2.5 USB Connector

The USB interface supports Plug-and-Play, which enables users to connect or disconnect a device whenever you want, without turning off the computer. UNO-2362G provides four connectors for USB interfaces, which enables Plug-and-Play and hot swapping for up to 127 external devices. Two of six connectors are compatible with USB 3.0 device but only with USB 2.0 speed. The USB interface complies with USB EHCI, Rev. 2.0. The USB interface can be disabled in the system BIOS setup. Please refer to Appendix A.6 for its pin assignments.

2.6 DisplayPort/HDMI Display Connector

The UNO-2362G provides a DisplayPort/HDMI controller for a high resolution interface. UNO-2362G supports up to full HD resolution for two independent displays.

2.7 RTC Battery Specification

UNO-2362G features a RTC Battery to ensure the BIOS settings and system clock can be kept if the power is disconnected for a short time.

- **Type:** BR2032 (Using CR2032 is NOT recommended)
- **Output Voltage:** 3 V_{DC}
- **Location:** BH1, please refer to below figure

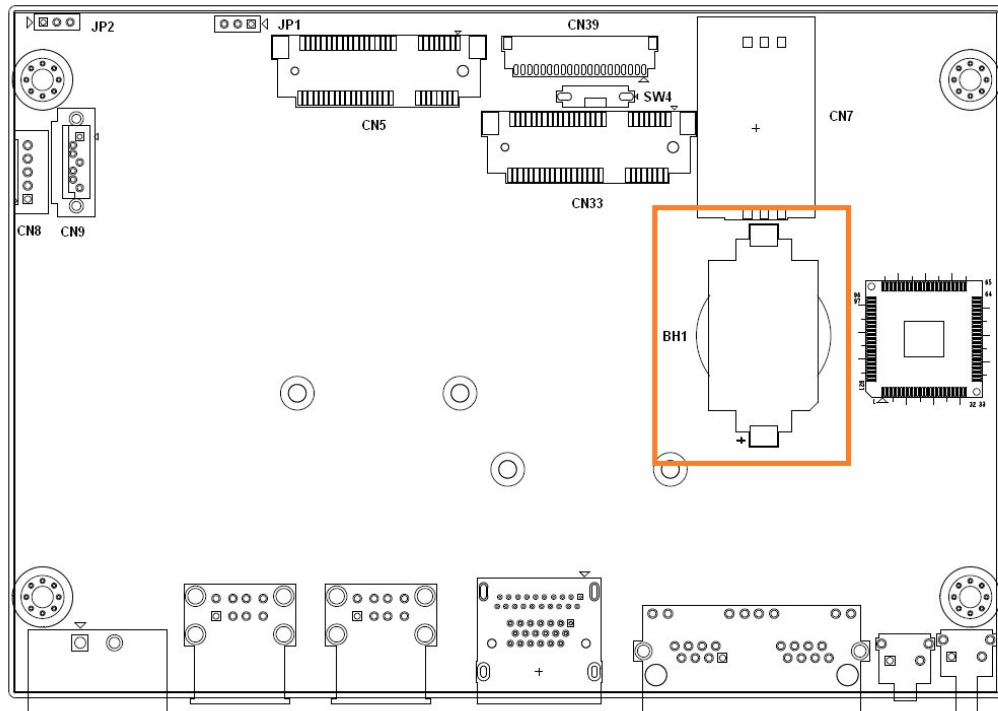


Figure 2.3 RTC Battery Location

2.8 Power Button/Power Management

Press the "PWR" button to power on or power off UNO-2362G (ATX type). UNO-2362G supports the ACPI (Advanced Configuration and Power Interface). Besides power on/off, it supports multiple suspend modes, such as Power on Suspend (S1), Suspend to RAM (S3), Suspend to Disk (S4).


2.9 Reset Button

Press the "Reset" button to activate the hardware reset function.

2.10 PCI Express Mini Card Socket

The UNO-2362G supports two sockets for full size PCI Express mini cards. The first interface (CN5) is the default defined for mSATA storage. The second (CN33) interface supports iDoor technology/module for applications that require an isolated COM port, Profibus, WLAN GPRS, 3G, mRAM and so on. Users can easily install the card via the optional kit, please refer to Chapter 3.5 for further details.

An additional SIM card slot is used for 3G applications. Please note you still need to install a 3G Mini-PCIe module to use 3G functions.

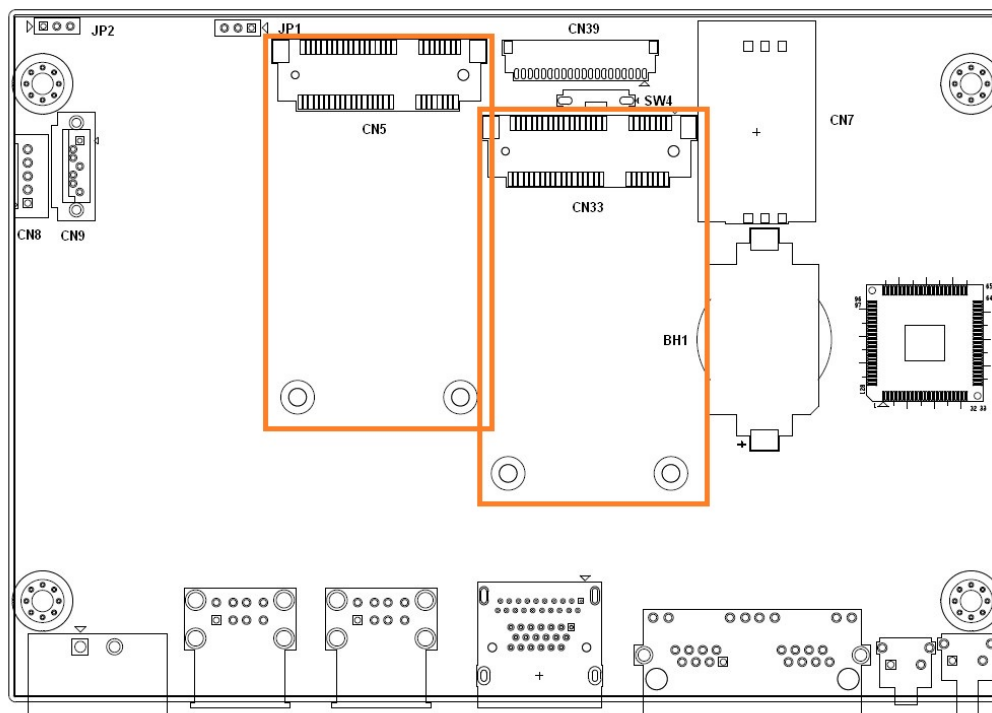

Chapter 3

Initial Setup

This chapter details instructions on initializing the UNO-2362G.

Sections include:

- Inserting a mSATA
- Chassis Grounding
- Connecting Power
- Installing a Hard Disk
- Installing a wireless LAN card and Antenna
- BIOS Setup

3.1 Inserting a mSATA

1. Remove the power cord.
2. Unscrew the six screws on the bottom cover.
3. Plug a mSATA card with your OS and application program into the first mPCIe slot(CN5).
4. Screw the two screws on board to fix the mSATA.
5. Screw the bottom cover back on.

3.2 Chassis Grounding

UNO-2362G provides good EMI protection and a stable grounding base. Use the easy-to-connect chassis grounding point.

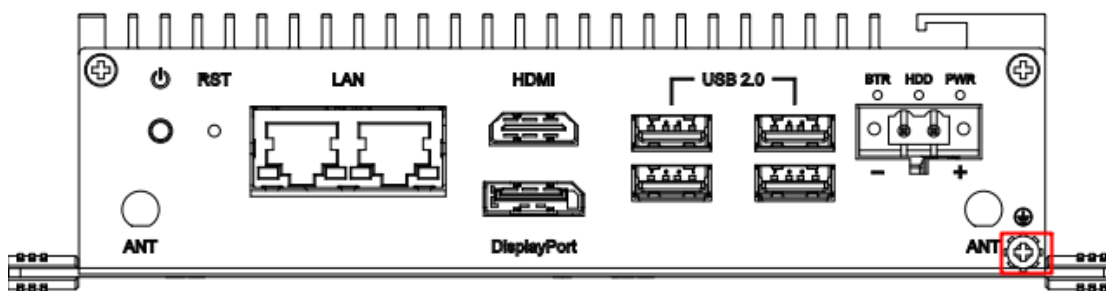


Figure 3.1 Chassis Grounding Connection

Please also note that system ground and chassis ground are separated in UNO-2362G.

3.3 Connecting Power


Connect the UNO-2362G to a 24 V_{DC} power source. The power source can either be from a power adapter or an in-house power source.

3.4 Installing a Hard Disk


The procedure for installing a hard disk into the UNO-2362G is displayed below. Please follow these steps carefully. Please note: the system is not compatible with +12V HDD.


Please use an HDD with a lower power input.

1. Remove the power cord.
2. Unscrew the four screws from the bottom cover.
3. Screw the HDD onto the bottom cover.

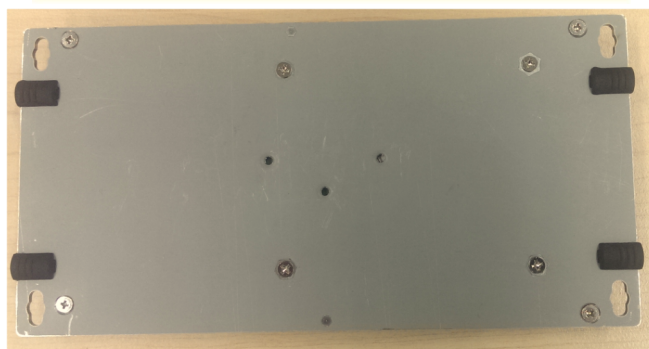

4. Connect the SATA signal cable to CN9 and SATA power cable to CN8. Then connect the other side of the cable to the SATA hard disk.

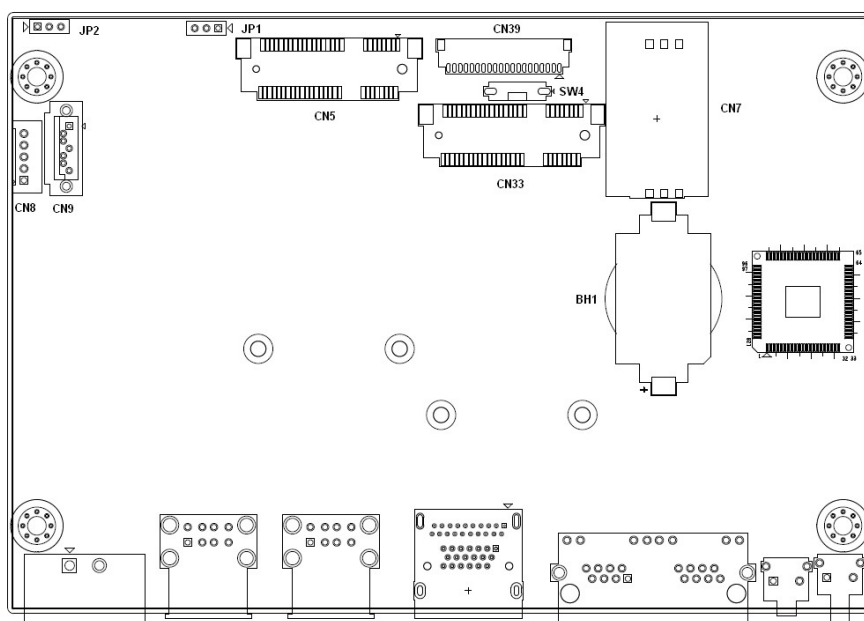

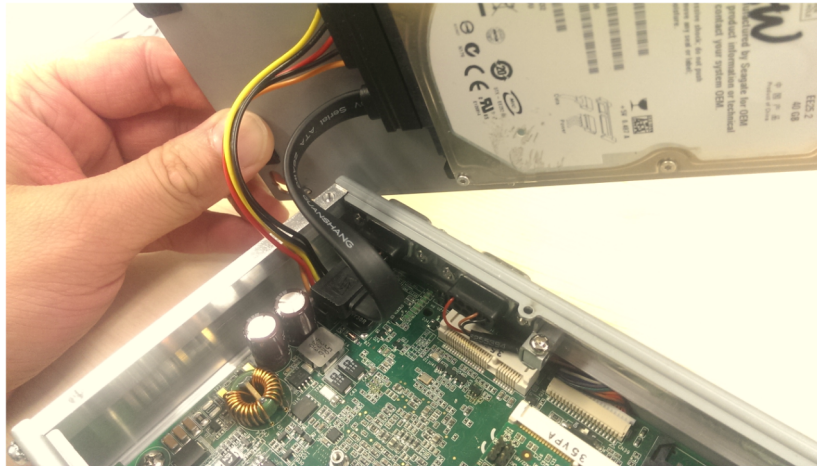

5. Return the bottom cover using four screws.


3.5 BIOS Setup

Press “F2” in the boot-up screen to enter the BIOS setup utility. Please follow the instructions on the screen to make the necessary settings.

Please note that you can try to “Restore Defaults” from the BIOS Setup manual if the UNO-2362G does not work properly.


3.6 Din Rail Kit Assembly

The UNO-2362G supports Din-Rail mounting. Order an additional Din rail kit (Advantech P/N: UNO-DIN11-AE) and assemble it using the instructions below.

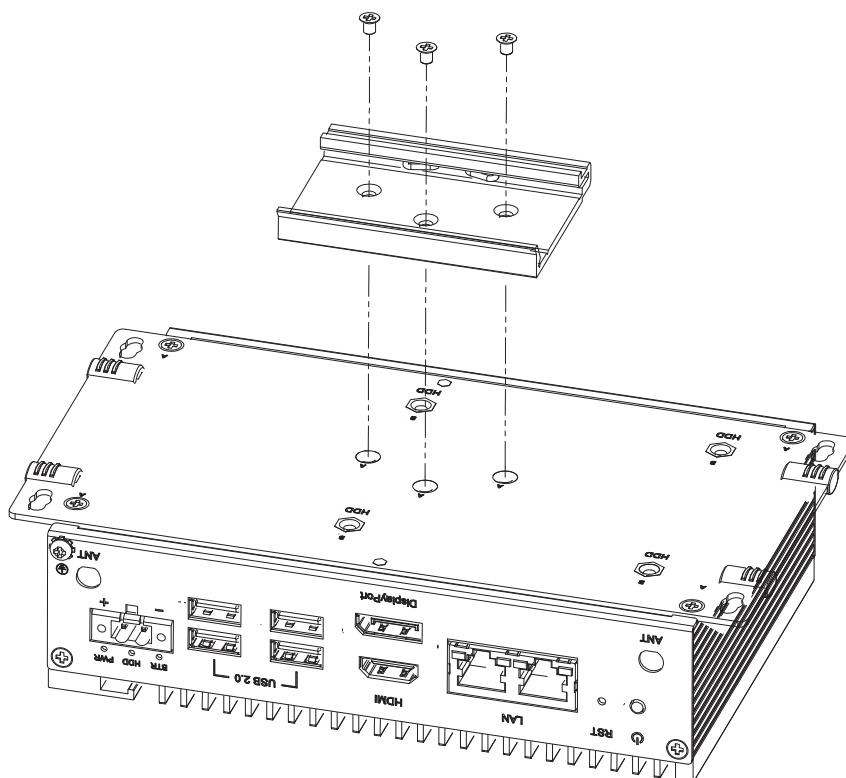

3.7 Daisy Chain for Ethernet

The UNO-2362G series saves time and money by providing an alternative way to hook up your Ethernet switches. Since each UNO-2362G unit has built-in Ethernet switches, the solution is tailor-made for a daisy-chain type configurations.

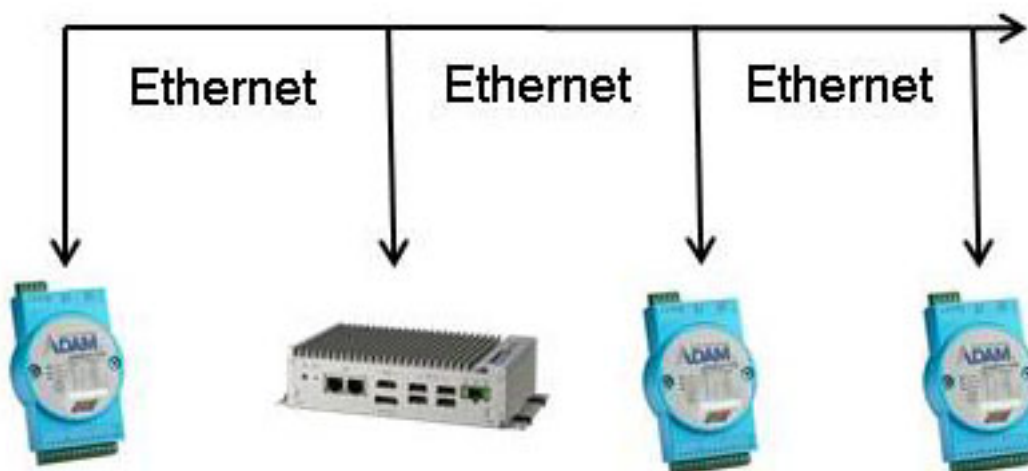

Appendix **A**

System Settings and
Pin Assignments

A.1 System I/O Address and Interrupt Assignment

Table A.1: Interrupt Assignments

Interrupt No.	Interrupt Source
NMI	Parity Error Detected
IRQ 0	Interval timer
IRQ 1	Keyboard
IRQ 2	Interrupt from controller 2 (cascade)
IRQ 3	COM 2
IRQ 4	COM 1
IRQ 8	Real-time clock
IRQ 9	Microsoft ACPI-Compliant System
IRQ 16	LAN
IRQ 17	USB
IRQ 18	USB and graphics
IRQ 19	HD audio and SATA

A.2 Board Connectors and Jumpers

There are several connectors and jumpers on the UNO-2362G board. The following sections tell you how to configure the UNO-2362G hardware setting. Figure A.1 shows the locations of UNO-2362G's connectors and jumpers.

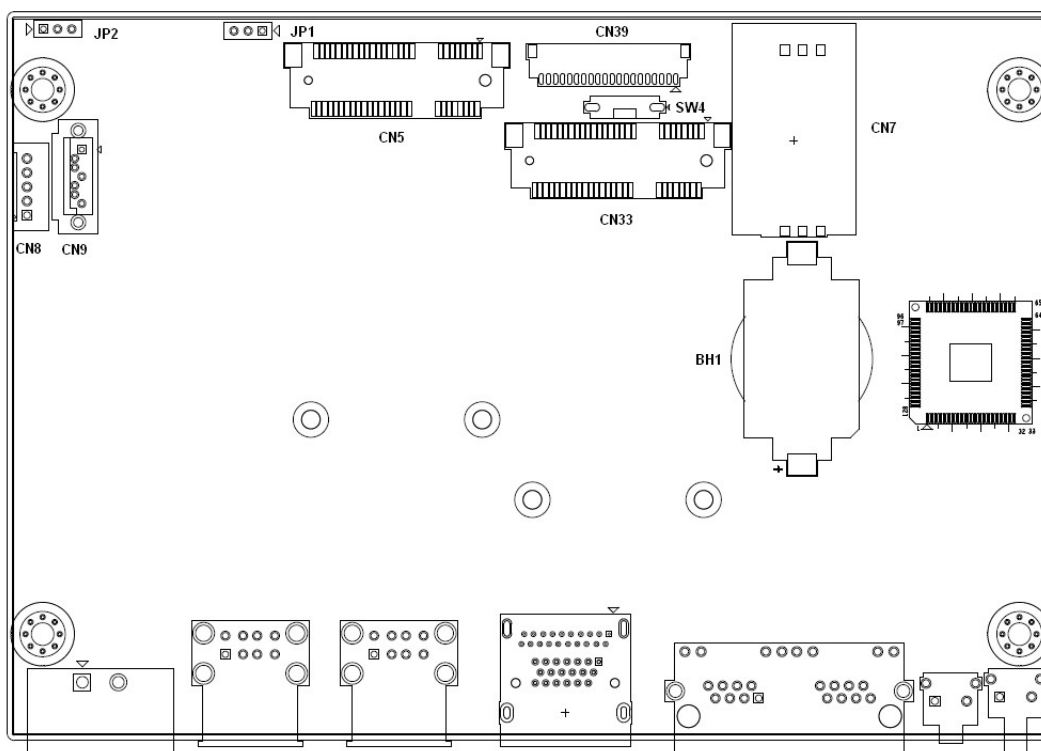


Figure A.1 Connector & Jumper Locations (front)

Table A.2: Connectors and Jumpers

Label	Function
CN5	mPCIe Slot (default mSATA)
CN33	mPCIe slot (support iDoor technology).
CN8	SATA power connector
CN9	SATA signal connector
BH1	Battery for RTC
CN39	Connector for RS-232 and RS-485
JP1	System power AT or ATX selection
CN7	SIM Card
JP2	Clear CMOS

A.3 RS-232 Standard Serial Port

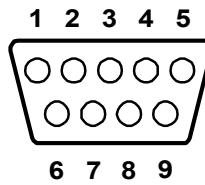


Table A.3: RS-232 Serial Port Pin Assignments

Pin	Pin Name
1	DCD
2	RxD
3	TxD
4	DTR
5	GND
6	DSR
7	RTS
8	CTS
9	RI

A.4 RS-485 Serial Port (COM2)

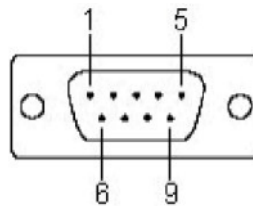


Table A.4: RS-485 Serial Port Pin Assignments

Pin	RS-485
1	Data-
2	Data+
3	NC
4	NC
5	GND
6	NC
7	NC
8	NC
9	NC

A.5 Power Connector (PWR)

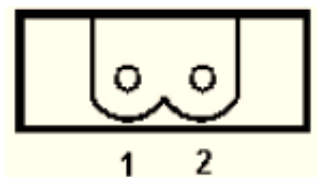


Table A.5: Power connector pin assignments

Pin	
1	V+ (24+-15%)
2	V-

A.6 USB Connector

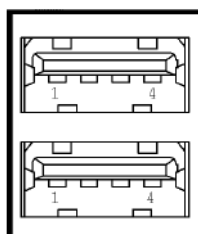


Table A.6: USB 2.0 Connector Pin Assignments

Pin	Signal Name	Cable Color
1	VCC	Red
2	DATA-	White
3	DATA+	Green
4	GND	Black

A.7 HDMI Display Connector

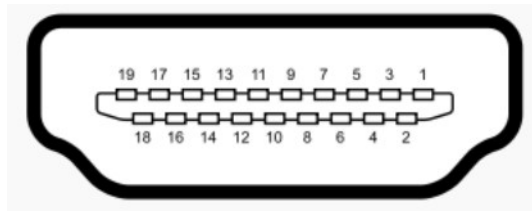


Table A.7: HDMI Display Connector

Pin	Signal	Pin	Signal
1	TMDS Data2+	2	TMDS Data2 Shield
3	TMDS Data2-	4	TMDS Data1+
5	TMDS Data1 Shield	6	TMDS Data1-
7	TMDS Data0+	8	TMDS Data0 Shield
9	TMDS Data0-	10	TMDS Clock+
11	TMDS Clock Shield	12	TMDS Clock-
13	CEC	14	Reserved
15	SCL	16	SDA
17	DDC/CEC/HEC Ground	18	+5 V Power (max 50 mA)
19	Hot Plug Detect		

A.8 DisplayPort Display Connector

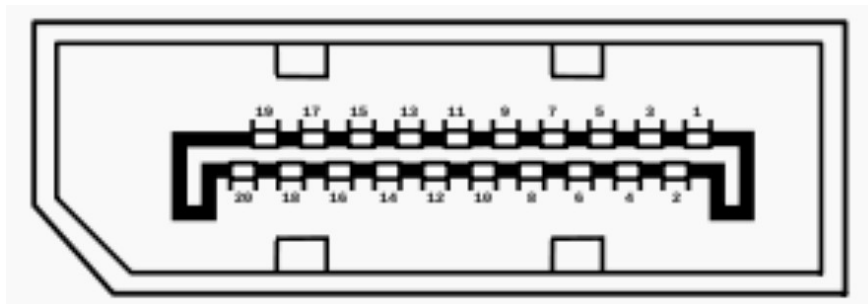


Table A.8: DisplayPort adaptor cable pin assignment



Pin	Signal Name
1	ML_Lane 0 (p)
2	GND
3	ML_Lane 0 (n)
4	ML_Lane 1 (p)
5	GND
6	ML_Lane 1 (n)
7	ML_Lane 2 (p)
8	GND
9	ML_Lane 2 (n)
10	ML_Lane 3 (p)
11	GND
12	ML_Lane 3 (n)
13	CONFIG1
14	CONFIG2
15	AUX CH (p)
16	GND
17	AUX CH (n)
18	Hot Plug
19	Return
20	DP_PWR

A.9 Clear CMOS (JP2)

This jumper is used to erase CMOS data and reset system BIOS information. Follow the procedures below to clear the CMOS.

1. Turn off the system.
2. Close jumper JP2 (2-3) to clear CMOS
3. Wait for 5 seconds.
4. Close jumper JP2 (1-2).
5. Turn on the system. The BIOS is reset to its default setting.

 
 
Table A.9: JP2 Clear CMOS

Configuration	Function
	Clear CMOS
	Normal (Default)

A.10 System Power AT or ATX Selection (JP1)

UNO-2362G can set AT or ATX power mode in the BIOS or hardware jumper setting.

  Table A.10: AT/ATX Selection

Configuration	Function
	AT mode
	ATX mode (default)

www.advantech.com

Please verify specifications before quoting. This guide is intended for reference purposes only.

All product specifications are subject to change without notice.

No part of this publication may be reproduced in any form or by any means, electronic, photocopying, recording or otherwise, without prior written permission from the publisher.

All brand and product names are trademarks or registered trademarks of their respective companies.

© Advantech Co., Ltd. 2020