

Neousys Technology Inc.

Nuvo-261xRL Series

User Manual

Revision 1.2

Table of Contents

Table of Contents	2
Legal Information	5
Contact Information	6
Declaration of Conformity	6
Copyright Notice	7
Safety Precautions	8
Hot Surface Warning	8
Battery Warning	8
Service and Maintenance	9
ESD Precautions	9
Restricted Access Location	9
About This Manual	10

1 Introduction

1.1 Product Specifications.....	12
1.1.1 Nuvo-2610RL.....	12
1.1.2 Nuvo-2615RL.....	14
1.2 Nuvo-2610RL Dimensions	16
1.2.1 Nuvo-2610RL Top View	16
1.2.2 Nuvo-2610RL Front View	17
1.2.3 Nuvo-2610RL Rear View	17
1.2.4 Nuvo-2610RL Side View	18
1.3 Nuvo-2615RL Dimensions	19
1.3.1 Nuvo-2615RL Top View	19
1.3.2 Nuvo-2615RL Front View	20
1.3.3 Nuvo-2615RL Rear View	20
1.3.4 Nuvo-2615RL Side View	21
1.4 Nuvo-2610RL Damping Bracket Dimensions	22
1.4.1 Nuvo-2610RL Top View with Damping Bracket Installed	22
1.4.2 Nuvo-2610RL I/O Panel View with Damping Bracket Installed	23
1.4.3 Nuvo-2610RL Side View with Damping Bracket Installed	23
1.4.4 Nuvo-2610RL Bottom View with Damping Bracket Installed	24
1.5 Nuvo-2610RL Wall Mount Bracket Dimensions	25
1.5.1 Nuvo-2610RL Top View with Wall Mount Bracket Installed	25
1.5.2 Nuvo-2610RL I/O Panel View with Wall Mount Installed	26
1.5.3 Nuvo-2610RL Side View with Wall Mount Bracket Installed.....	26
1.5.4 Nuvo-2610RL Bottom View with Wall Mount Installed.....	27
1.6 Nuvo-2615RL Damping Bracket Dimensions	28
1.6.1 Nuvo-2615RL Top View with Damping Bracket Installed	28
1.6.2 Nuvo-2615RL I/O Panel View with Damping Bracket Installed	29
1.6.3 Nuvo-2615RL Side View with Damping Bracket Installed	29
1.6.4 Nuvo-2615RL Bottom View with Damping Bracket Installed	30
1.7 Nuvo-2615RL Wall-mount Dimensions	31
1.7.1 Top View with Wall-mount Installed.....	31
1.7.2 Panel View with Wall-mount Installed	32
1.7.3 Side View with Wall-mount Installed	32
1.7.4 Bottom View with Wall-mount Installed	33

2 System Overview

2.1 Nuvo-2610RL Packing List	34
2.1 Nuvo-2615RL Packing List	34
2.3 Front Panel I/O	35
2.3.1 Power Button	37
2.3.2 3.5mm 4-pole Audio Jack.....	37
2.3.3 CMOS Reset Button	38
2.3.4 USB3.1 Gen1 Port	38
2.3.5 USB2.0 Port.....	39

2.3.6	Reset Button	39
2.3.7	COM Ports (COM2/ COM3/ COM4)	40
2.3.8	COM 1 Port	41
2.3.9	System Status LED	42
2.3.10	DVI-I Port	43
2.4	Rear Panel I/O	44
2.4.1	3-pin Terminal Block DC Input	45
2.4.2	M12 X-coded PoE Port	46
2.4.3	Isolated Digital Input/ Output	48
2.5	Internal I/O Functions	49
2.5.1	M.2 2280 (SATA Signal Only) Slot for SSD	49
2.5.2	DRAM SO-DIMM Slot	51
2.5.3	Mini-PCIe Slot (USB2.0 Signal Only)	52
2.5.4	Mini-PCIe Slot (PCIe and USB2.0 Signal)	54
2.5.5	M.2 3042/ 3052 B Key Socket	56

3 System Installation

3.1	Disassembling the System	59
3.1.1	Disassembling Nuvo-2610RL	59
3.1.2	Disassembling Nuvo-2615RL	62
3.2	Installing Internal Components	66
3.2.1	DDR4 SO-DIMM Installation	66
3.2.2	M.2 2280 SSD Installation	68
3.2.3	M.2 3042/ 3052 B Key Installation	70
3.2.4	miniPCIe Installation	73
3.3	Installing the System Enclosure	75
3.3.1	Installing the Nuvo-2610RL Enclosure	75
3.3.2	Installing the Nuvo-2615RL Enclosure	78
3.4	2.5" Hard Drive/ SSD Installation	82
3.5	Replacing the Supercapacitor UPS Module	84
3.6	Damping Bracket Installation	91
3.7	Wall Mount Bracket Installation (Optional Accessory)	95
3.8	Powering On the System	99
3.8.1	Powering On Using the Power Button	99
3.8.2	Powering On Using Wake-on-LAN	100

4 System Configuration

4.1	BIOS Settings	102
4.1.1	COM 1 Port Configuration	103
4.1.2	COM 2/ 3/ 4 Ports	104
4.1.3	COM Port High Speed Mode	105
4.1.4	Power On After Power Failure Option	106
4.1.5	Wake on LAN Option	107
4.1.6	Add Boot Options	108
4.1.7	Watchdog Timer for Booting	109

5 OS Support and Driver Installation

5.1	Operating System Compatibility	110
5.2	Driver Installation	110
5.3	Driver Installation for Watchdog Timer Control	110

Appendix A Using WDT & DIO

Watchdog Timer	111
Installing WDT_DIO Library	111
WDT and DIO Library Installation	112
WDT Functions	114
InitWDT	114
SetWDT	114

StartWDT	115
ResetWDT	115
StopWDT	115
DIO Functions.....	116
InitDIO.....	116
DIReadLine	116
DIReadPort	116
DOWriteLine.....	117
DOWritePort.....	117

Appendix B PoE On/ Off Control

GetStatusPoEPort	118
EnablePoEPort	119
DisablePoEPort	120

Legal Information

All Neosys Technology Inc. products shall be subject to the latest Standard Warranty Policy

Neosys Technology Inc. may modify, update or upgrade the software, firmware or any accompanying user documentation without any prior notice. Neosys Technology Inc. will provide access to these new software, firmware or documentation releases from download sections of our website or through our service partners.

Before installing any software, applications or components provided by a third party, customer should ensure that they are compatible and interoperable with Neosys Technology Inc. product by checking in advance with Neosys Technology Inc.. Customer is solely responsible for ensuring the compatibility and interoperability of the third party's products. Customer is further solely responsible for ensuring its systems, software, and data are adequately backed up as a precaution against possible failures, alternation, or loss.

For questions in regards to hardware/ software compatibility, customers should contact Neosys Technology Inc. sales representative or technical support.

To the extent permitted by applicable laws, Neosys Technology Inc. shall NOT be responsible for any interoperability or compatibility issues that may arise when (1) products, software, or options not certified and supported; (2) configurations not certified and supported are used; (3) parts intended for one system is installed in another system of different make or model.

Contact Information

Headquarters
(Taipei, Taiwan) **Neosys Technology Inc.**
15F, No.868-3, Zhongzheng Rd., Zhonghe Dist., New Taipei City, 23586, Taiwan
Tel: +886-2-2223-6182 Fax: +886-2-2223-6183 [Email](#), [Website](#)

Americas
(Illinois, USA) **Neosys Technology America, Inc.**
3384 Commercial Avenue, Northbrook, IL 60062, USA
Tel: +1-847-656-3298 [Email](#), [Website](#)

China **Neosys Technology China Co., Ltd.**
Room 429 /431, Building 32, Guiping Road 680, Shanghai, 200233, China
Tel: +86-2161155366 [Email](#), [Website](#)

Declaration of Conformity

FCC This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at own expense.

CE The product(s) described in this manual complies with all applicable European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.

Copyright Notice

All rights reserved. This publication may not be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written consent of Neosys Technology, Inc.

Disclaimer

This manual is intended to be used as an informative guide only and is subject to change without prior notice. It does not represent commitment from Neosys Technology Inc. Neosys Technology Inc. shall not be liable for any direct, indirect, special, incidental, or consequential damages arising from the use of the product or documentation, nor for any infringement on third party rights.

Patents and Trademarks

Neosys, the Neosys logo, Expansion Cassette, MezIO™ are registered patents and trademarks of Neosys Technology, Inc.

Windows is a registered trademark of Microsoft Corporation.

Intel®, Core™ are registered trademarks of Intel Corporation

NVIDIA®, GeForce® are registered trademarks of NVIDIA Corporation

All other names, brands, products or services are trademarks or registered trademarks of their respective owners.

Safety Precautions

Read these instructions carefully before you install, operate, or transport the system.

- Install the system or DIN rail associated with, at a sturdy location
- Install the power socket outlet near the system where it is easily accessible
- Secure each system module(s) using its retaining screws
- Place power cords and other connection cables away from foot traffic. Do not place items over power cords and make sure they do not rest against data cables
- Shutdown, disconnect all cables from the system and ground yourself before touching internal modules
- Ensure that the correct power range is being used before powering the device
- Should a module fail, arrange for a replacement as soon as possible to minimize down-time
- By means of a power cord connected to a socket-outlet with earthing connection
- This product is intended to be supplied by a Listed Power Adapter or DC power source, rated 43-160Vdc, 4A, Tma 70 degree C and 2000m altitude during operation. If further assistance is required, please contact Neousys Technology
- If the system is not going to be used for a long time, disconnect it from mains (power socket) to avoid transient over-voltage
- The unit is to be connected only to PoE networks without routing to the outside plant

Hot Surface Warning



HOT SURFACE. DO NOT

TOUCH."ATTENTION: Surface chaude. Ne pas toucher."

WARNING!

Components/ parts inside the equipment may be hot to touch!

Please wait one-half hour after switching off before handling parts.

Battery Warning

Caution!



- Batteries are at risk of exploding if incorrectly installed
- Do not attempt to recharge, force open, or heat the battery
- Replace the battery only with the same or equivalent type recommended by the manufacturer

Service and Maintenance

- ONLY qualified personnel should service the system
- Shutdown the system, disconnect the power cord and all other connections before servicing the system
- When replacing/ installing additional components (expansion card, memory module, etc.), insert them as gently as possible while assuring proper connector engagement

ESD Precautions

- Handle add-on module, motherboard by their retention screws or the module's frame/ heat sink. Avoid touching the PCB circuit board or add-on module connector pins
- Use a grounded wrist strap and an anti-static work pad to discharge static electricity when installing or maintaining the system
- Avoid dust, debris, carpets, plastic, vinyl and styrofoam in your work area
- Do not remove any module or component from its anti-static bag before installation

Restricted Access Location

The controller is intended for installation only in certain environments where both of the following conditions apply:

- Access can only be gained by **QUALIFIED SERVICE PERSONNEL** who have been instructed on the reasons for restrictions applied to the location and any precautions that shall be taken
- Access is through the use of a **TOOL**, lock and key, or other means of security, and is controlled by the authority responsible for the location

About This Manual

This guide introduces Neousys Nuvo-261xRL series system, an Intel® Elkhart Lake Atom® fanless in-vehicle computer.

The guide also demonstrates the system's basic installation procedures.

Revision History

Version	Date	Description
1.0	Mar. 2023	Initial release
1.1	Feb. 2024	Updated LED status definition
1.2	Nov. 2024	Updated Nuvo-2610RL system

1 Introduction

The Nuvo-261xRL series is a rugged Intel® Atom®-based in-vehicle computer that incorporates four M12 Gigabit PoE+ connectors and one front-accessible 2.5" HDD tray, supporting up to 15mm height HDD/SSD. It is designed to fulfill multi-purpose railway applications from mobile gateways, data loggers, to network video recorders (NVR).



Nuvo-2610RL



Nuvo-2615RL

Powered by Intel® Elkhart Lake Atom® x6425E quad-core CPU, the Nuvo-2615RL series delivers 1.8x the CPU performance when compared with the previous generation. To provide robust Ethernet connectivity, the Nuvo-2615RL series offers four Gigabit PoE+ ports via M12 x-coded connectors and one USB 3.1 ports with the screw-lock mechanism. In addition to the internal M.2 2280 SATA SSD for system storage, Nuvo-2615RL also has one front-accessible 2.5" HDD tray accommodating a 2.5" SATA HDD/SSD with up to 15mm height and 5TB capacity. For internal expansion, it provides two mini-PCIe sockets for WiFi, GNSS, and CAN modules plus one M.2 3042/3052 B Key socket for 4G/5G mobile broadband module.

The Nuvo-2615RL is equipped with an embedded SuperCAP UPS to withstand power interruptions or voltage fluctuations on the train and can sustain the system for a proper shutdown when the power is cut-off.

By integrating an Intel Atom® quad-core x6425E, -40°C to 70°C fanless operations, wide-range 43V to 160V DC input, and 4G LTE / 5G NR connectivity, the Nuvo-2615RL series can withstand harsh and unstable electrical environments. With rugged M12 PoE+ connectivity and built-in SuperCAP UPS, it is an ideal multi-purpose computer for rolling stock applications.

1.1 Product Specifications

1.1.1 Nuvo-2610RL

System Core	
Processor	Intel® Elkhart Lake Atom® x6425E quad-core 2.0GHz/3.0GHz 12W processor
Graphics	Integrated Intel® UHD Graphics
Memory	Up to 32GB DDR4-3200 SDRAM by one SODIMM socket
TPM	Supports fTPM 2.0
I/O Interface	
Ethernet Port	4x Gigabit Ethernet ports via M12 x-coded connectors by Intel® I210
PoE Capability	In compliant with IEEE 802.3at PoE+ PSE, maximum 25.5W output on single PoE+ port. Total PoE+ power budget: 50W
Video Port	VGA and DVI dual display outputs via DVI-I connector
USB 3.1	1x USB 3.2 Gen1 (5 Gbps) port with screw-lock
USB 2.0	2x USB 2.0 port with screw-lock
Serial Port	1x isolated RS-485 port with 15 kV ESD protection (COM1) 3x 3-wire RS-232 ports (COM2/3/4) or 1x RS-422/485 (COM2)
Isolated DIO	4-CH isolated DI and 4-CH isolated DO
Audio	1x 3.5 mm jack for mic-in and speaker-out
Storage Interface	
M.2 SATA	1x M.2 2280 M key (SATA interface only) socket for SATA SSD installation
SATA HDD	1x front-accessible HDD tray for 2.5" HDD/ SSD installation (up to 15mm height)
Expansion Bus	
Mini PCI Express	1x full-size mini PCI Express socket with PCIe and USB 2.0 signal 1x full-size mini PCI Express socket with USB 2.0 signal
M.2 B Key	1x M.2 3042/3052 B key (USB 3.1 + USB 2.0) for 4G/ 5G module with dual internal micro SIM sockets
Power Supply	
DC Input	1x 3-pin pluggable terminal block for 43V to 160V DC input
Max. Power Consumption	<ul style="list-style-type: none"> ● CPU 12W / 16GB D4-3200 / 256 GB SATA SSD - 100% CPU loading: 32W @ 35V ● CPU 12W / 16GB D4-3200 / 256 GB SATA SSD - 100% CPU loading + 4x PoE (25.5W each): 135W @ 35V
Mechanical	
Dimension	205 mm (W) x 156 mm (D) x 58 mm (H)

Weight	2.1kg
Mounting	Damping bracket (standard) Wall-mount (optional)
Environmental	
Operating Temperature	-40°C to 70°C*, compliant with EN50155 Class OT4
Storage Temperature	-40°C to 85°C*
Humidity	10% to 90%, non-condensing
Vibration	IEC61373:2010, Category 1, Class B Body Mounted (part of EN 50155)
Shock	IEC61373:2010, Category 1, Class B Body Mounted (part of EN 50155)
EMC	EN 50155:2017, Clause 13.4.8 CE/FCC Class A, according to EN 55032 & EN 55035
EN50155	All mandatory sections of EN 50155:2017 EN50155 Class S1, EN50155 C1
EN45545	EN 45545-2 (Fire protection on railway vehicles)

* For sub-zero and over 60°C operating temperature, a wide temperature HHD or Solid State Disk (SSD) is required.

1.1.2 Nuvo-2615RL

System Core	
Processor	Intel® Elkhart Lake Atom® x6425E quad-core 2.0GHz/3.0GHz 12W processor
Graphics	Integrated Intel® UHD Graphics
Memory	Up to 32GB DDR4-3200 SDRAM by one SODIMM socket
TPM	Supports fTPM 2.0
I/O Interface	
Ethernet Port	4x Gigabit Ethernet ports via M12 x-coded connectors by Intel® I210
PoE Capability	In compliant with IEEE 802.3at PoE+ PSE, maximum 25.5W output on single PoE+ port. Total PoE+ power budget: 50W
Video Port	VGA and DVI dual display outputs via DVI-I connector
USB 3.1	1x USB 3.2 Gen1 (5 Gbps) port with screw-lock
USB 2.0	2x USB 2.0 port with screw-lock
Serial Port	1x isolated RS-485 port with 15 kV ESD protection (COM1) 3x 3-wire RS-232 ports (COM2/3/4) or 1x RS-422/485 (COM2)
Isolated DIO	4-CH isolated DI and 4-CH isolated DO
Audio	1x 3.5 mm jack for mic-in and speaker-out
Storage Interface	
M.2 SATA	1x M.2 2280 M key (SATA interface only) socket for SATA SSD installation
SATA HDD	1x front-accessible HDD tray for 2.5" HDD/ SSD installation (up to 15mm height)
Expansion Bus	
Mini PCI Express	1x full-size mini PCI Express socket with PCIe and USB 2.0 signal 1x full-size mini PCI Express socket with USB 2.0 signal
M.2 B Key	1x M.2 3042/3052 B key (USB 3.1 + USB 2.0) for 4G/ 5G module with dual internal micro SIM sockets
Power Supply	
DC Input	1x 3-pin pluggable terminal block for 43V to 160V DC input
Max. Power Consumption	<ul style="list-style-type: none"> ● CPU 12W / 16GB D4-3200 / 256 GB SATA SSD - 100% CPU loading: 32W @ 35V ● CPU 12W / 16GB D4-3200 / 256 GB SATA SSD - 100% CPU loading + 4x PoE (25.5W each): 135W @ 35V
Power Backup	
Capacity	2500 watt-second
Mechanical	
Dimension	205 mm (W) x 156 mm (D) x 86 mm (H)

Weight	2.7kg
Mounting	Damping bracket (standard) Wall-mount (optional)
Environmental	
Operating Temperature	-40°C to 70°C*, compliant with EN50155 Class OT4
Storage Temperature	-40°C to 85°C*
Humidity	10% to 90%, non-condensing
Vibration	IEC61373:2010, Category 1, Class B Body Mounted (part of EN 50155)
Shock	IEC61373:2010, Category 1, Class B Body Mounted (part of EN 50155)
EMC	EN 50155:2017, Clause 13.4.8 CE/FCC Class A, according to EN 55032 & EN 55035
EN50155	All mandatory sections of EN 50155:2017 Nuvo-2610RL: EN50155 Class S1, EN50155 C1 Nuvo-2615RL: EN50155 Class S3, EN50155 C2
EN45545	EN 45545-2 (Fire protection on railway vehicles)

* For sub-zero and over 60°C operating temperature, a wide temperature HHD or Solid State Disk (SSD) is required.


1.2 Nuvo-2610RL Dimensions




NOTE

All measurements are in millimeters (mm).


1.2.1 Nuvo-2610RL Top View

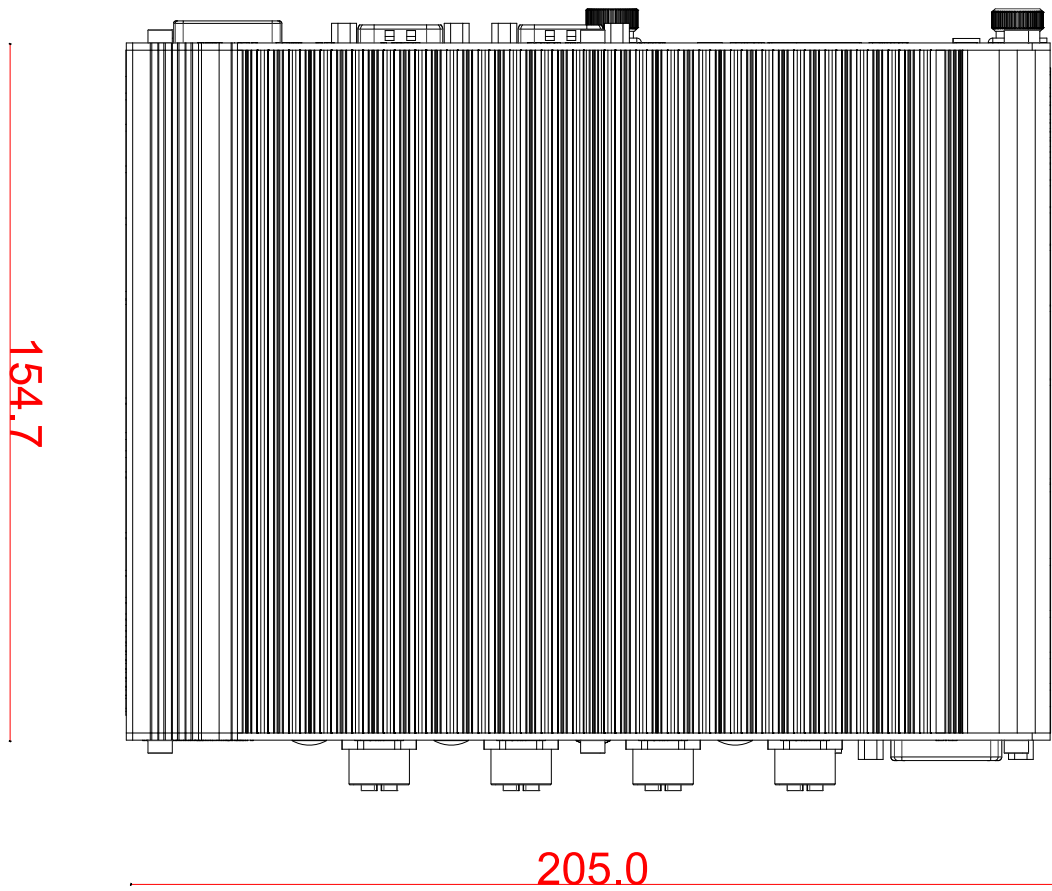



1.2.2 Nuvo-2610RL Front View

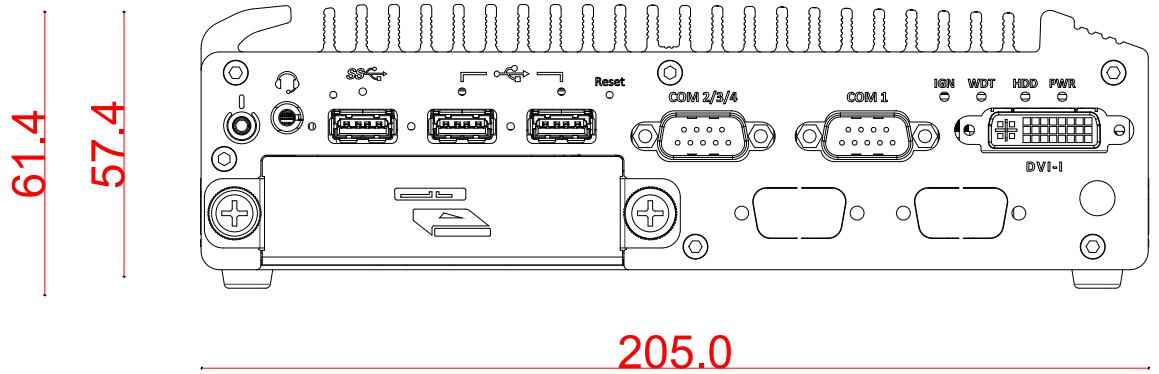


1.2.3 Nuvo-2610RL Rear View

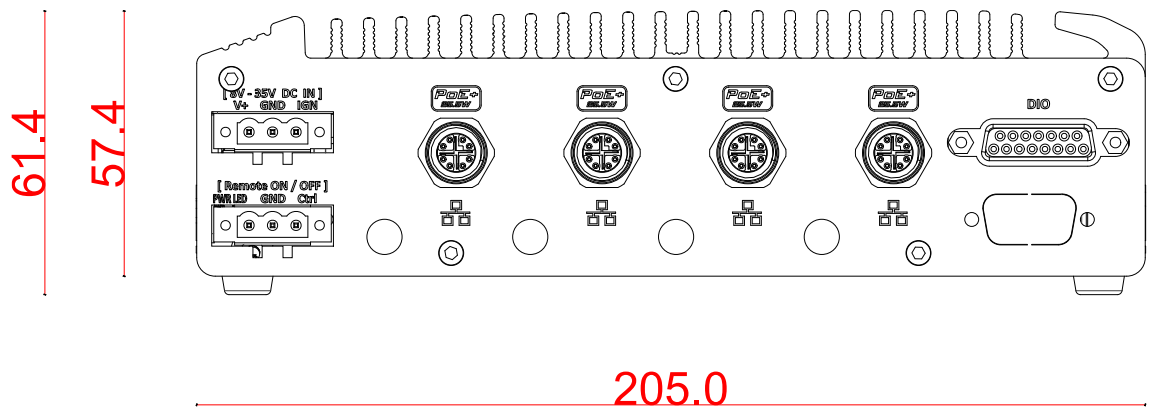

1.2.4 Nuvo-2610RL Side View

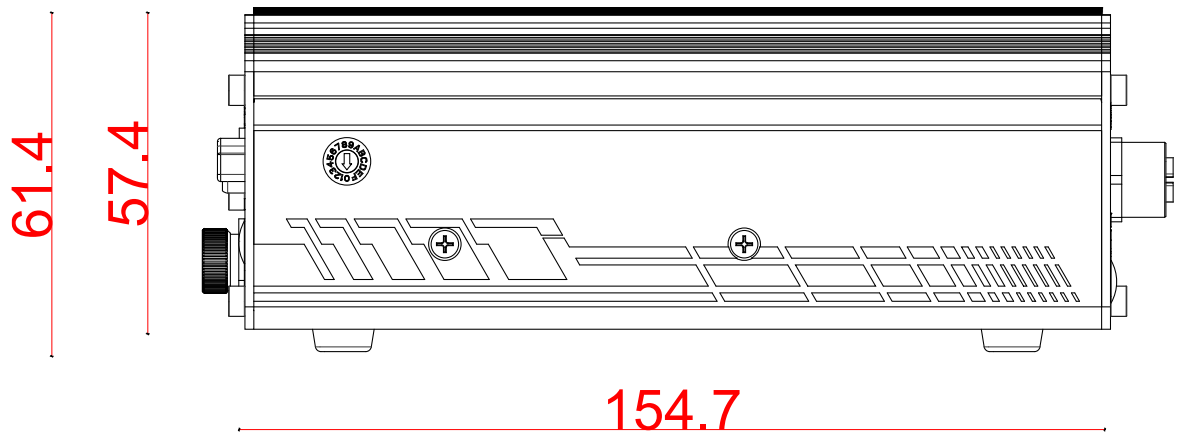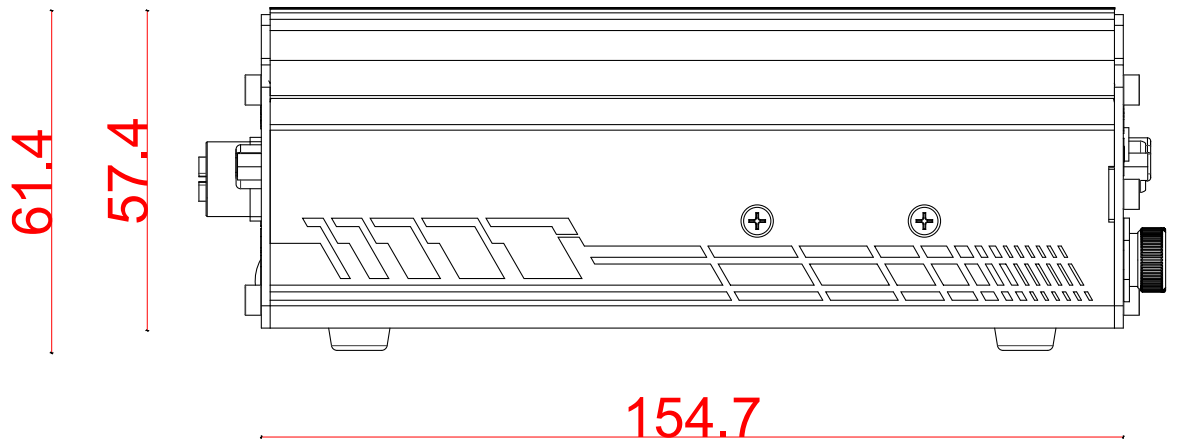


1.3 Nuvo-2615RL Dimensions


 NOTE

All measurements are in millimeters (mm).


1.3.1 Nuvo-2615RL Top View

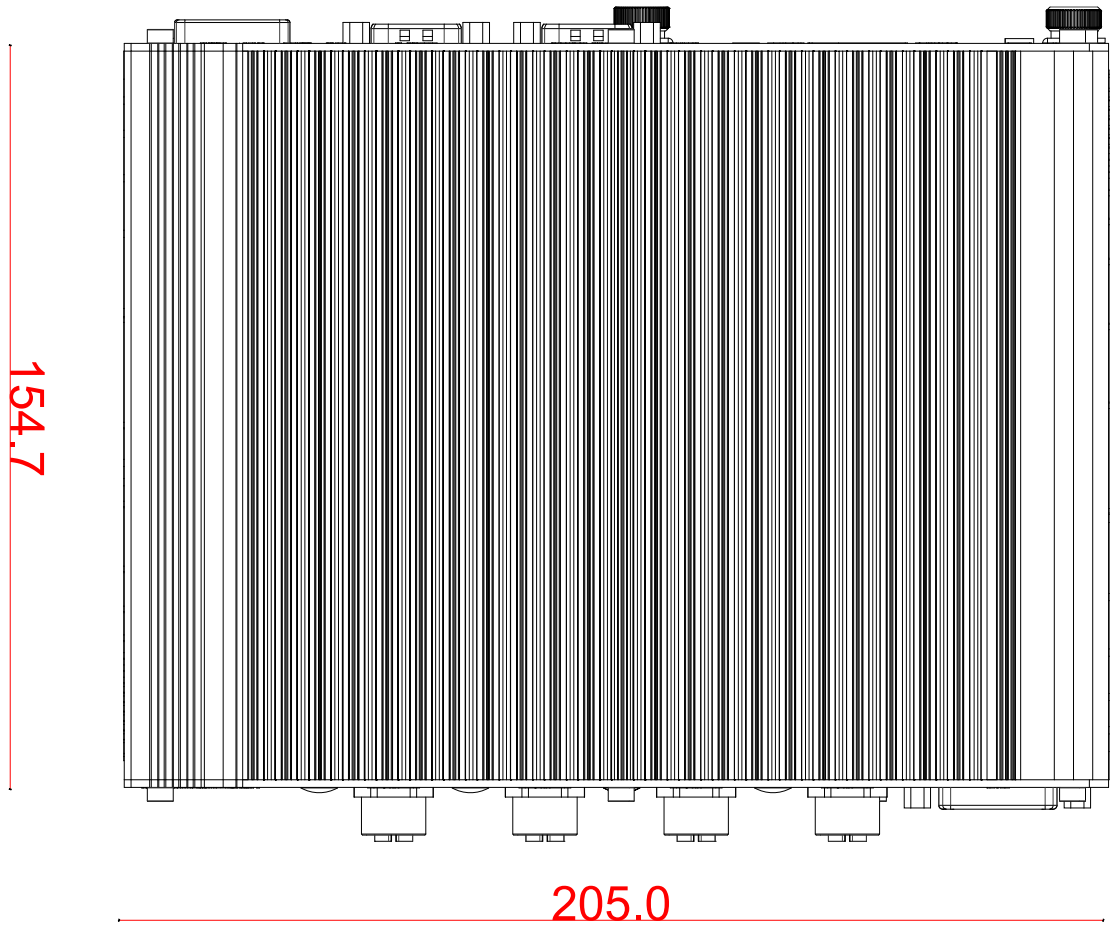



1.3.2 Nuvo-2615RL Front View

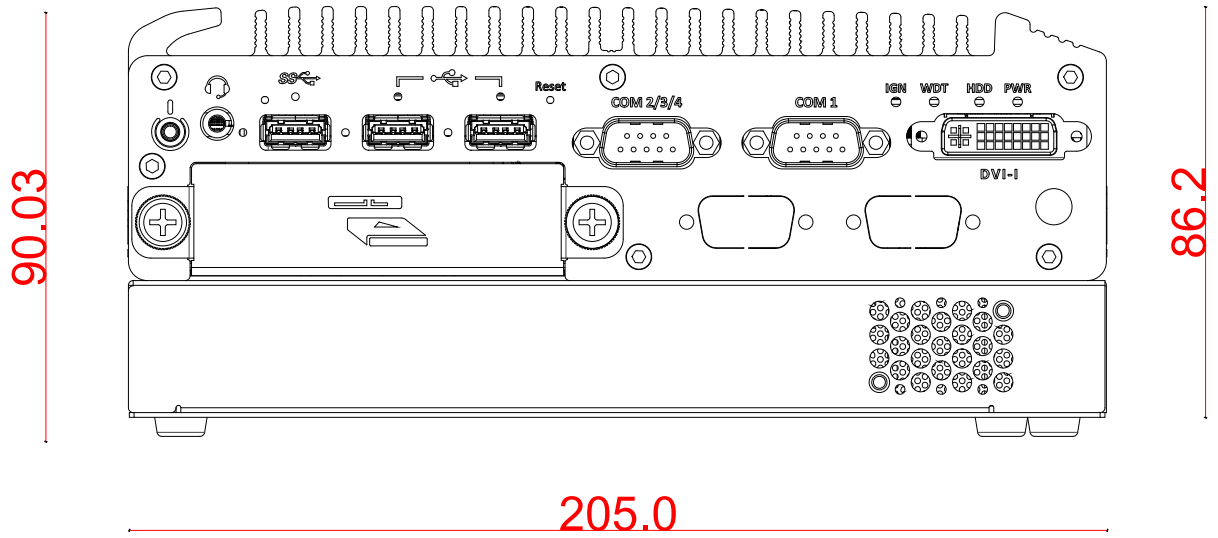


1.3.3 Nuvo-2615RL Rear View

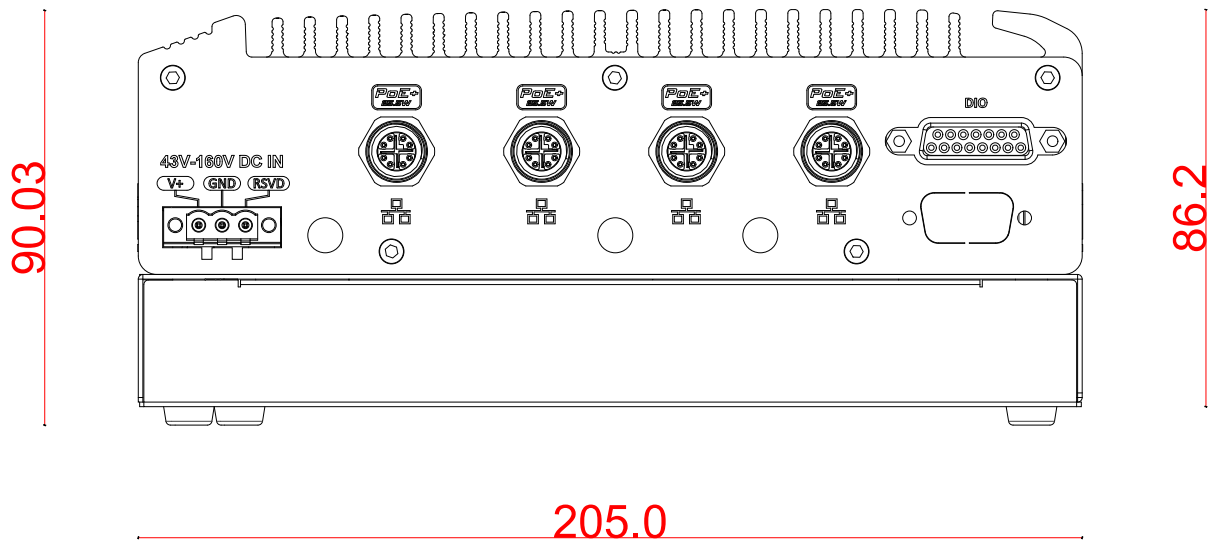

1.3.4 Nuvo-2615RL Side View

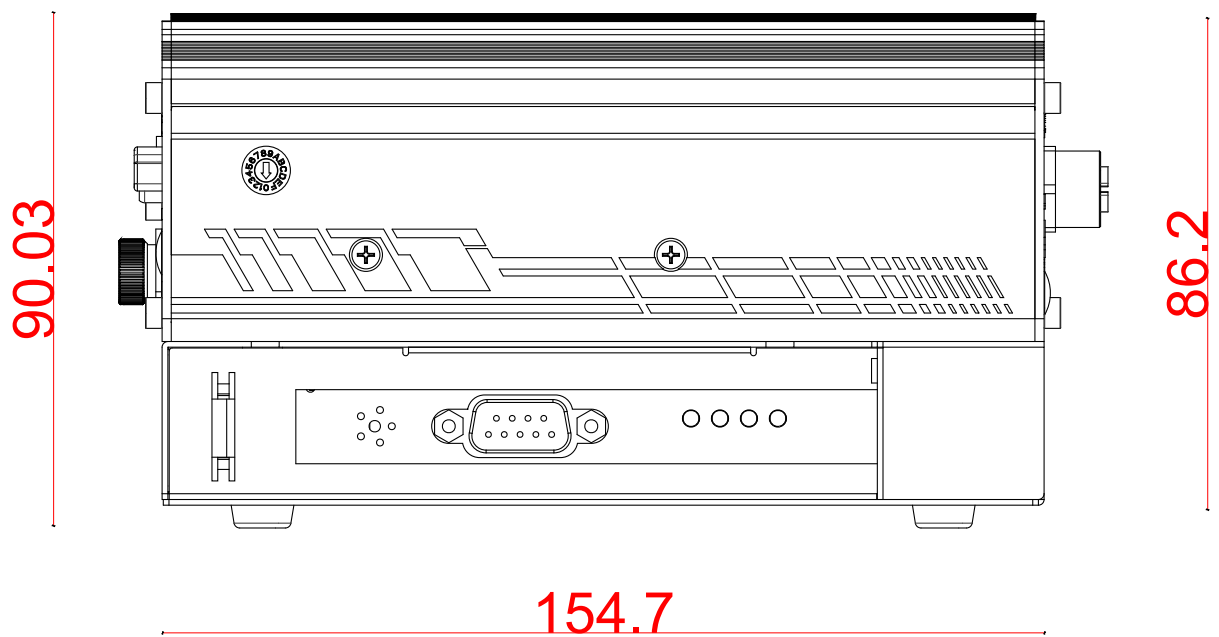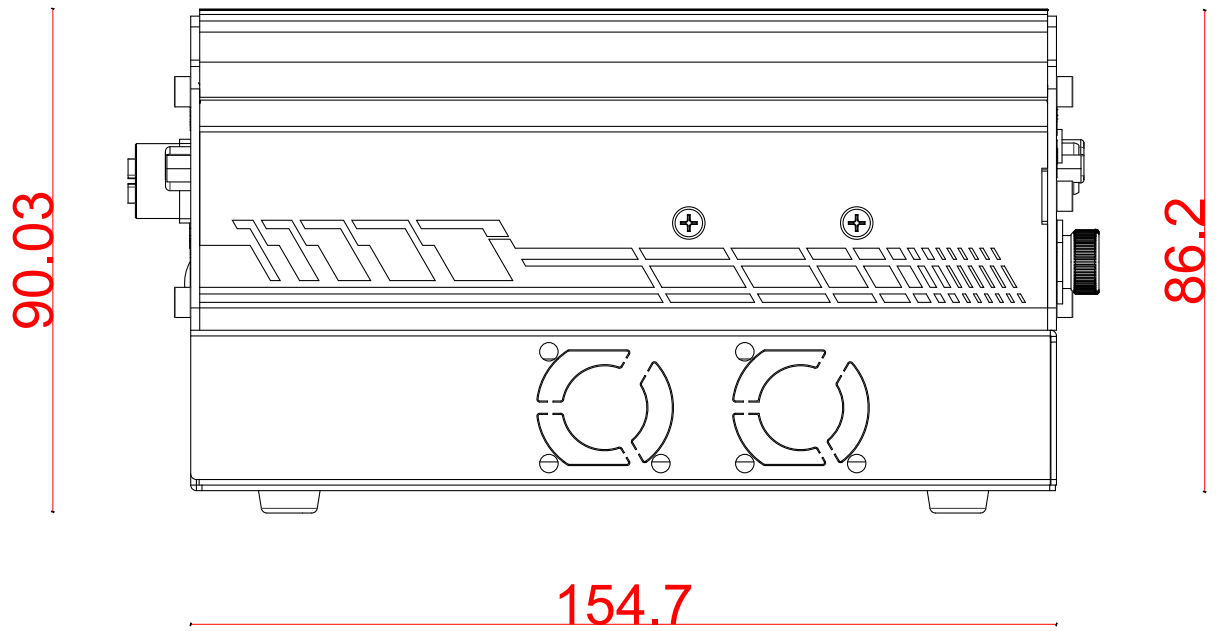


1.4 Nuvo-2610RL Damping Bracket Dimensions


 NOTE

All measurements are in millimeters (mm).


1.4.1 Nuvo-2610RL Top View with Damping Bracket Installed

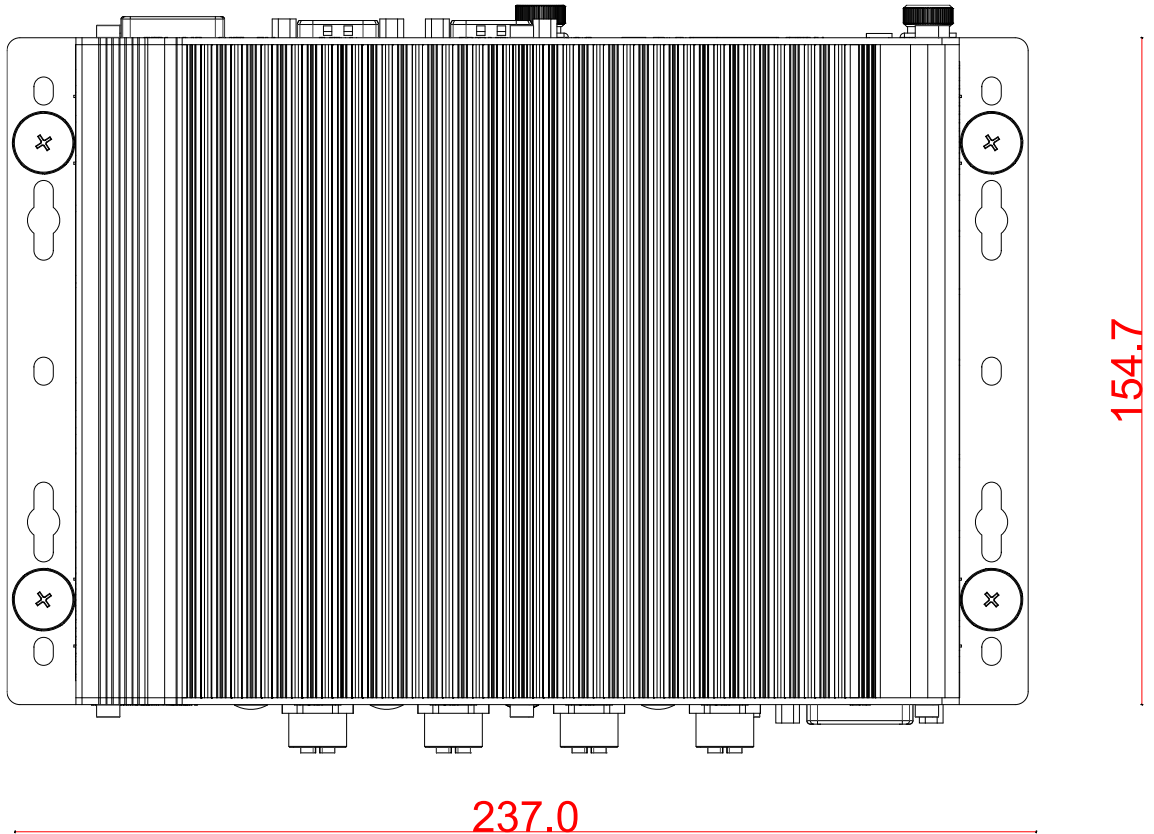


1.4.2 Nuvo-2610RL I/O Panel View with Damping Bracket Installed

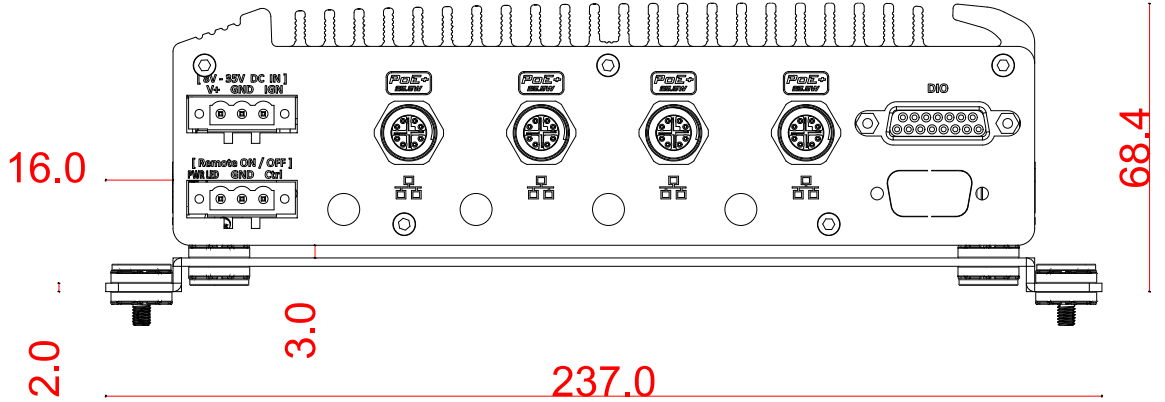


1.4.3 Nuvo-2610RL Side View with Damping Bracket Installed

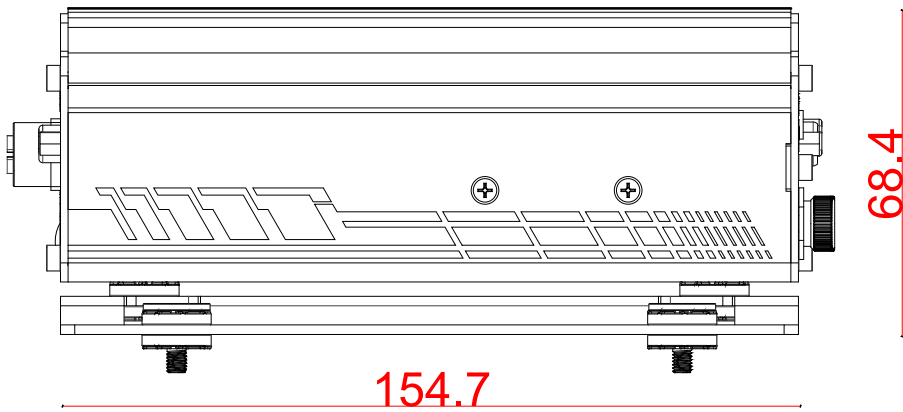

1.4.4 Nuvo-2610RL Bottom View with Damping Bracket Installed

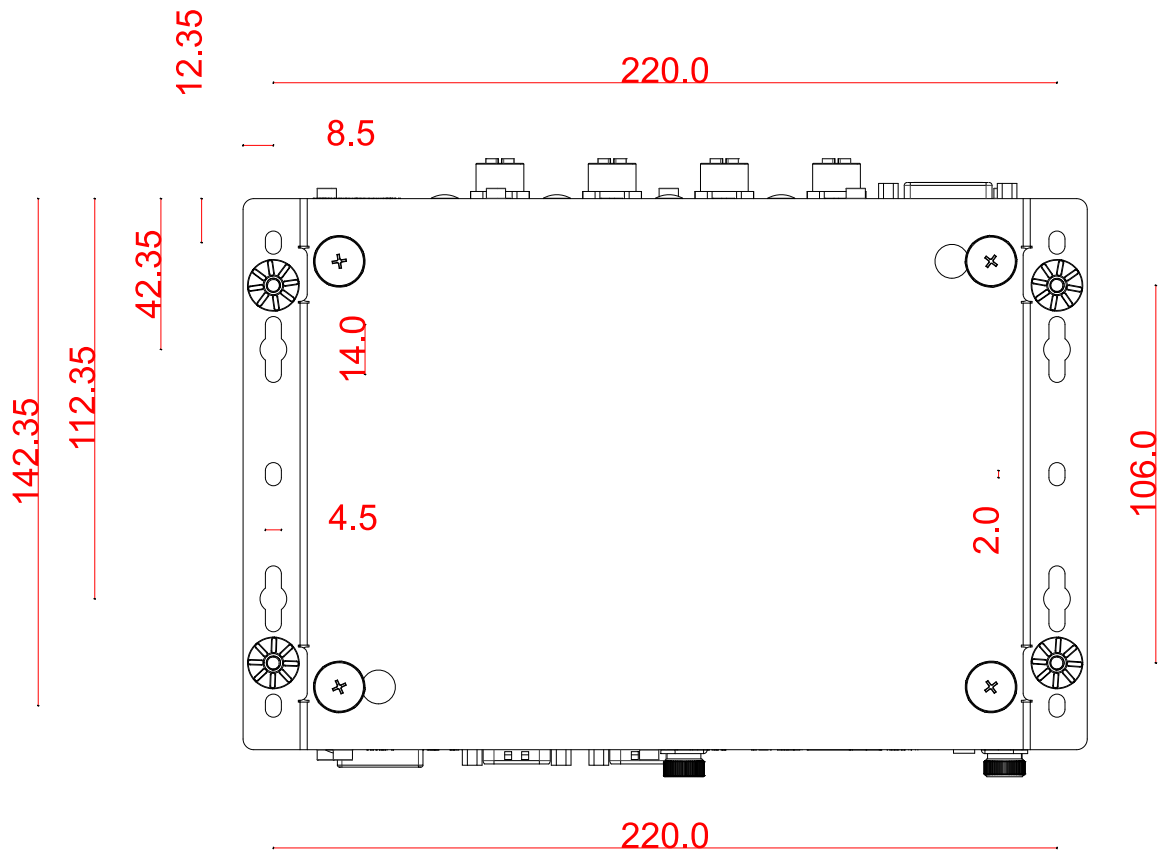


1.5 Nuvo-2610RL Wall Mount Bracket Dimensions


 NOTE

All measurements are in millimeters (mm).


1.5.1 Nuvo-2610RL Top View with Wall Mount Bracket Installed

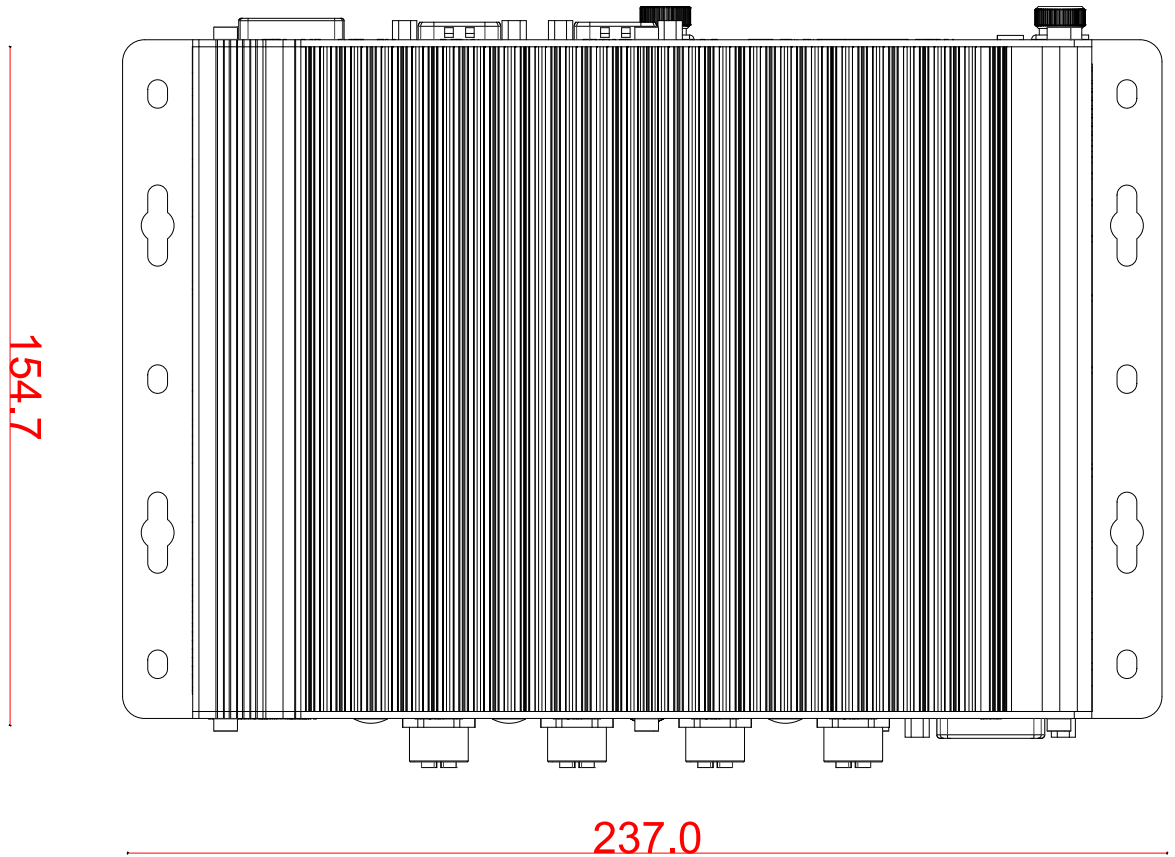


1.5.2 Nuvo-2610RL I/O Panel View with Wall Mount Installed

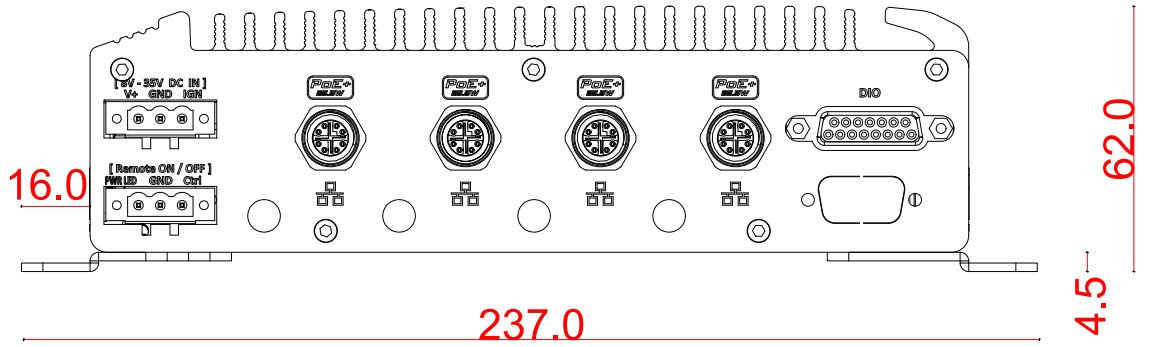

1.5.3 Nuvo-2610RL Side View with Wall Mount Bracket Installed

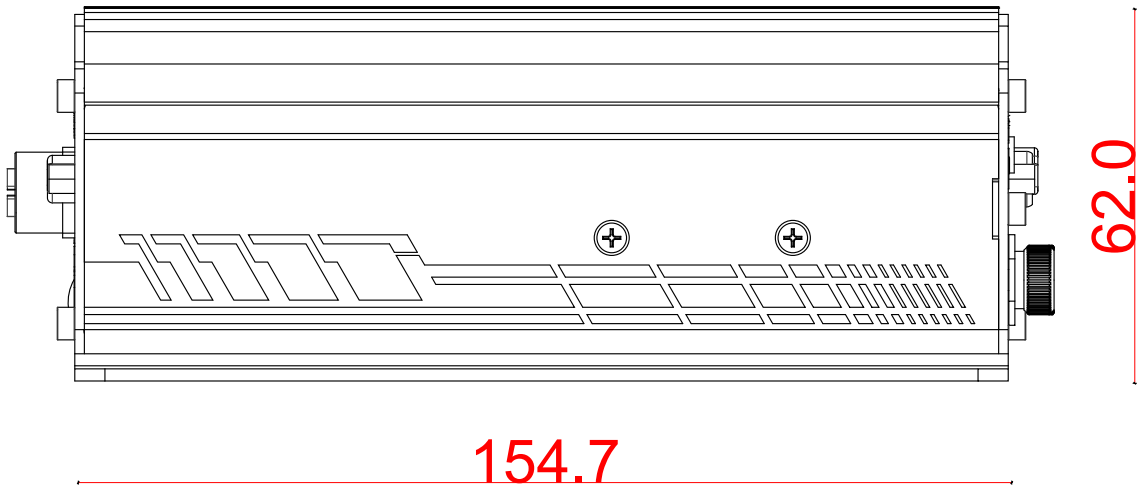

1.5.4 Nuvo-2610RL Bottom View with Wall Mount Installed

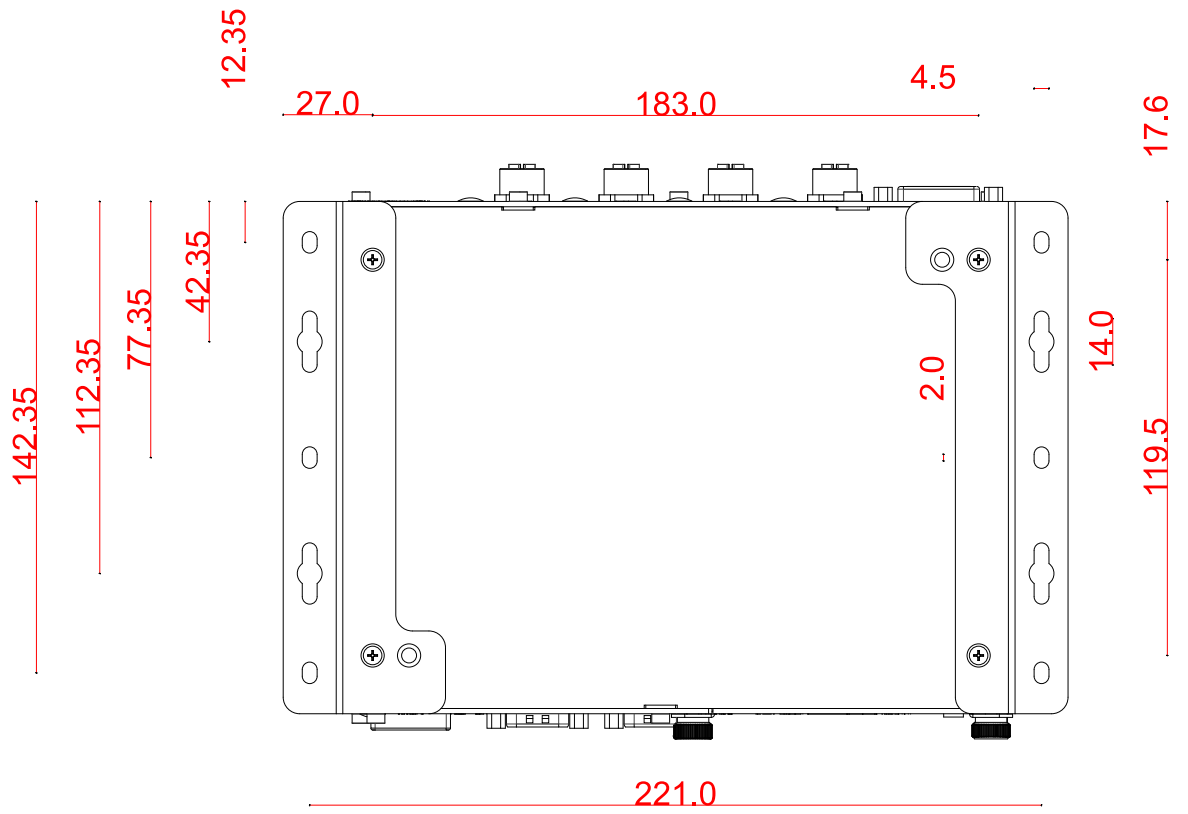

1.6 Nuvo-2615RL Damping Bracket Dimensions




NOTE


All measurements are in millimeters (mm).

The wall-mount bracket is an optional accessory.


1.6.1 Nuvo-2615RL Top View with Damping Bracket Installed

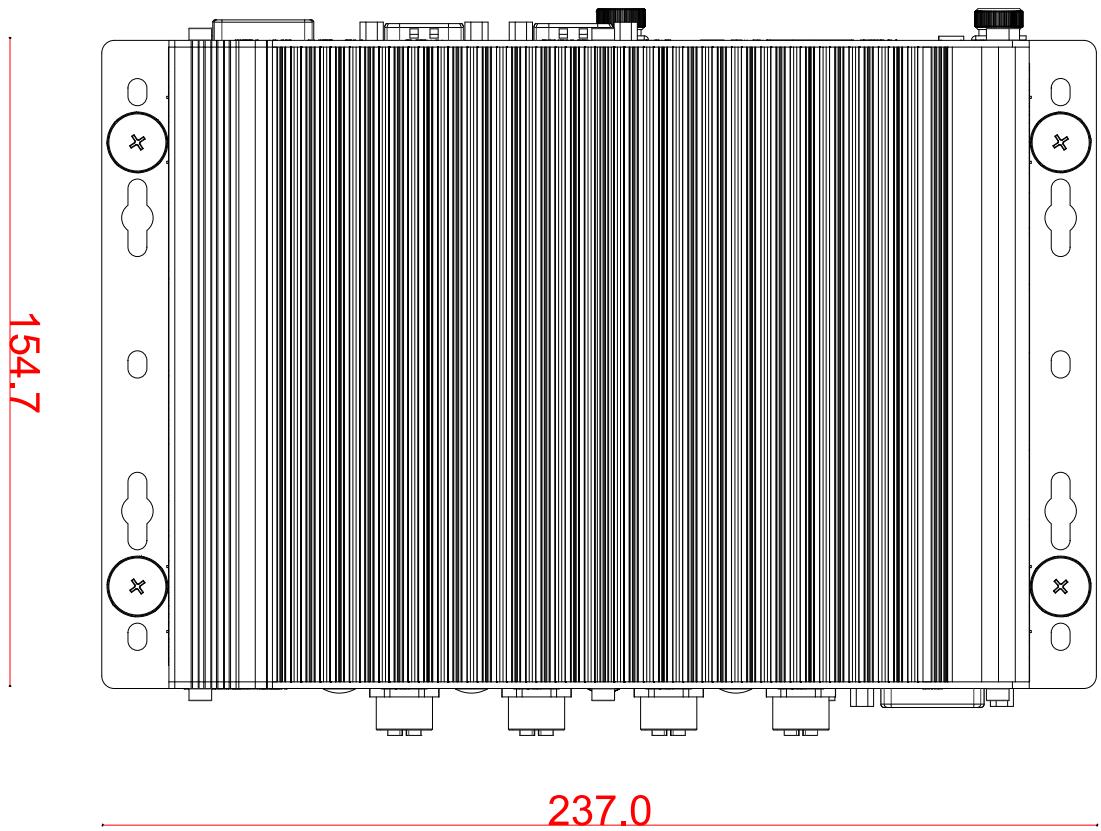


1.6.2 Nuvo-2615RL I/O Panel View with Damping Bracket Installed

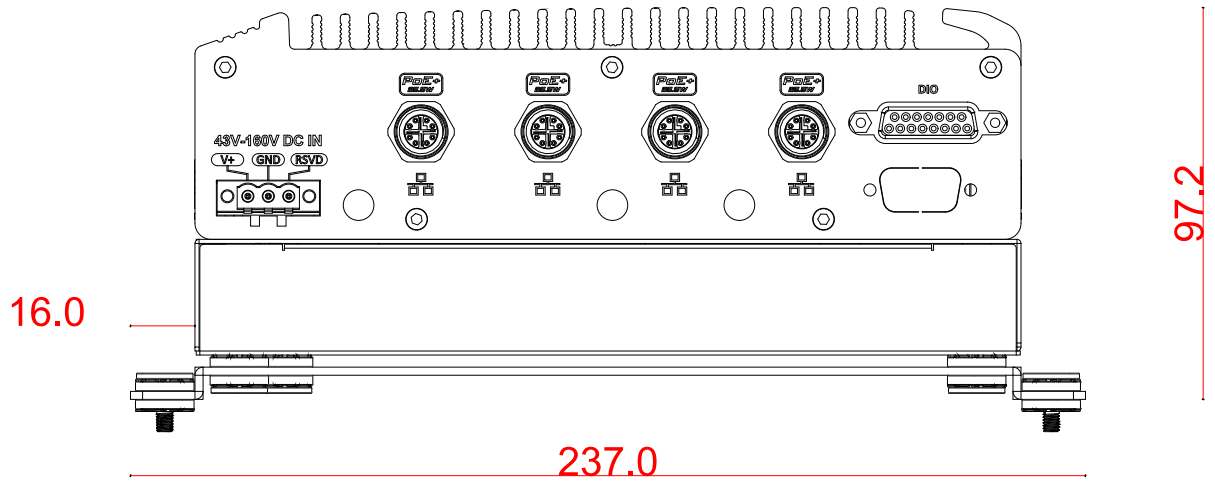

1.6.3 Nuvo-2615RL Side View with Damping Bracket Installed

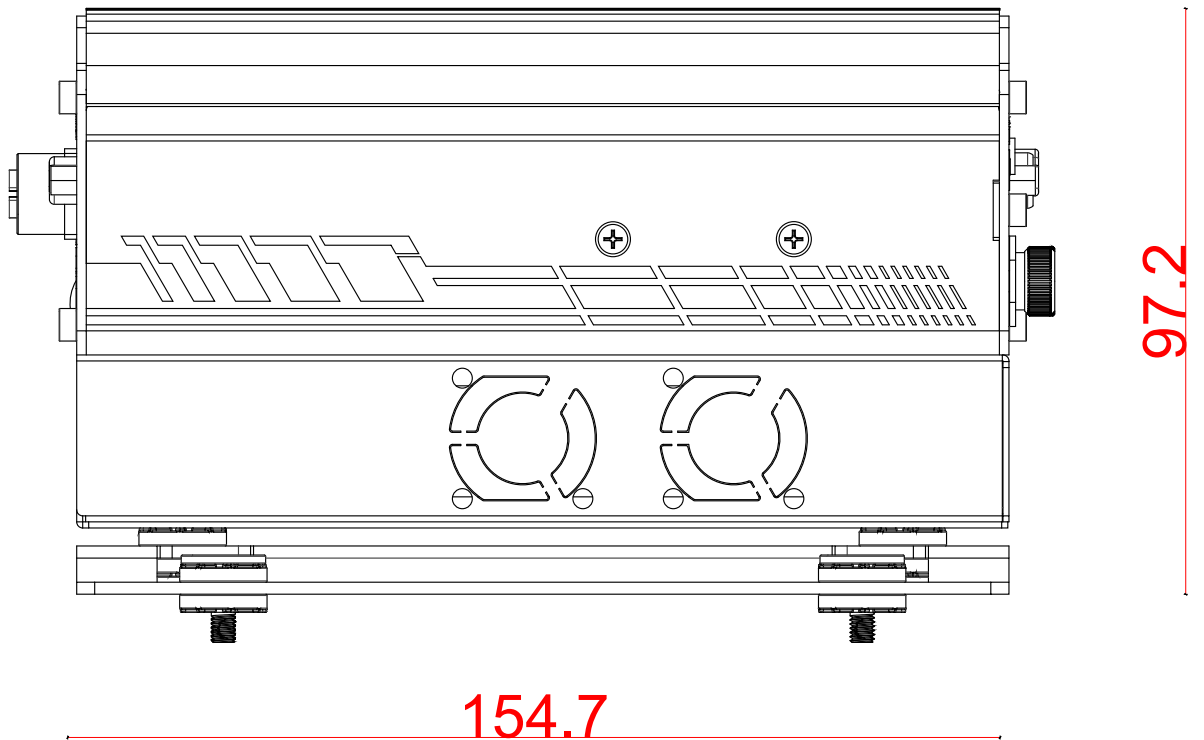

1.6.4 Nuvo-2615RL Bottom View with Damping Bracket Installed

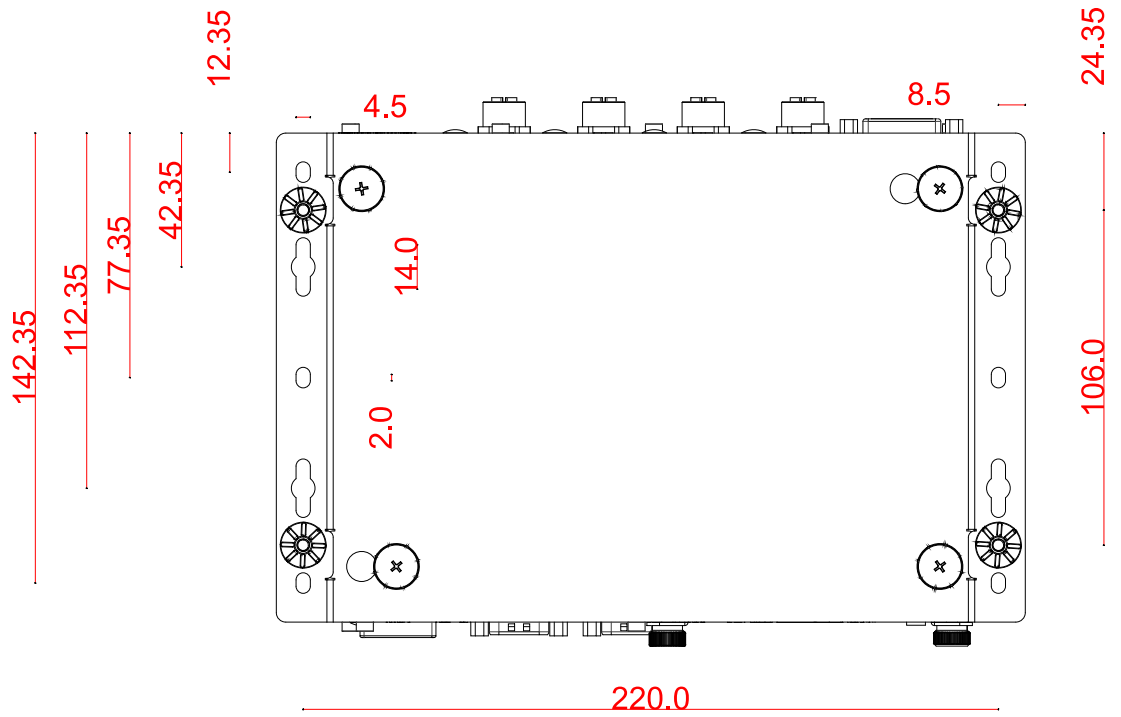

1.7 Nuvo-2615RL Wall-mount Dimensions




NOTE

All measurements are in millimeters (mm).


The wall-mount bracket is an optional accessory.

Wall-mount bracket on Nuvo-2615RL is an optional accessory.


1.7.1 Top View with Wall-mount Installed

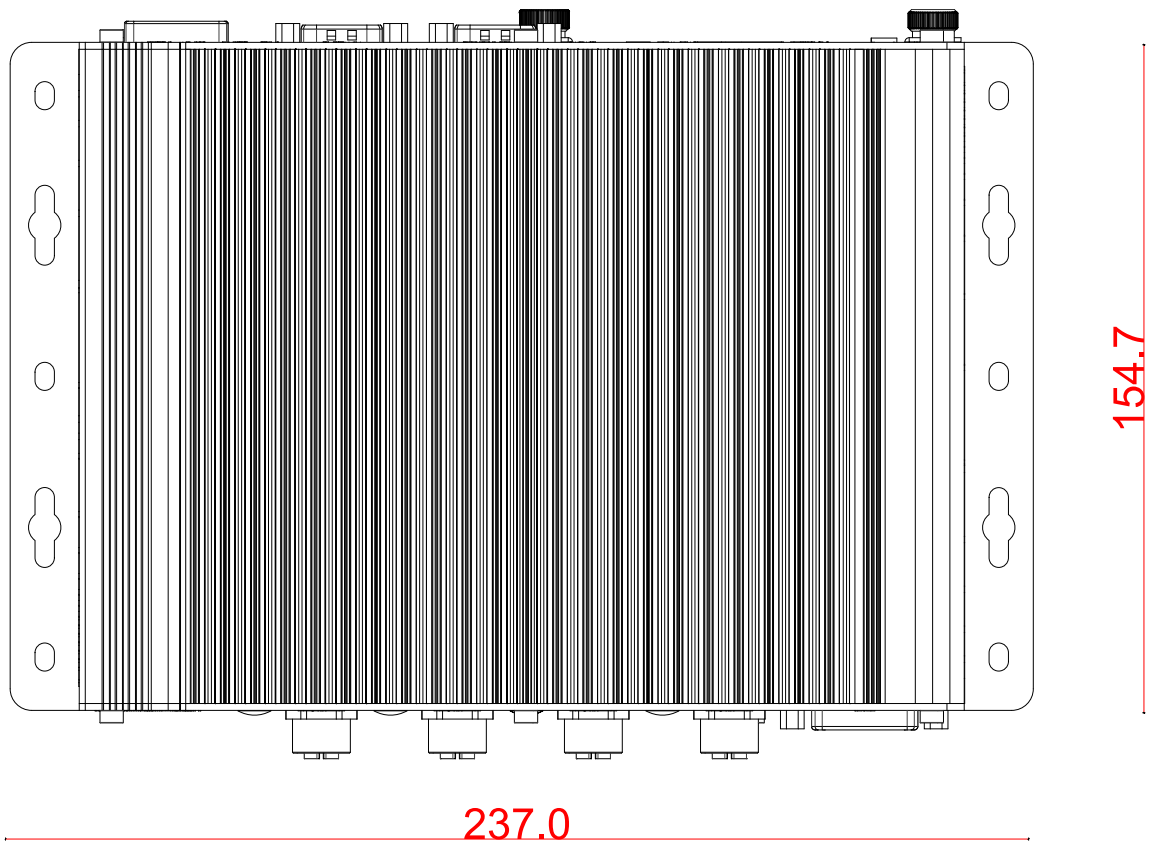


1.7.2 Panel View with Wall-mount Installed

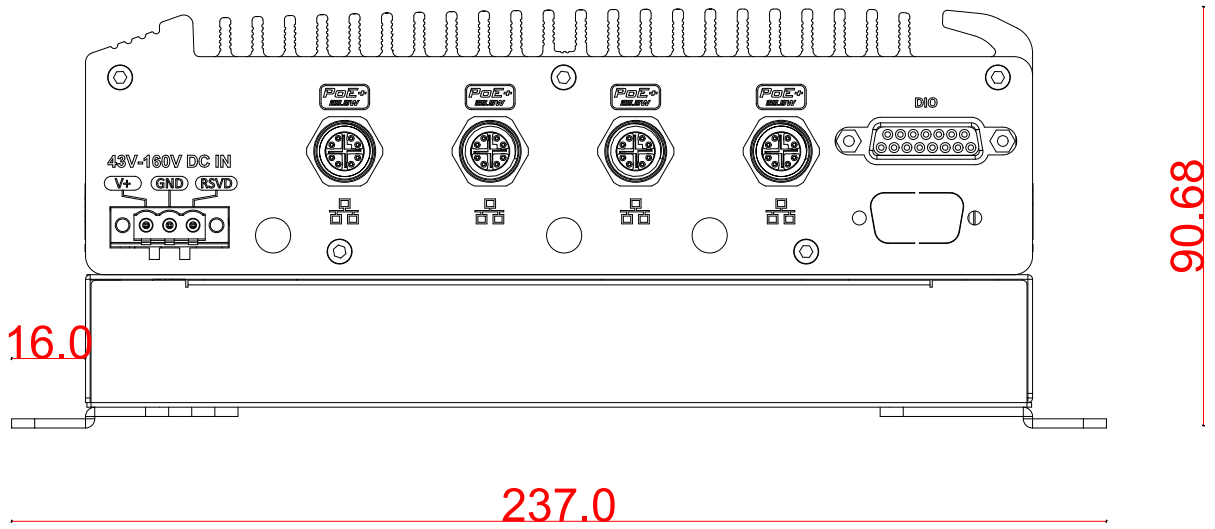

1.7.3 Side View with Wall-mount Installed

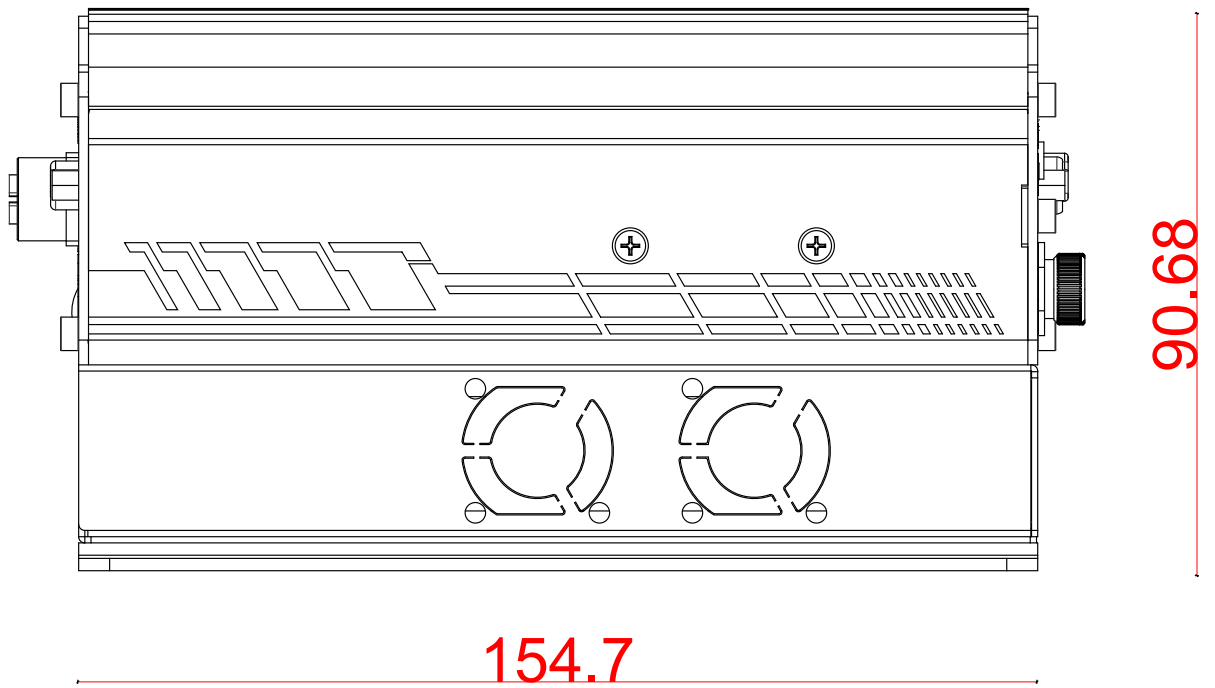

1.7.4 Bottom View with Wall-mount Installed

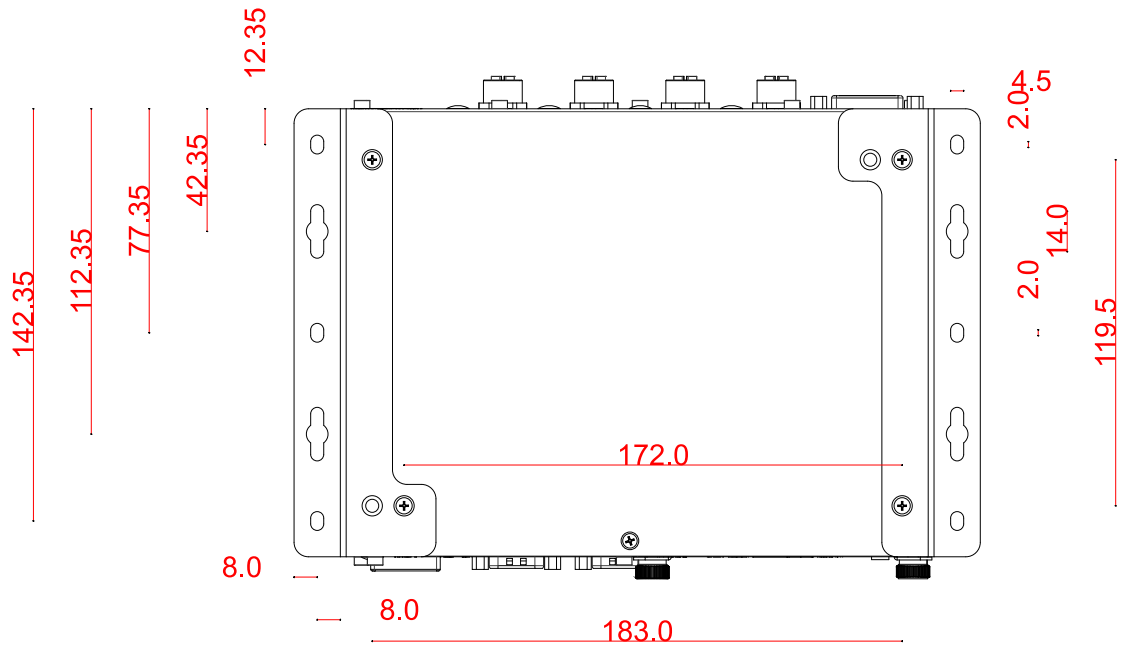

2 System Overview

Upon receiving and unpacking your Nuvo-261xRL series, please check immediately if the package contains all the items listed in the following table. If any item(s) are missing or damaged, please contact your local dealer or Neousys Technology.

2.1 Nuvo-2610RL Packing List

System Pack	Nuvo-2610RL	Qty
1	Nuvo-2610RL series system (If you ordered RAM/ SSD or HDD, please verify these items)	1
2	Accessory box, which contains <ul style="list-style-type: none"> ● 3-pin power terminal block ● M3 standoff for M.2 B key module ● Damping bracket ● Anti-vibration grommet ● M4 screws for damping bracket ● Wall mount assembly (optional) 	1 1 1 8 8 2


2.1 Nuvo-2615RL Packing List

System Pack	Nuvo-2615RL	Qty
1	Nuvo-2615RL series system (If you ordered RAM/ SSD or HDD, please verify these items)	1
2	Accessory box, which contains <ul style="list-style-type: none"> ● 3-pin power terminal block ● M3 standoff for M.2 B key module ● Damping bracket ● Anti-vibration grommet ● M4 screws for damping bracket ● Wall mount assembly (optional) 	1 1 1 8 8 2



2.3 Front Panel I/O

NOTE

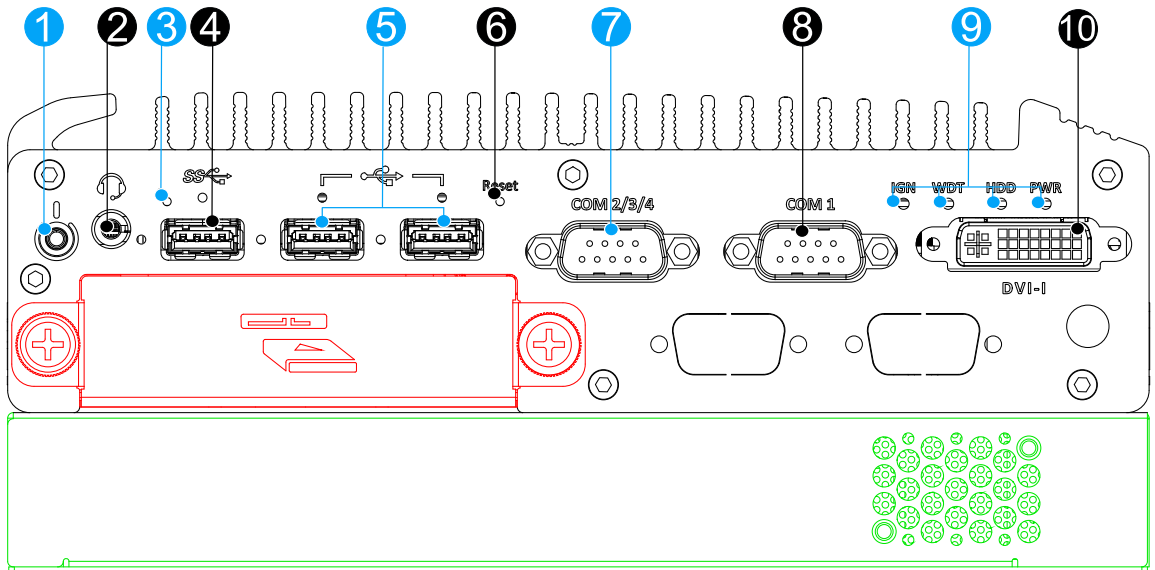
Both Nuvo-2610RL and Nuvo-2615RL systems share the same I/O, therefore Nuvo-2615RL will be used for illustration purposes.



No.	Item	Description
1	Power button	Use this button to turn on or shutdown the system.
2	3.5mm 4-pole audio jack	The 4-pole 3.5mm jack accepts microphone voice input and headphone speaker sound output.
3	CMOS reset button	Use this button to manually reset the CMOS
4	USB 3.1 Gen1 port	USB 3.0 port supports up to 5 Gbit/s data transfer bandwidth.
5	USB 2.0	USB 2.0 port supports up to 480Mb/s data transfer bandwidth.
6	Reset button	Use this button to manually reset the system.
7	COM port 2/ 3/ 4	Can be configured as: COM2: single RS-422/ 485 port COM2/ COM3/ COM4: three 3-wire RS-232 ports
8	COM port 1	Isolated RS-485 port with 15 kV ESD protection
9	System status LEDs	Four system LEDs, ignition (IGN), watchdog timer (WDT), hard disk drive (HDD) and power (PWR).
10	DVI-I port	DVI-I offers both DVI and VGA signals. You can use the DVI-to-VGA adapter to connect a VGA display, or use Y-cable to


		<p>have DVI/VGA dual display output. They support resolutions up to 1920 x 1080.</p>
		<p>Front-accessible 2.5" HDD tray (supports up to 15mm in height), please refer to the 2.5" hard drive/ SSD installation section for details.</p>
		<p>Cassette enclosure for SuperCAP UPS power backup module (Nuvo-2615RL only)</p>


2.3.1 Power Button

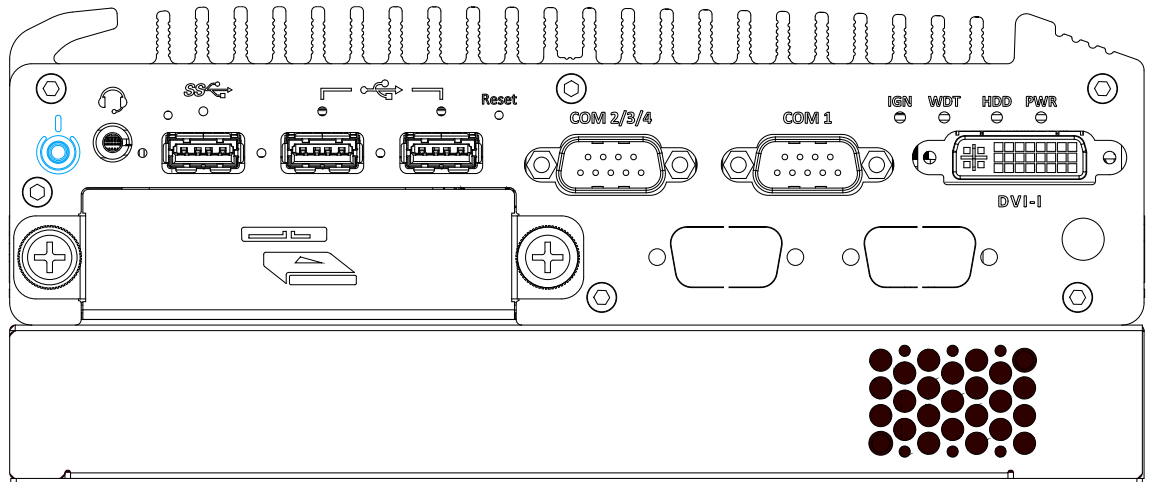


The power button is a non-latched switch for ATX mode on/off operation. Press to turn on the system, PWR LED should light up and to turn off, you can either issue a shutdown command in the OS, or just press the power button. In case of system halts, you can press and hold the power button for 5 seconds to force-shutdown the system. Please note that there is a 5 seconds interval between two on/off operations (i.e. once turning off the system, you will need to wait for 5 seconds to initiate another power-on operation).

2.3.2 3.5mm 4-pole Audio Jack

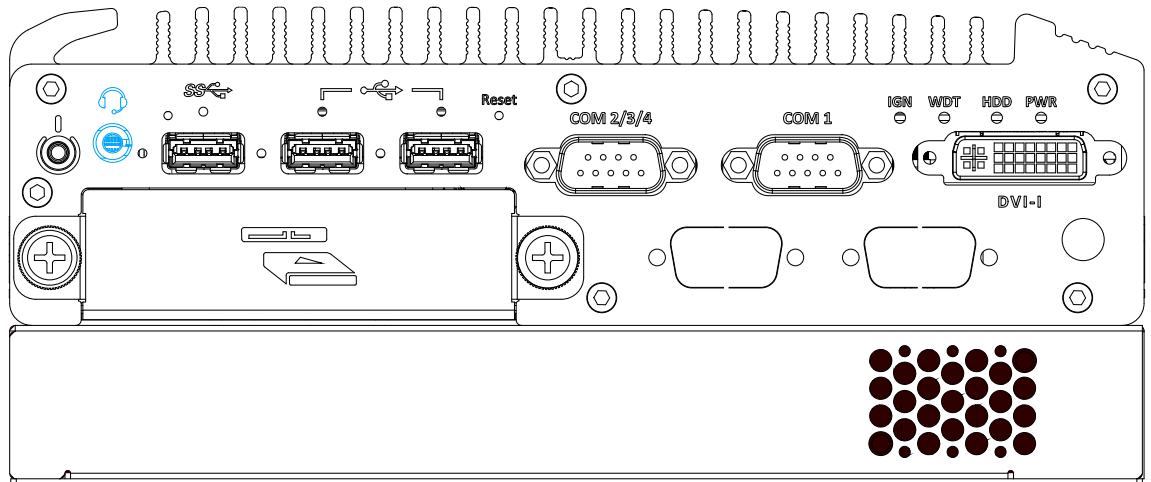


There is a female 4-pole  audio jack for headphone (speaker) output and microphone input. To utilize the audio function in Windows, you need to install corresponding drivers. Please refer to the section, [Driver Installation](#).

2.3.3 CMOS Reset Button

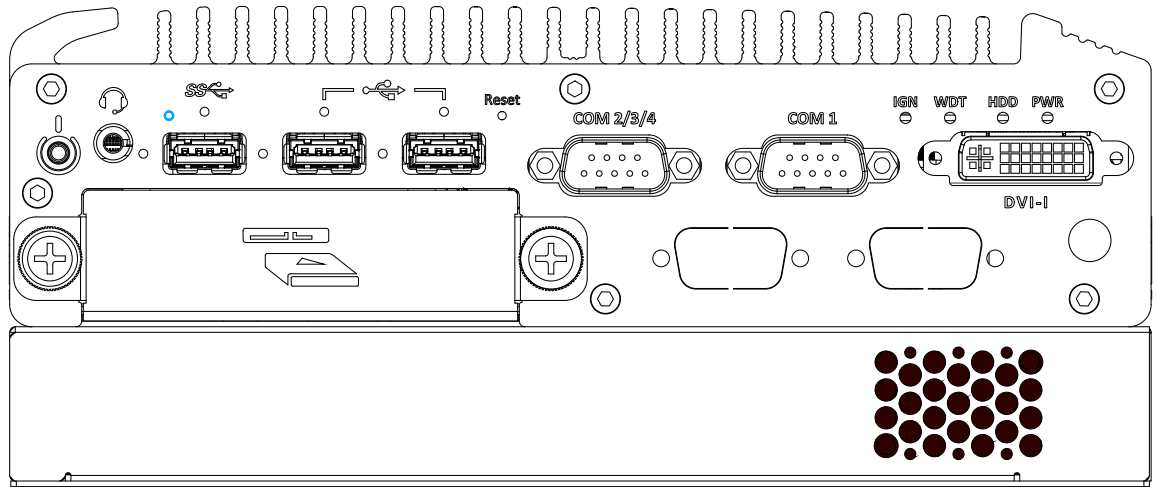


The CMOS Reset button is used to manually reset the motherboard BIOS in case of system halt or malfunction. To avoid unexpected operation, it is purposely placed behind the panel. To reset, please use the tip of a pen, press and hold for at least 5 seconds to reset the BIOS.

2.3.4 USB3.1 Gen1 Port

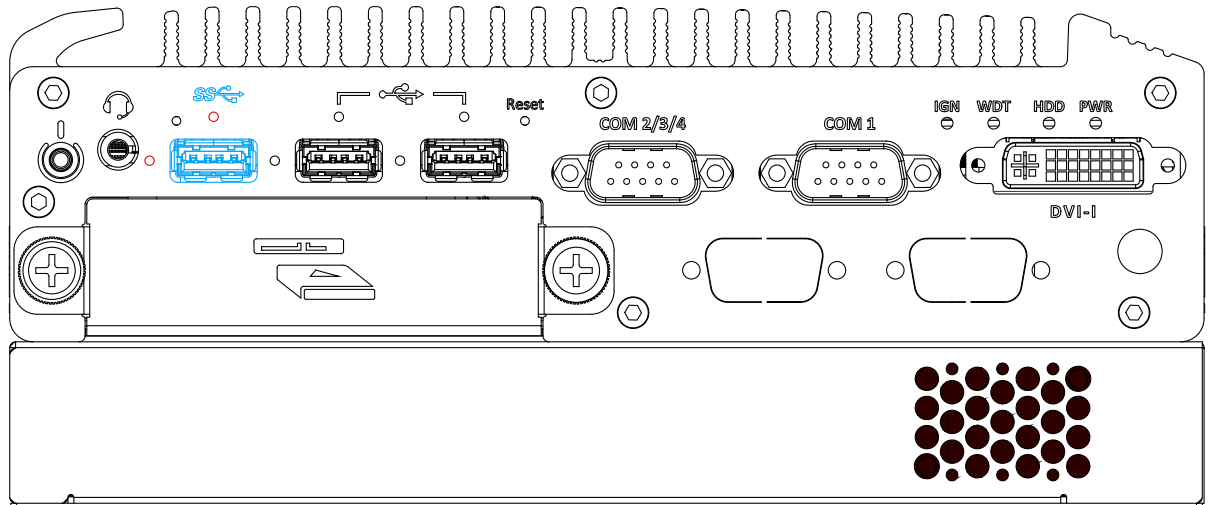


The system offers one USB3.1 Gen1 (SuperSpeed USB) port on its front panel with screw-lock mechanism (indicated in **red**). It is backward-compatible with USB 2.0, USB 1.1 and USB 1.0 devices. Legacy USB support is also provided so you can use USB keyboard/mouse in DOS environment while USB 3.1 Gen1 driver is supported natively in Windows 10.

2.3.5 USB2.0 Port

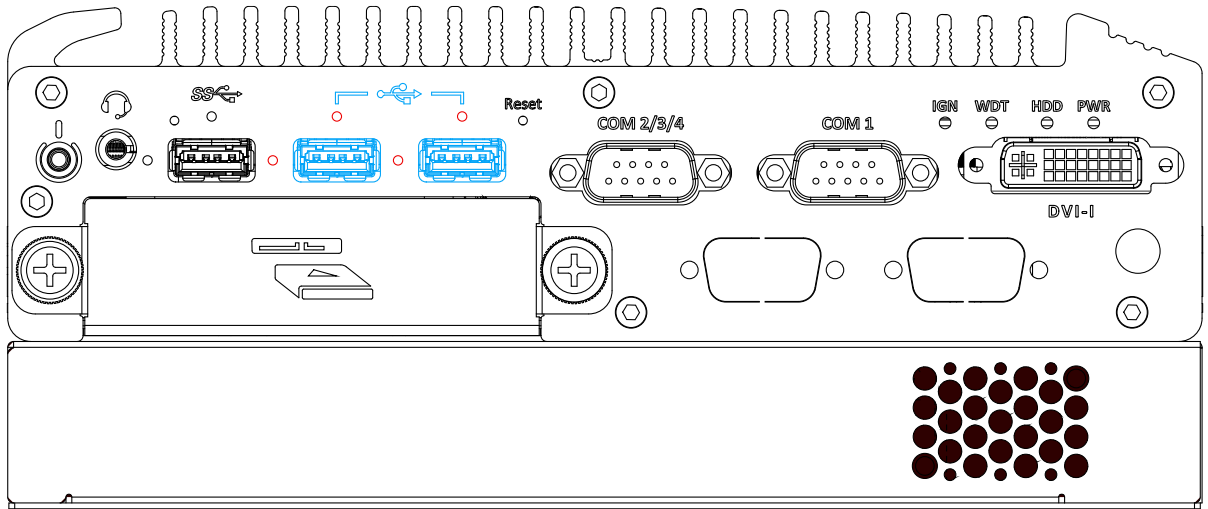


The system offers two USB2.0 ports on its front panel with screw-lock mechanism (indicated in red). They are backward-compatible with USB 1.1 and USB 1.0 devices. Legacy USB support is also provided so you can use USB keyboard/mouse in DOS environment.

2.3.6 Reset Button

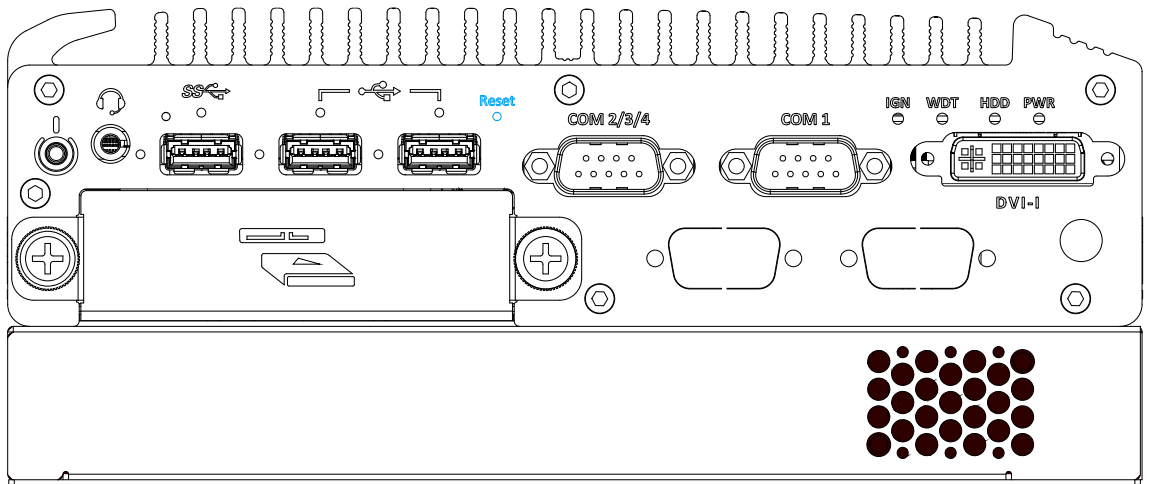


The reset button can be used to manually reset the system in case of abnormal condition. To avoid unexpected operation, the reset button is hidden behind the front panel. You need to use a pin-like object to push the reset button.

2.3.7 COM Ports (COM2/ COM3/ COM4)

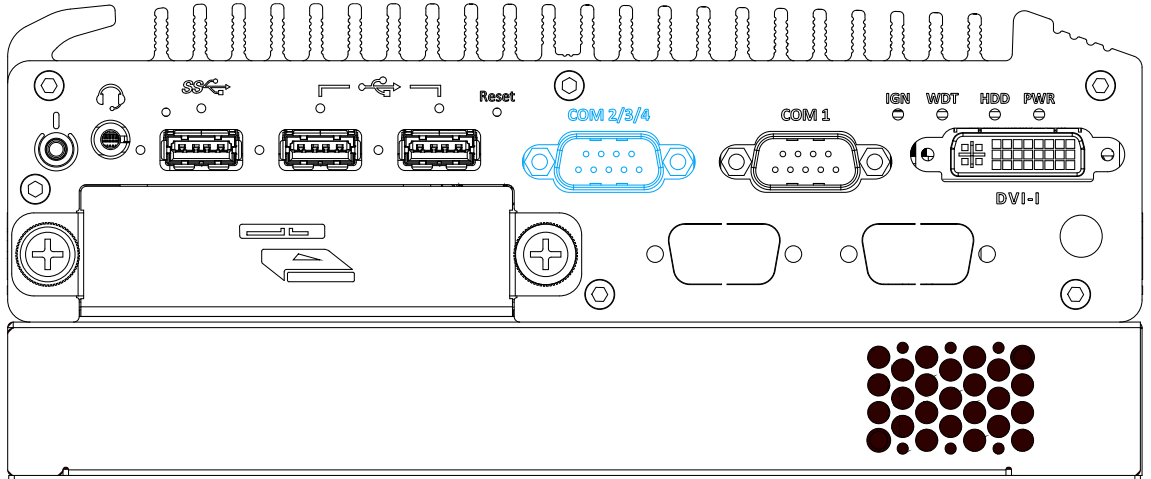

Implemented using industrial-grade ITE8786 Super IO chip (-40 to 85°C) and provide up to 921600 bps baud rate, the second D-Sub male connector (COM2/ 3/ 4) can be configured in BIOS as single RS-422/ 485 port (COM2) or three 3-wire RS-232 ports (COM2/COM3/COM4). Please refer to [COM2/ 3/ 4 Port Configuration](#) for configuring operation mode. An optional 1-to-3 Y-cable is available to connect three RS-232 devices.

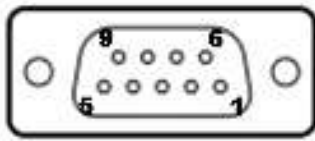

COM2/ 3/ 4 Pin




1-to-3 Y-cable

The following table describes the pin definition of the COM port


	3-port RS-232 COM2/ 3/ 4		
Pin#	COM2	COM3	COM4
1			
2	RX		
3	TX		
4		TX	
5	GND	GND	GND
6		RX	
7			TX
8			RX
9			

	Single port RS-422/ 485	
Pin#	RS-422	RS-485
1		
2	TxD+	TxD+/RxD+
3	RxD+	
4	RxD-	
5	GND	GND
6		
7		
8	TxD-	TxD-/RxD-
9		

2.3.8 COM 1 Port

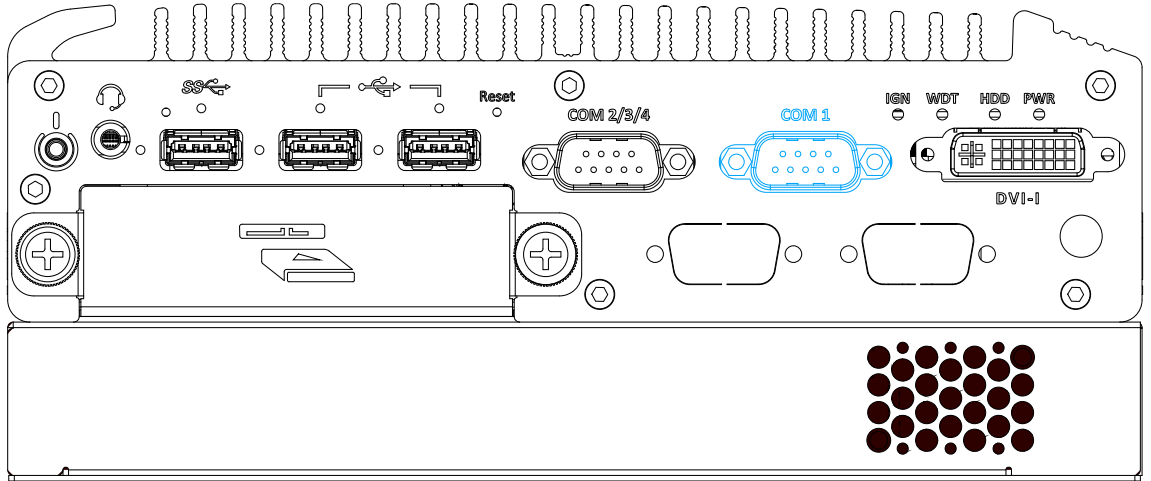


Isolated with up to 15kV ESD protection, the port is implemented using industrial-grade ITE8786 Super IO chip (-40 to 85°C) and provides up to 921600 bps baud rate. COM1 is a RS-485 port via 9-pin D-Sub male connector. The following table describes the pin definition of COM ports.

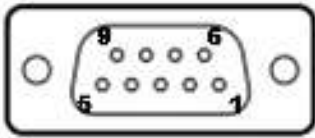

COM1	
Pin#	RS-485 Mode
1	
2	485 TXD+/RXD+
3	
4	
5	GND
6	
7	
8	485 TXD-/RXD-
9	


2.3.9 System Status LED

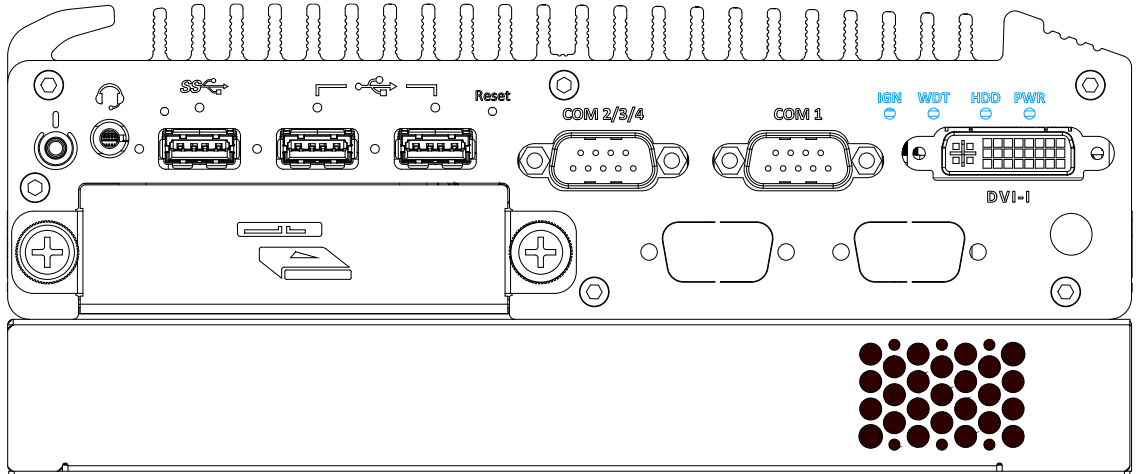

There are four LED indicators on the I/O panel: PWR, WDT, HDD and IGN. The descriptions of these LEDs are listed in the following table.

Indicator	Color	Description
IGN	-	Reserved, not applicable.
WDT	Yellow	Watchdog timer LED, flashing when watchdog timer is started.
HDD	Red	Hard drive indicator, flashing when SATA HDD is active.
PWR	Green	Power indicator, lid when system is on.

2.3.10 DVI-I Port

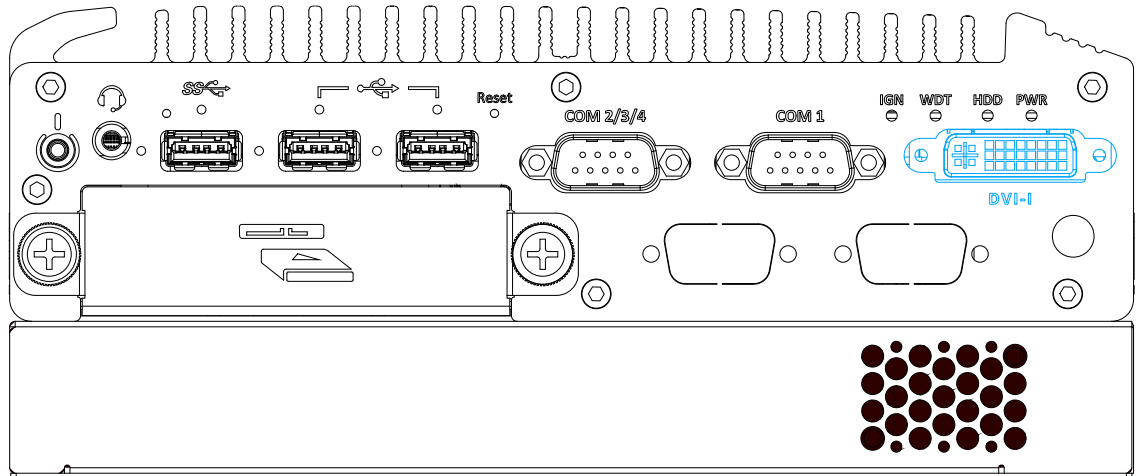

The system features a DVI-I connector on its front panel that is also compatible with VGA signals. The DVI and VGA outputs are directly driven by integrated Intel HD graphics engine and support up to 1920 x 1080 resolution.

For VGA monitor, Neusys offers a specialized DVI-to-VGA adapter as an accessory shipped with the system. This adapter supports VGA DDC signals and thus eliminates compatibility issues with VGA monitors. Or you can use a DVI-I to VGA+DVI-D Y-cable to support two independent display outputs




**DVI to VGA
adapter**



Optional DVI to VGA+DVI Y-cable


2.4 Rear Panel I/O

On the rear panel of the system, you will find a 3-pin terminal block for DC input, four M12 X-coded connectors, and a 15-pin DIO port.

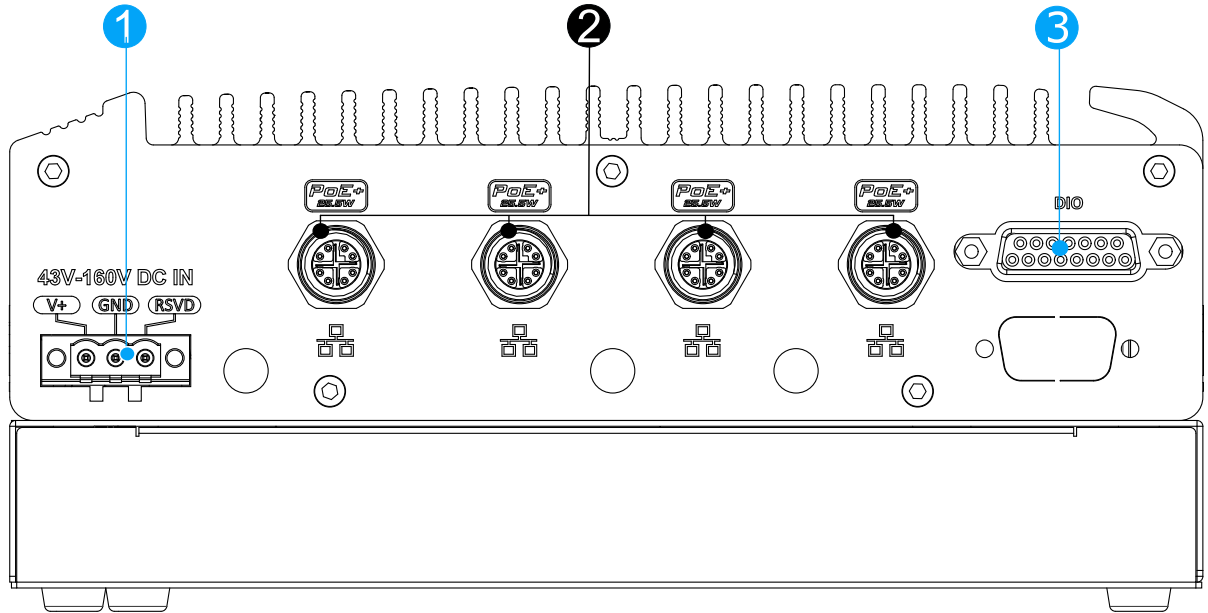

No.	Item	Description
1	3-pin terminal block	Compatible with DC power input from 43V – 160V
2	M12 X-coded PoE ports	The M12 X-coded Power over Ethernet (PoE) ports provide both data connection and electric power to devices (eg. IP camera) Total PoE+ power budget is 30W (Nuvo-2615RL-H)
3	Isolated DIO port	The DIO port provides 4x isolated digital input and 4x isolate output channels

2.4.1 3-pin Terminal Block DC Input

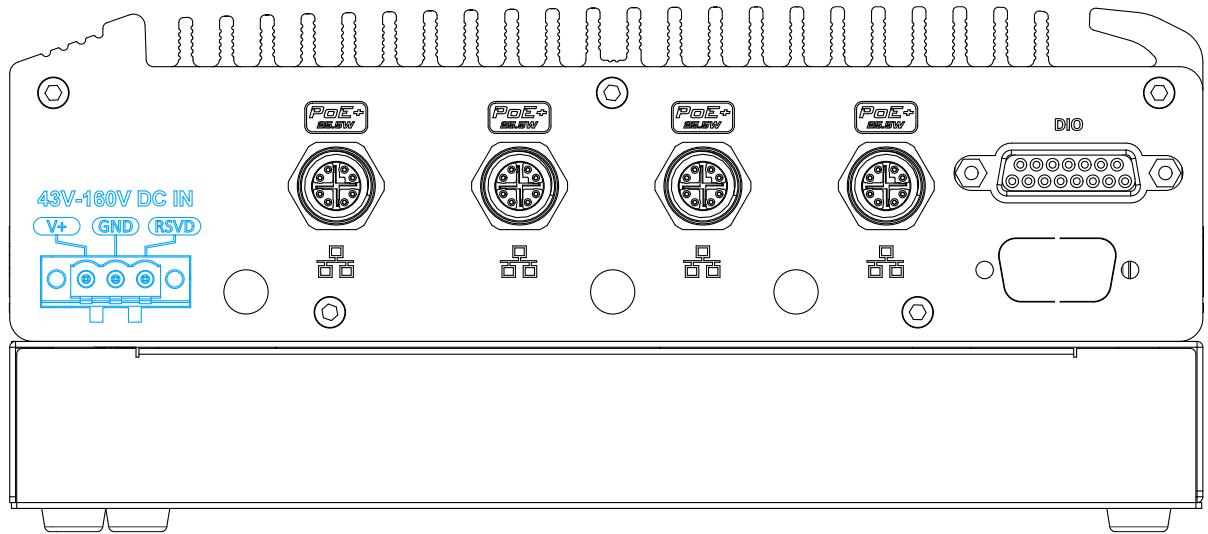


The system accepts a wide range of DC power input from 43V to 160V via a 3-pin pluggable terminal block, which is fit for field usage where DC power is usually provided. The screw clamping mechanism on the terminal block offers connection reliability when wiring DC power.



WARNING

Please make sure the voltage of DC power is correct before you connect it to the system. Supplying a voltage over 160V will damage the system.


2.4.2 M12 X-coded PoE Port

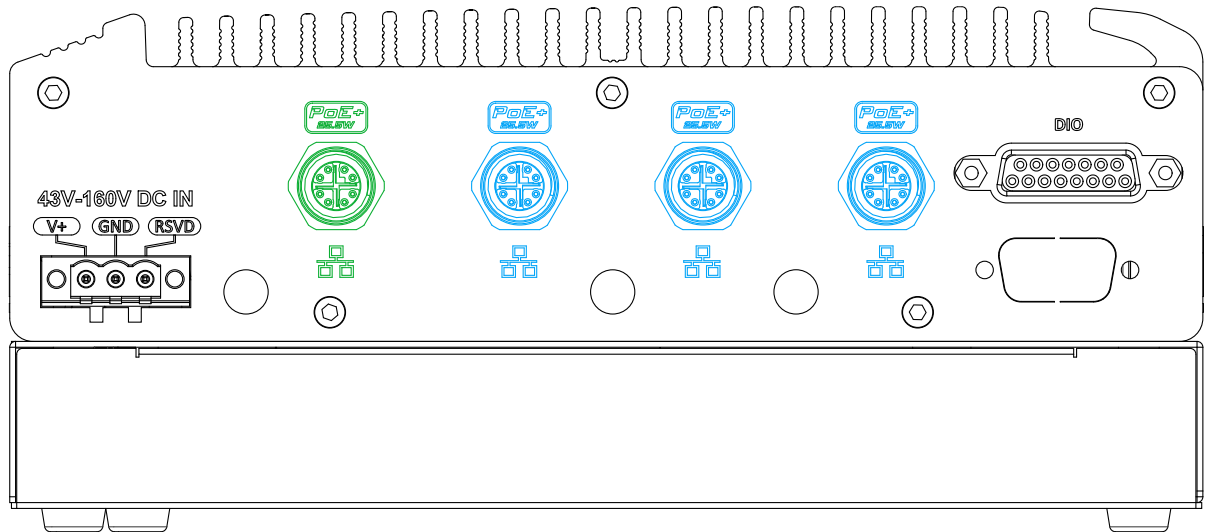

The system offers four PoE+ GbE ports via M12 X-coded connectors on the front panel. The ports are implemented using Intel® I210 controller and the port indicated in **green** supports Wake-on-LAN.

Power over Ethernet (PoE) supplies electrical power and data on a CAT-5/CAT-6 Ethernet cable. Acting as a PoE PSE (Power Sourcing Equipment), compliant with IEEE 802.3at, each PoE port delivers up to 25.5W to a Powered Device (PD). PoE can automatically detect and determine if the connected device requires power or not, so it is compatible with standard Ethernet devices as well. Each port has one dedicated PCI Express link for maximum network performance.

Connector Pin Definition

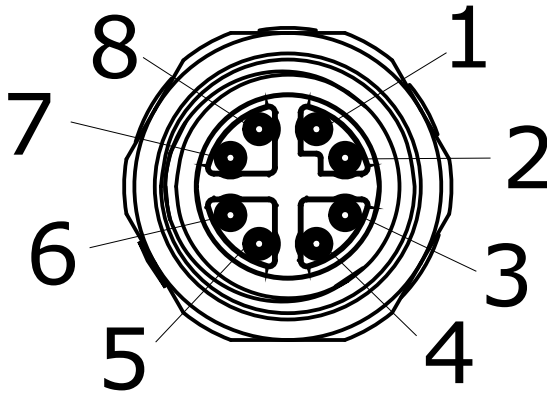


Panel side




Cable connector end

Signal	M12 panel side	M12 cable connector end	Wire color
LAN P0	1	1	Yellow
LAN N0	2	2	Yellow
LAN P1	3	3	Green
LAN N1	4	4	Green
LAN P3	5	5	Orange
LAN N3	6	6	Orange
LAN N2	7	7	Blue
LAN P2	8	8	Blue

2.4.3 Isolated Digital Input/ Output

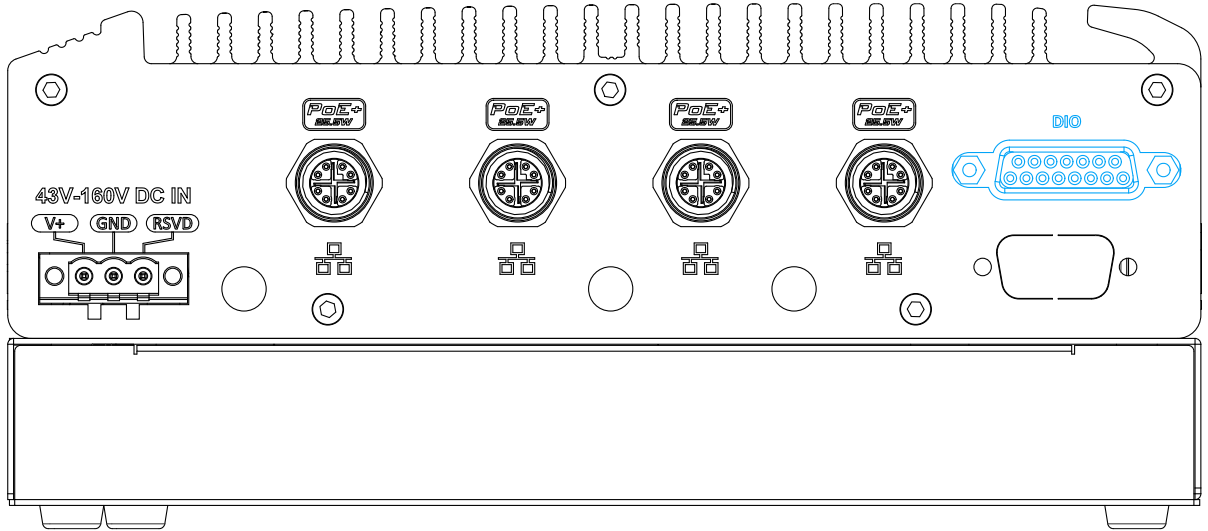

The system provides 4x isolated digital input channels and 4x isolated digital output channels. The DIO functions support polling mode I/O access and DI change-of-state interrupt. Please refer to [Watchdog Timer & Isolated DIO](#) for information on wiring and programming the isolated DIO channels.

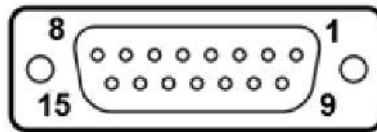


Pin#	Pin Definition	Pin#	Pin Definition
1	DI_0	9	DI_GND
2	DI_1	10	DI_2
3	DI_GND	11	DI_3
4	DO_GND	12	DO_GND
5	DO_0	13	DO_2
6	DO_1	14	DO_3
7	DO_GND	15	-
8	VDD		

2.5 Internal I/O Functions

In addition to I/O connectors on the front panel, the system also provides internal on-board expansion slots. In this section, we'll illustrate these internal I/O functions.

2.5.1 M.2 2280 (SATA Signal Only) Slot for SSD

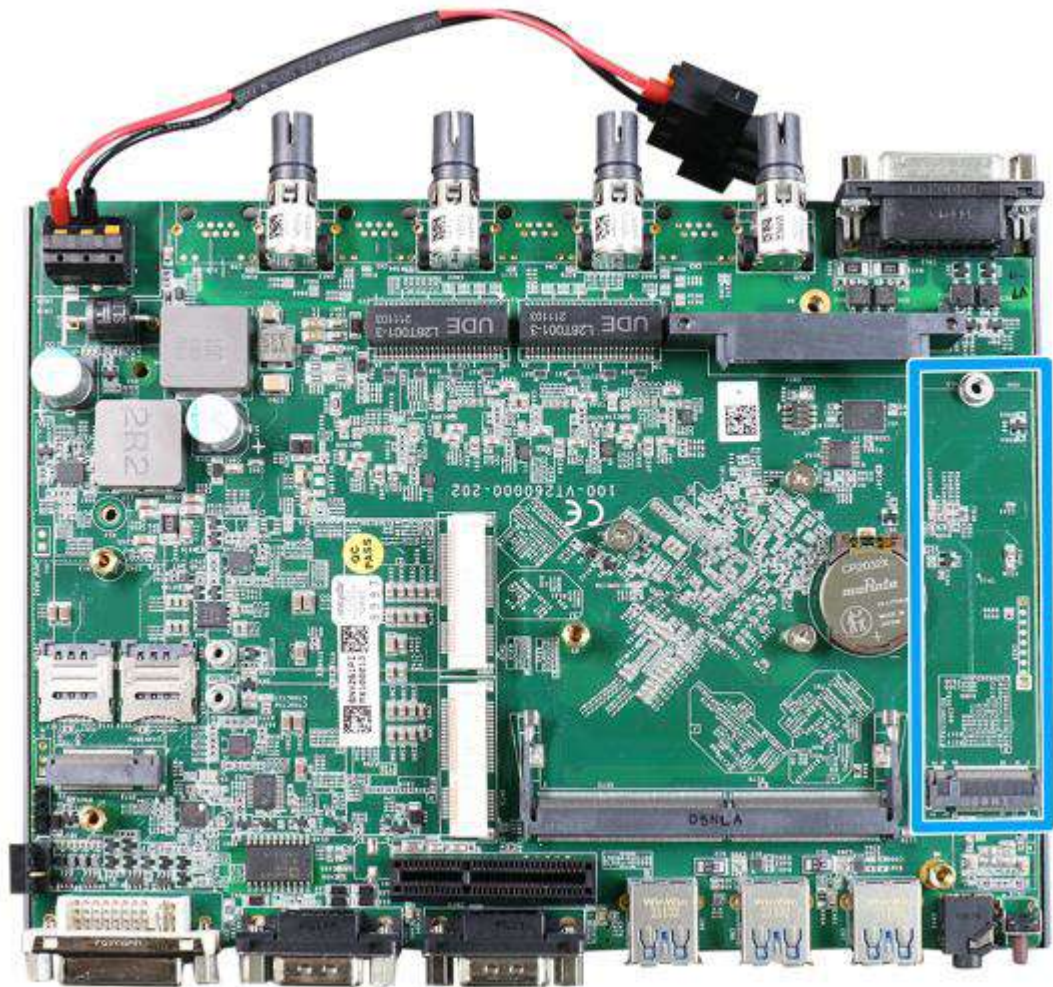


The system has an M.2 2280 slot (SATA signal only) for you to install an M.2 SATA SSD for faster access over traditional hard disk drives.



NOTE


The M.2 slot is only compatible with SATA signal M.2 SSD only.

M.2 2280M Key Pin Definition

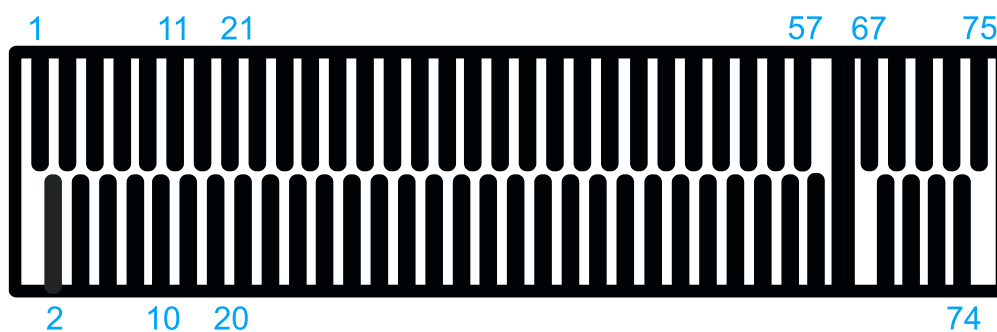


Pin #	Signal	Pin #	Signal
1	GND	2	+3V3
3	GND	4	+3V3
5		6	-
7		8	-
9	GND	10	-
11		12	+3V3
13		14	+3V3
15	GND	16	+3V3
17		18	+3V3
19		20	-
21	GND	22	-
23		24	-
25		26	-
27	GND	28	-
29		30	-
31		32	-
33	GND	34	-
35		36	-
37		38	-
39	GND	40	-
41	SATA-B+	42	-
43	SATA-B-	44	-
45	GND	46	-
47	SATA-A-	48	-
49	SATA-A+	50	-
51	GND	52	-
53		54	-
55		56	-
57	GND	58	-
Mechanical Key			
67	-	68	SUSCLK
69	PEDET	70	+3V3
71	GND	72	+3V3
73	GND	74	+3V3
75	GND		

2.5.2 DRAM SO-DIMM Slot

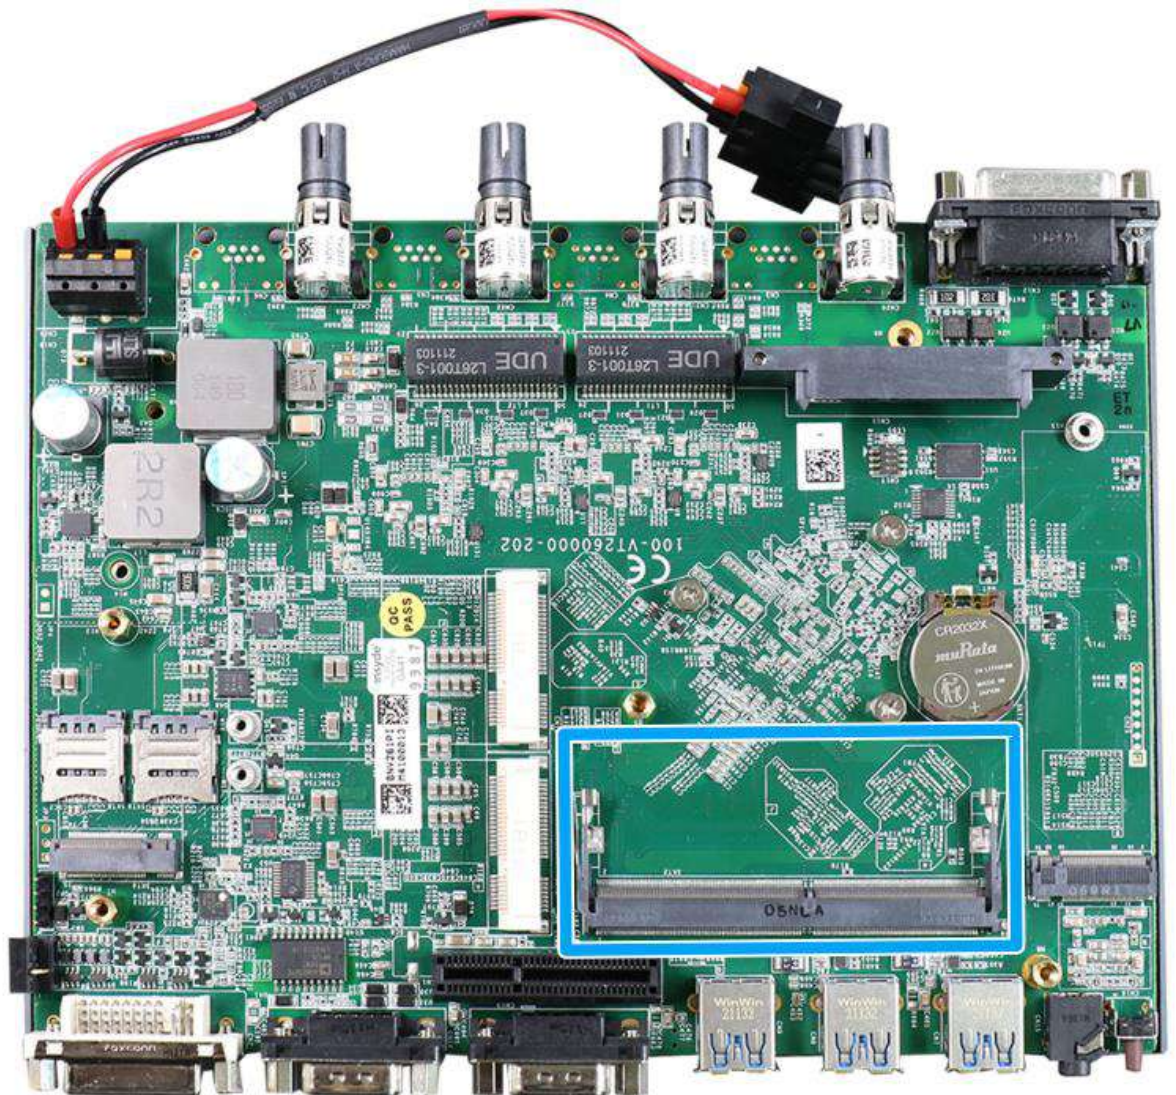


The system motherboard supports a SODIMM socket for installing a DDR4-3200 memory module up to 32GB capacity.

2.5.3 Mini-PCIe Slot (USB2.0 Signal Only)

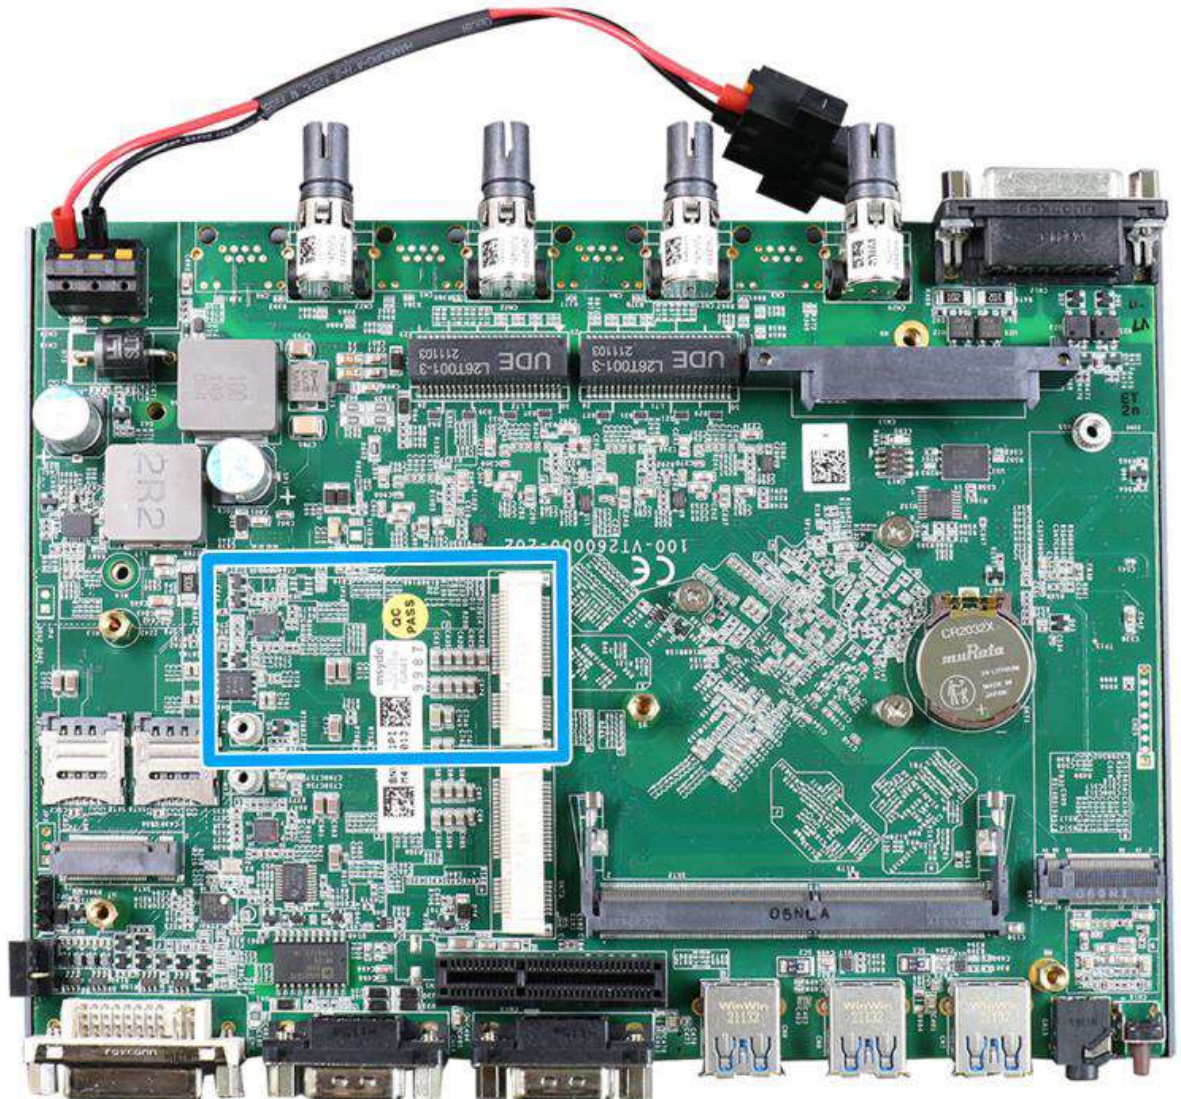


There is a full-size USB2.0 signal only mini-PCIe socket for better compatibility with off-the-shelf mini-PCIe wireless modules. For customers who want to install a mini-PCIe wireless module, please take advantage of the mini-PCIe socket and the antenna openings on the panels.

The multiple antenna apertures can be located on the front and rear panel.

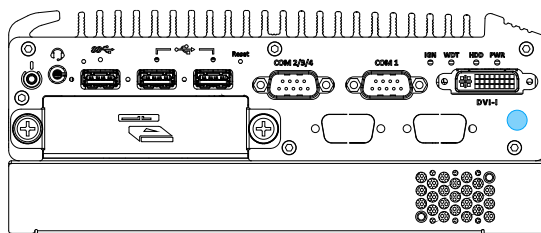


Front panel antenna opening

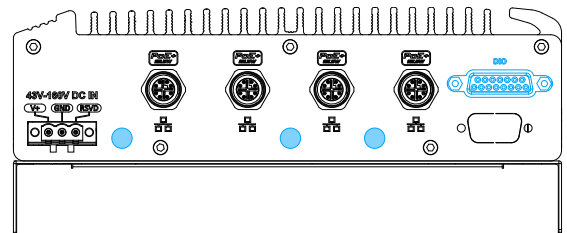


Rear panel antenna opening

mini-PCle Pin Definition

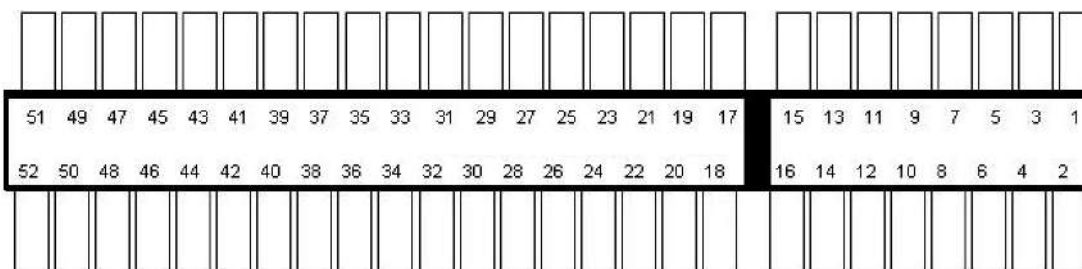


Pin #	Signal	Pin #	Signal
1	-	2	+3.3Vaux
3	-	4	GND
5	-	6	+1.5V
7	-	8	-
9	GND	10	-
11	-	12	-
13	-	14	-
15	GND	16	-
Mechanical Key			
17	-	18	GND
19	-	20	W_DISABLE#
21	GND	22	PERST#
23	-	24	+3.3Vaux
25	-	26	GND
27	GND	28	+1.5V
29	GND	30	Reserved
31	-	32	Reserved
33	-	34	GND
35	GND	36	USB_D-
37	GND	38	USB_D+
39	+3.3Vaux	40	GND
41	+3.3Vaux	42	-
43	GND	44	-
45	Reserved	46	-
47	Reserved	48	+1.5V
49	Reserved	50	GND
51	Reserved	52	+3.3Vaux

2.5.4 Mini-PCIe Slot (PCIe and USB2.0 Signal)

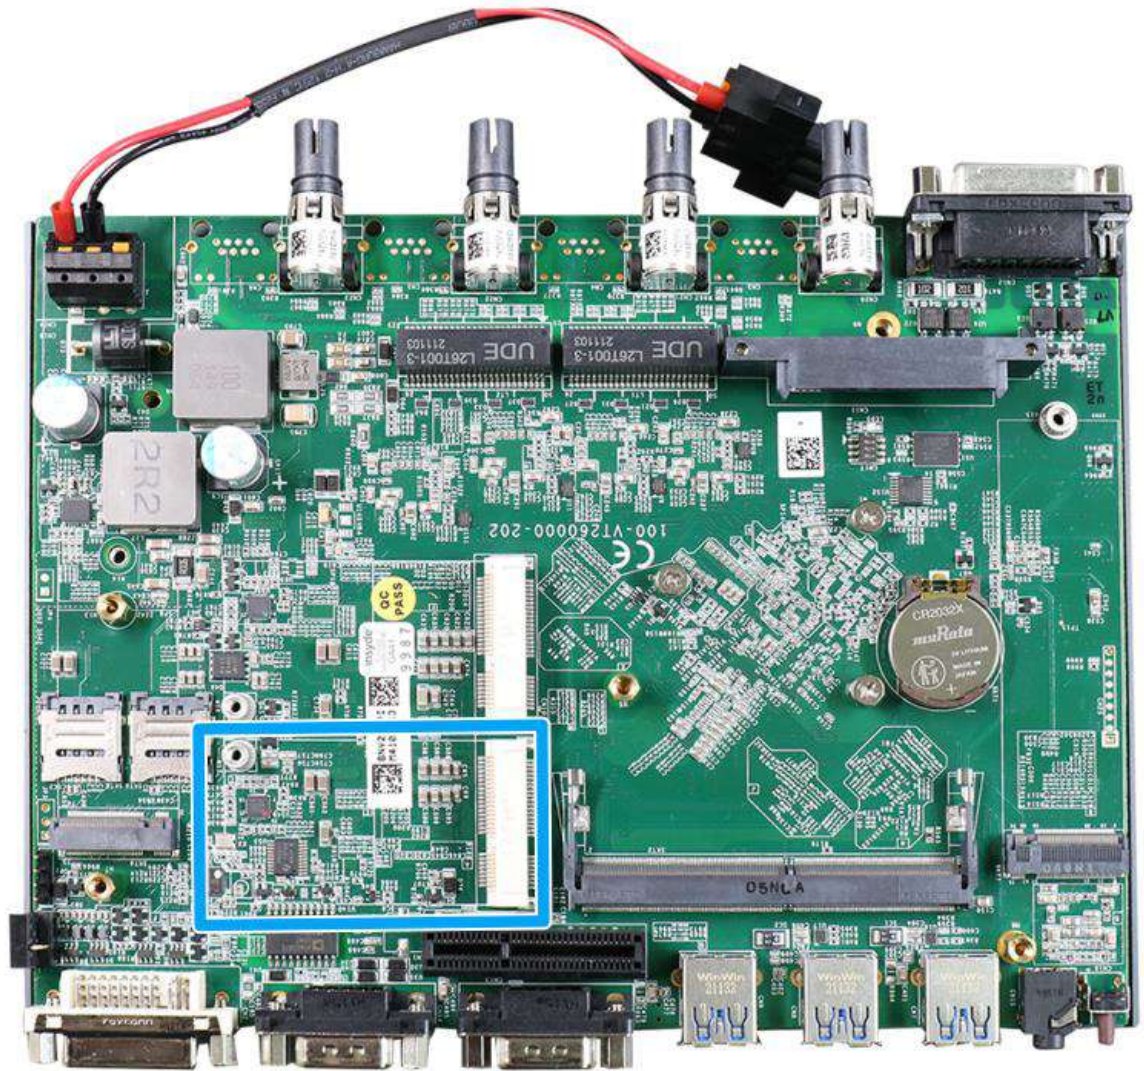


The mini-PCIe socket (in **blue**) accepts off-the-shelf mini-PCIe modules. You can add additional features to your system such as 5G/ 4G, WiFi, GPS, CAN bus, analog frame grabber, etc.

The multiple antenna apertures can be located on the front and rear panel.

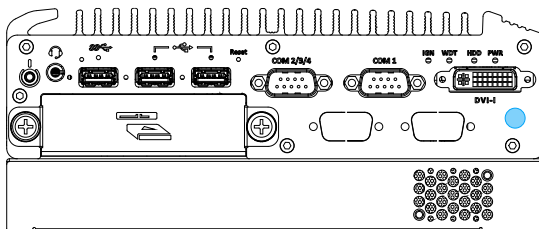


Front panel antenna opening

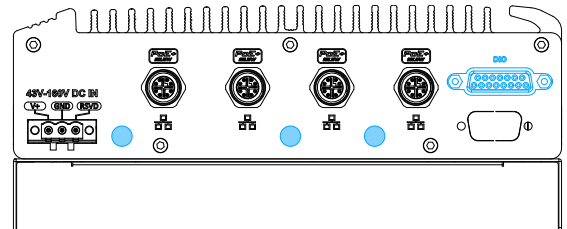

Rear panel antenna opening

mini-PCle Pin Definition

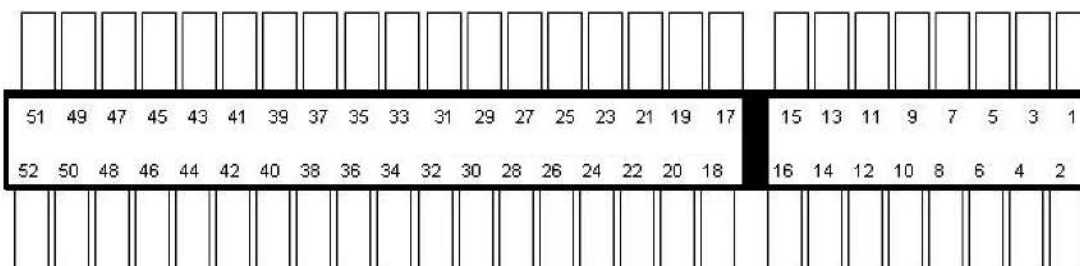


Pin #	Signal	Pin #	Signal
1	-	2	+3.3Vaux
3	-	4	GND
5	-	6	+1.5V
7	-	8	-
9	GND	10	-
11	REFCLK-	12	-
13	REFCLK+	14	-
15	GND	16	-
Mechanical Key			
17	-	18	GND
19	-	20	W_DISABLE#
21	GND	22	PERST#
23	PERn0	24	+3.3Vaux
25	PERp0	26	GND
27	GND	28	+1.5V
29	GND	30	SMB_CLK
31	PETn0	32	SMB_DATA
33	PETp0	34	GND
35	GND	36	USB_D-
37	GND	38	USB_D+
39	+3.3Vaux	40	GND
41	+3.3Vaux	42	-
43	GND	44	-
45	Reserved	46	-
47	Reserved	48	+1.5V
49	Reserved	50	GND
51	Reserved	52	+3.3Vaux

 **WARNING**


Some off-the-shelf mini-PCle 4G modules are not compliant to standard mini-PCle interface. They use 1.8V I/O signals instead of standard 3.3V I/O and may have signal conflict. Please consult with Neosys for compatibility when in doubt!

2.5.5 M.2 3042/ 3052 B Key Socket

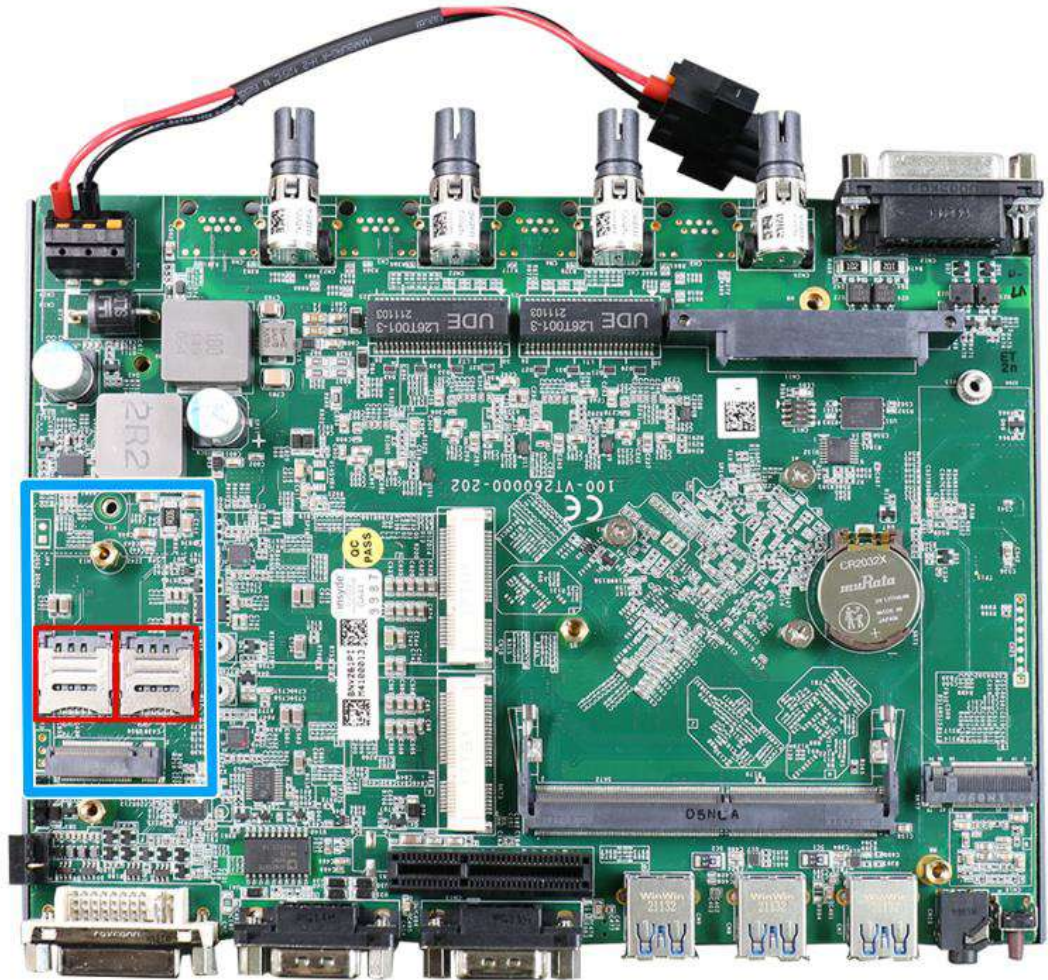


The system has one M.2 3042/ 3052 B key socket (in blue) for 5G/4G module installation and dual SIM slots (in red). The M.2 slot features USB3.1 and USB 2.0 signal.

For SMA antenna installation, there are antenna openings located on the front/ rear panels.

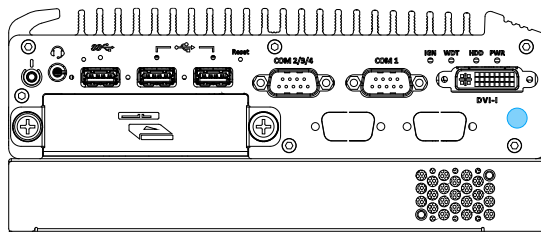


Front panel antenna opening

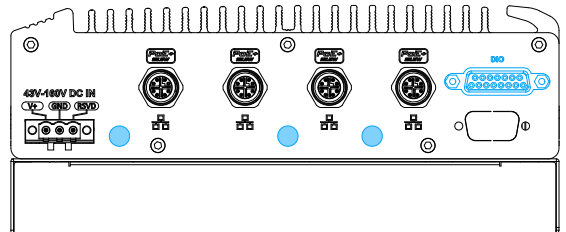

Rear panel antenna opening

M.2 3042/ 3052 B Key Pin Definition

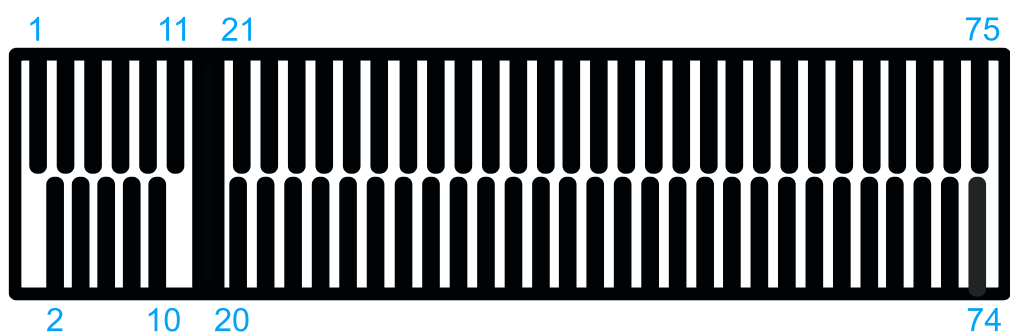

Pin #	Signal	Pin #	Signal
1	-	2	+3V3
3	GND	4	+3V3
5	GND	6	FULL_CARD_POWER_OFF_N
7	USB_D+	8	W_DISABLE_N
9	USB_D-	10	-
11	GND		
Mechanical Key			
21	-	20	-
23	-	22	-
25	-	24	-
27	GND	26	-
29	USB3.0-RX-	28	-
31	USB3.0-RX+	30	UIM1-RESET
33	GND	32	UIM1-CLK
35	USB3.0-TX-	34	UIM1-DATA
37	USB3.0-TX+	36	UIM1-PWR
39	GND	38	-
41		40	
43		42	UIM2-DATA
45	GND	44	UIM2-CLK
47		46	UIM2-RESET
49		48	UIM2-PWR
51	GND	50	PERST_N
53		52	-
55		54	-
57	GND	56	-
59	-	58	-
61	-	60	-
63	-	62	-
65	-	64	-
67	-	66	
69	-	68	-
71	GND	70	+3V3
73	GND	72	+3V3
75	-	74	+3V3

3 System Installation

Before disassembling the system enclosure and installing components and modules, please make sure you have done the following:

- It is recommended that only qualified service personnel should install and service this product to avoid injury or damage to the system.
- Please observe all ESD procedures at all times to avoid damaging the equipment.
- Before disassembling your system, please make sure the system has powered off, all cables and antennae (power, video, data, etc.) are disconnected.
- Place the system on a flat and sturdy surface (remove from mounts or out of server cabinets) before proceeding with the installation/ replacement procedure.

3.1 Disassembling the System

3.1.1 Disassembling Nuvo-2610RL

To access system internal components, the system needs to be disassembled. To disassemble the system enclosure, please refer to the procedures below:

1. Turn the system upside-down on a steady surface. Remove the screws indicated.



2. Remove the screw indicated on the panel.



3. Remove the panel.



4. Remove the screws on the M12 panel.



5. Remove the screws from both sides of the chassis.



Left side chassis screws




Right side chassis screws

6. Slide open the bottom panel.



7. With the bottom panel removed, you can access the system's internal expansion slots.

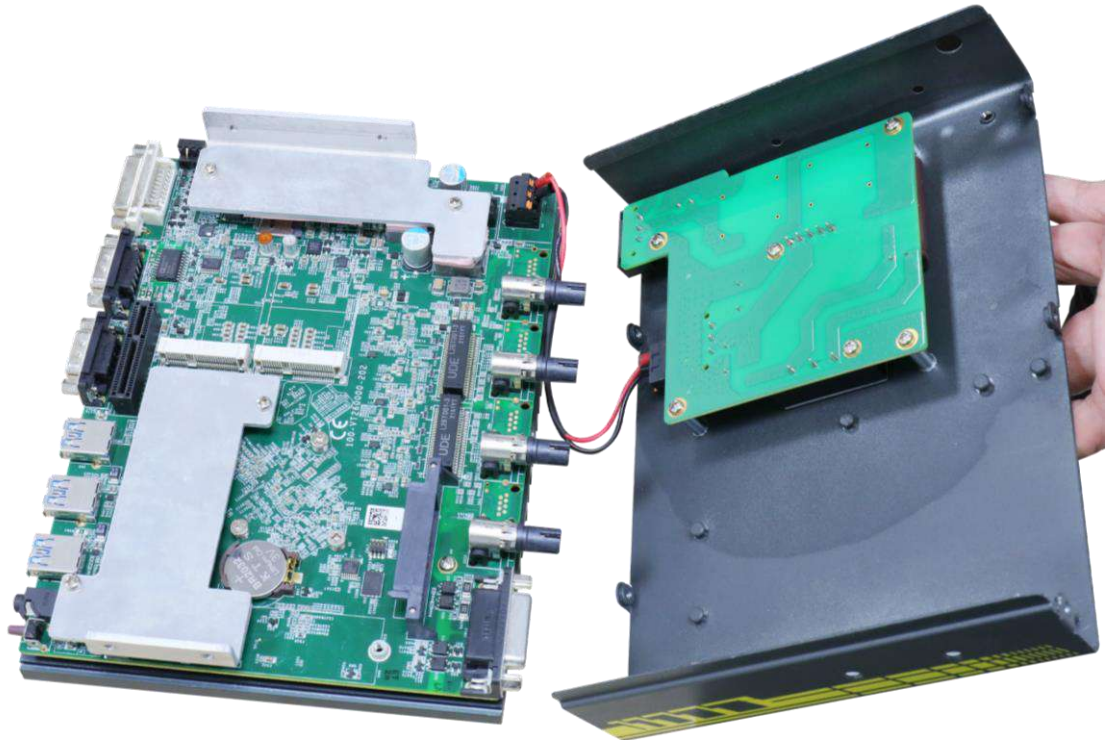

3.1.2 Disassembling Nuvo-2615RL

To access system internal components, the system needs to be disassembled. To disassemble the system enclosure, please refer to the procedures below:

1. Turn the system upside-down on a steady surface. Remove the screws indicated and separate the Cassette module.



2. Gently wiggle the Cassette module and separate it from the enclosure.



3. Remove the screws (indicated in **blue**) and thumb screws (indicated in **red**) indicated on the front I/O panel, and remove the faceplate.



4. Remove the screw indicated on the rear I/O panel and separate it from the enclosure.



5. Use a small Phillips screwdriver to loosen the screws for 3-pin connector, and unplug it.



Release screws on the 3-pin connector



Remove the connector

6. Remove the screws from both sides of the chassis.




Left side chassis screws



Right side chassis screws

7. Gently slide the bottom panel away from M12 panel (towards the panel with USB ports). Remove the U-shaped bottom panel to access internal expansion slots.

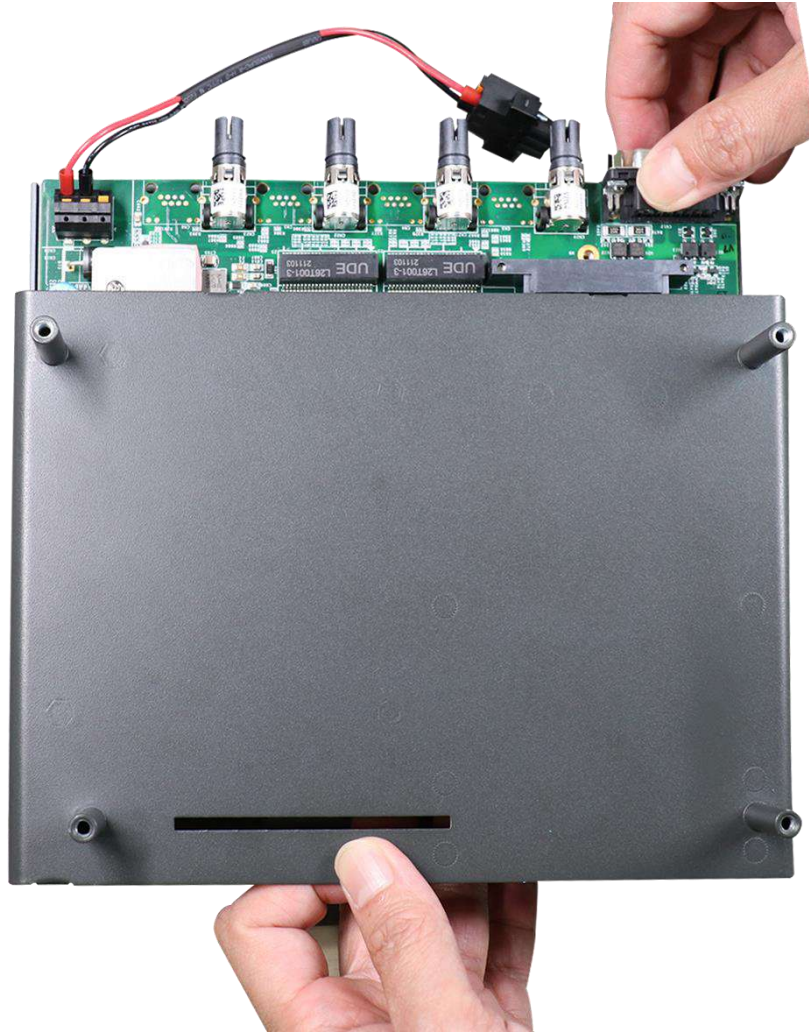


3.2 Installing Internal Components


3.2.1 DDR4 SO-DIMM Installation

There is a SO-DIMM memory slot on the motherboard that supports up to 32GB DDR4-3200. Please follow the procedures below to replace or install the memory modules.

1. Please refer to the section "[Disassembling the System](#)". Remove the screws indicated.

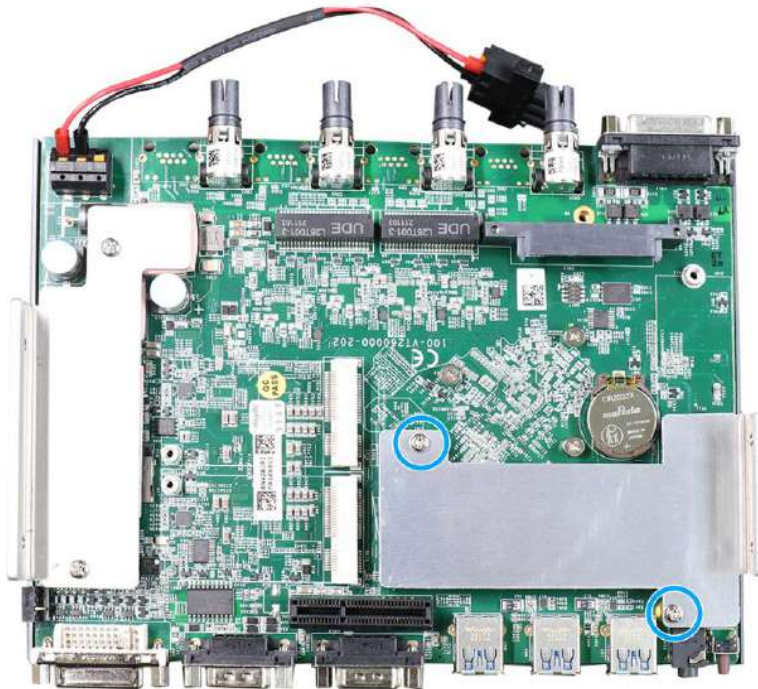

2. Remove the heatsink to locate the SODIMM memory module slot on the motherboard.

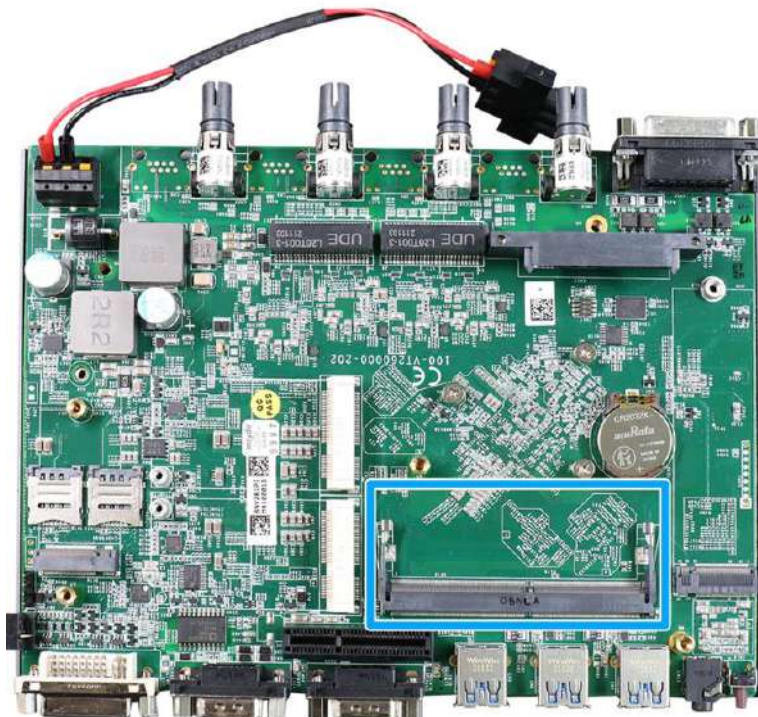

3. To install the memory module, insert gold fingers of the module into the slot at 45 degree angle, push down on the edge of the module and the clips on the side should clip the module into position.



4. Push the memory module down until it is clipped-in.




5. [Reinstall the system enclosure](#) or the panel when done.

If you need to install other components, please refer to respective sections.


3.2.2 M.2 2280 SSD Installation

The system has a SATA signal M.2 2280 slot for you to install an M.22280 SATA SSD. For installation, please refer to the following instructions.


1. Please refer to the section "[Disassembling the System](#)".
2. Remove the screws indicated.

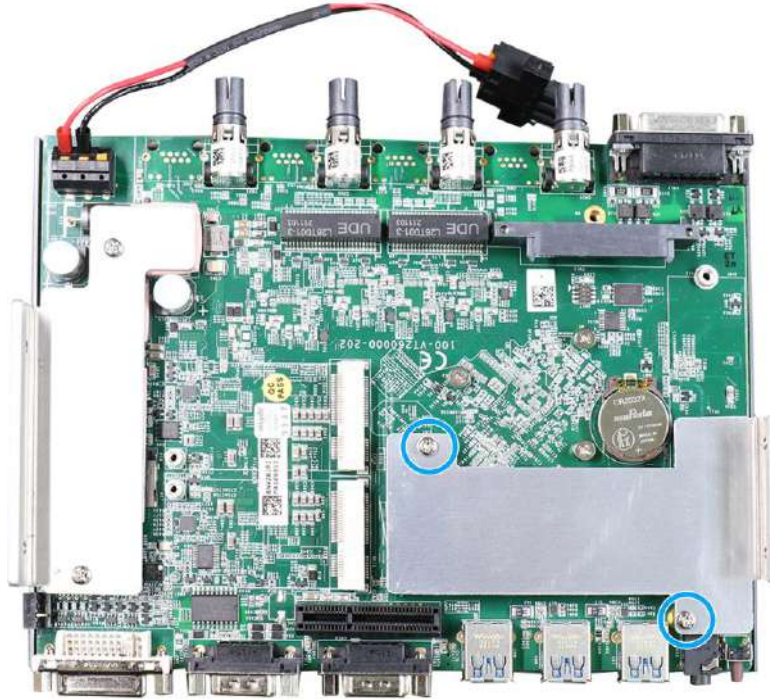


3. Remove the heatsink to access the M.2 slot

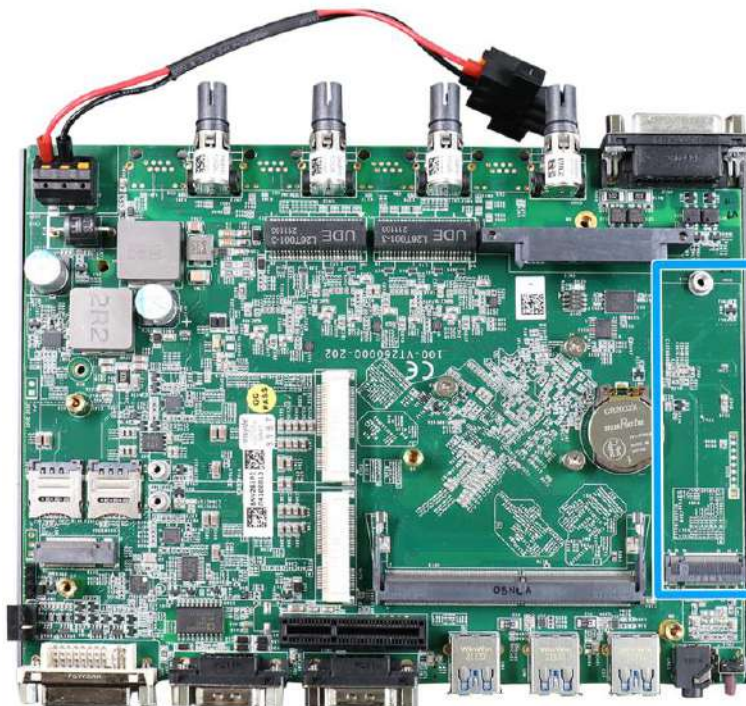

4. Insert the module on a 45 degree angle.

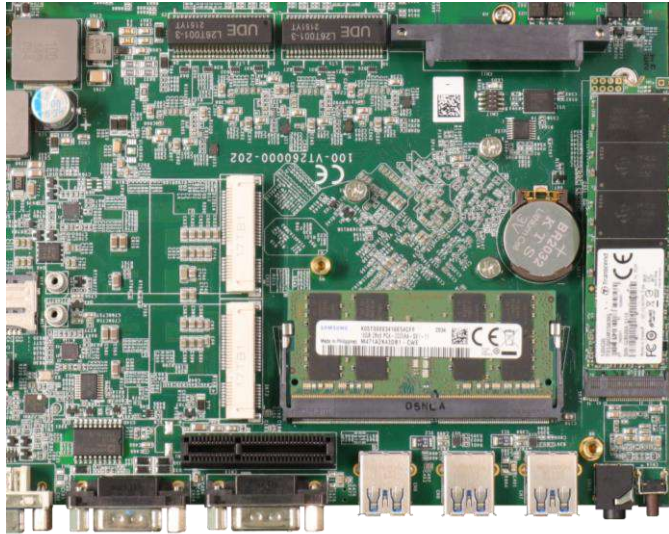

5. Gently press down and secure the module with an M3 P-head screw.

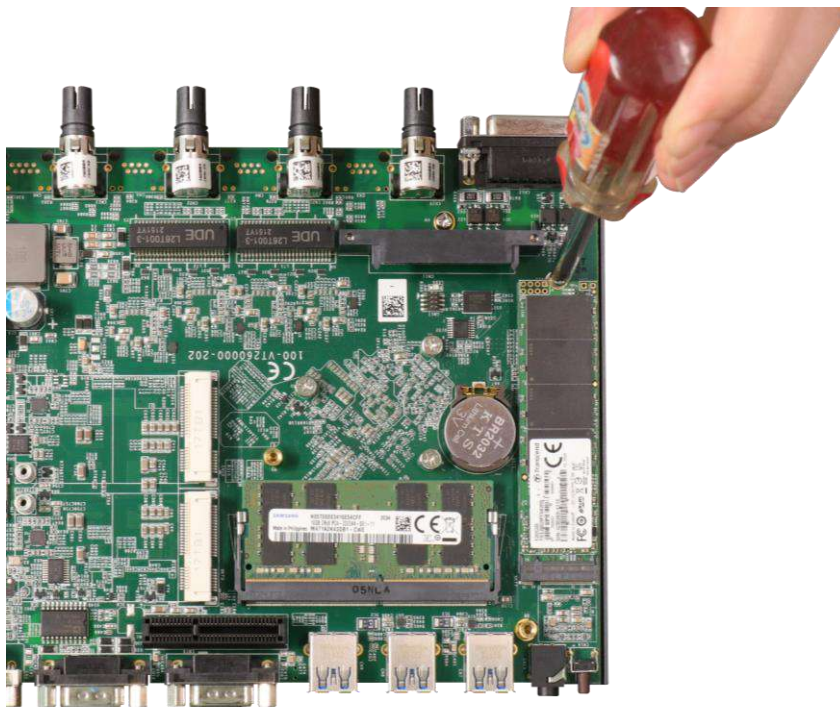


6. [Reinstall the system enclosure](#) or the bottom panel when done.
7. If you need to install other components, please refer to respective sections.


3.2.3 M.2 3042/ 3052 B Key Installation

The system has an M.2 3042/ 3052 B key slot (indicated in **blue**) with two corresponding micro-SIM card slots (indicated in **red**). The M.2 slot can be accessed by removing the bottom panel.


1. Please refer to the section "[Disassembling the System](#)".
2. Remove the screws indicated.

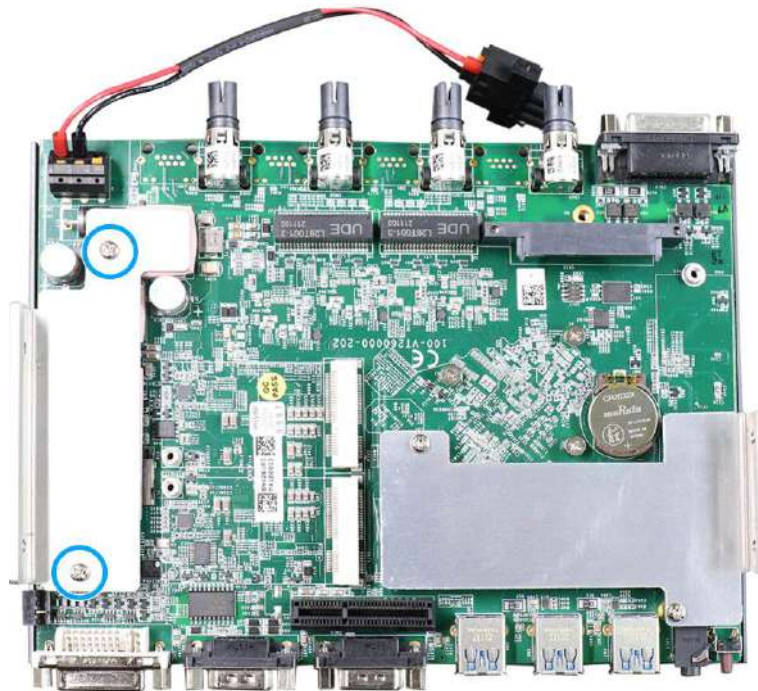

3. Remove the heatsink to access the M.2 3042/ 3052 B key and SIM card slots.

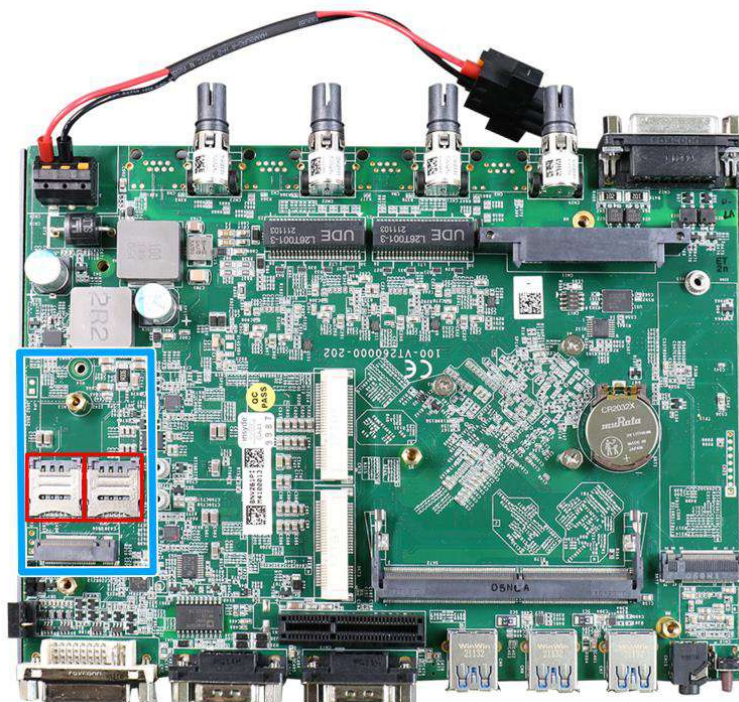


- To install the micro-SIM SIM card, slide the metallic cover in the direction shown and lift it to expose the socket and gold fingers.

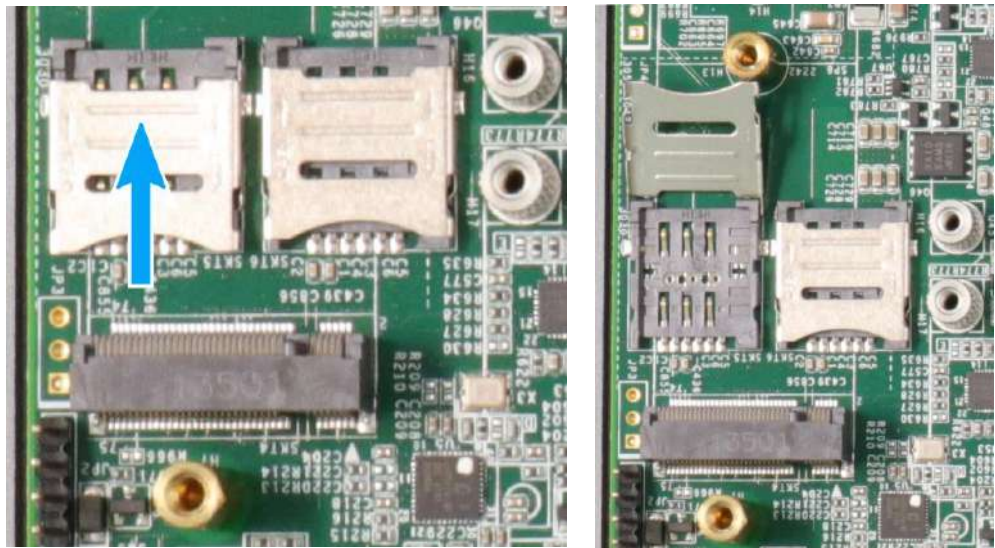

Slide cover in direction shown


Lift the cover with fingertip

- Gently place the micro-SIM SIM card in the orientation shown, lower the cover and slide the cover in the direction shown to secure the SIM card in place.

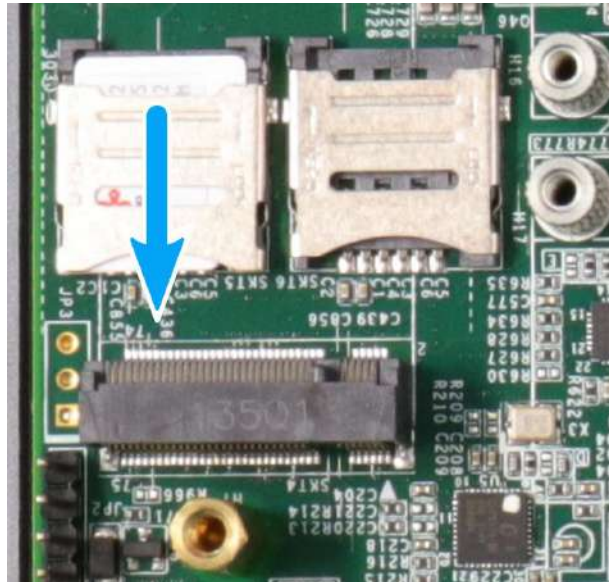

Place SIM into the socket and slide the cover to secure the micro-SIM


- To install the M.2 3042/ 3052 module into place, insert the module on a 45° angle into the slot and secure it using the screw provided.

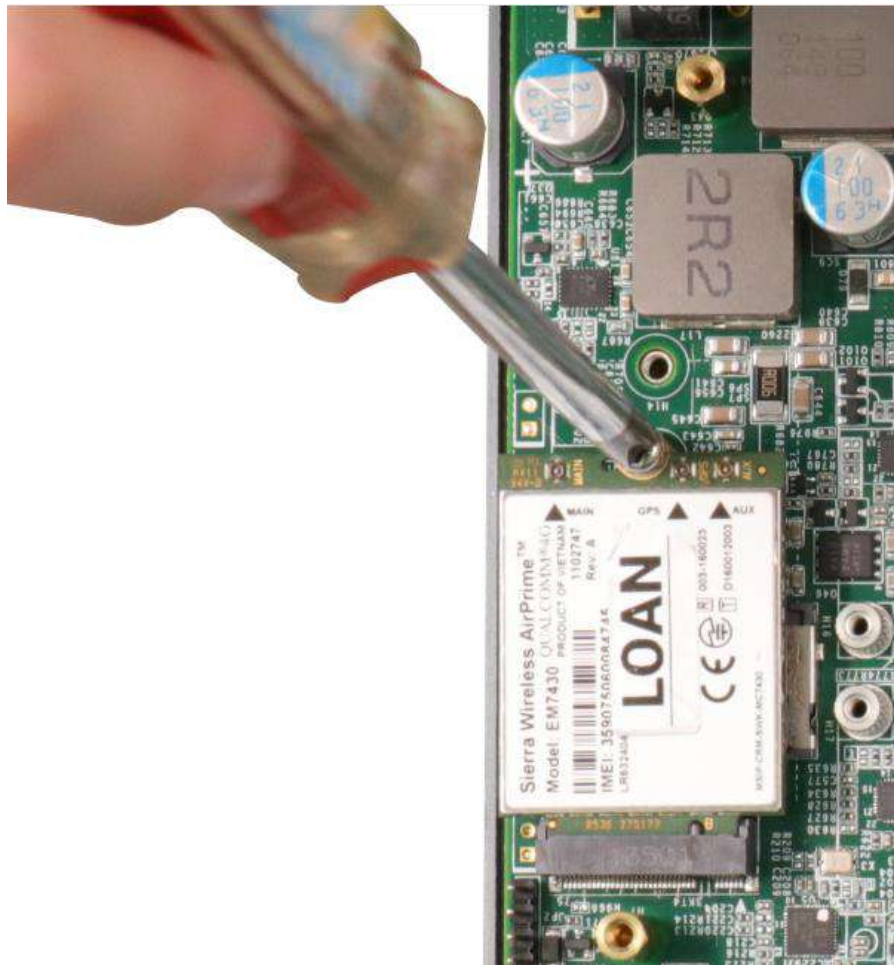


- [Reinstall the system enclosure](#) or the bottom panel when done.
- If you need to install other components, please refer to respective sections.

3.2.4 miniPCIe Installation

The system has two miniPCIe sockets, one offers both PCIe and USB2.0 signals (indicated in **red**), while the other offers only USB2.0 signal (indicated in **blue**) for WiFi module installation. The mini PCIe slots can be accessed by removing the bottom panel. Please refer to the section "[Disassembling the System](#)".

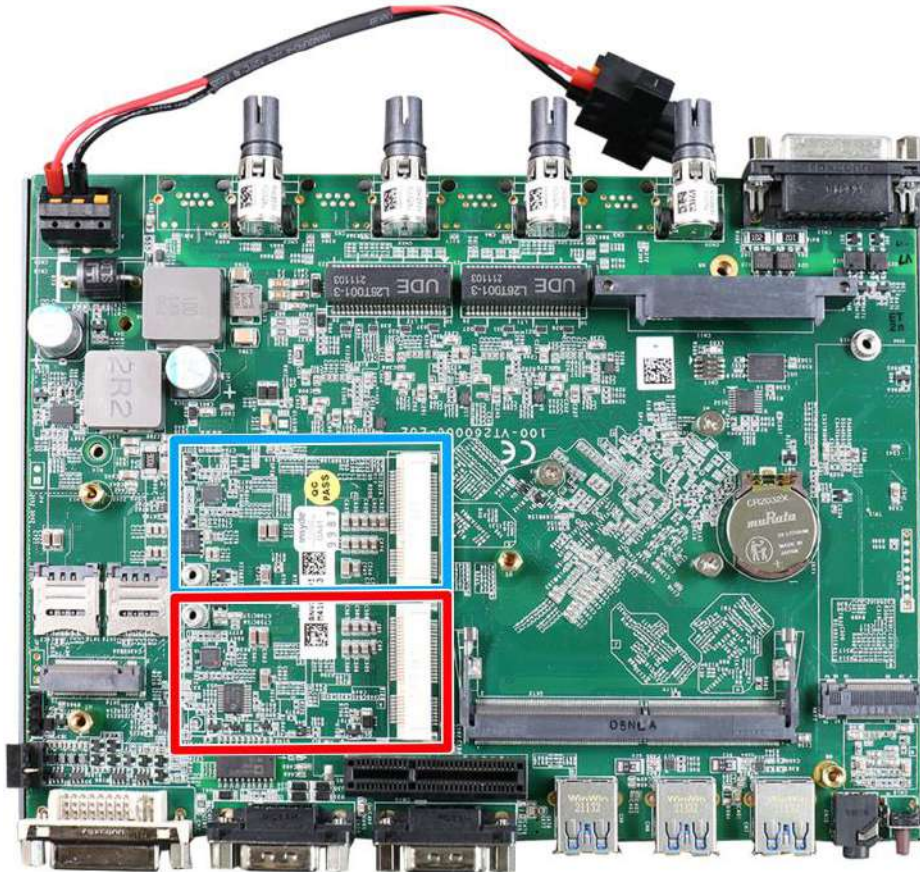

1. To install the mini PCIe module, insert the module on a 45° angle and secure the module using the screw provided.

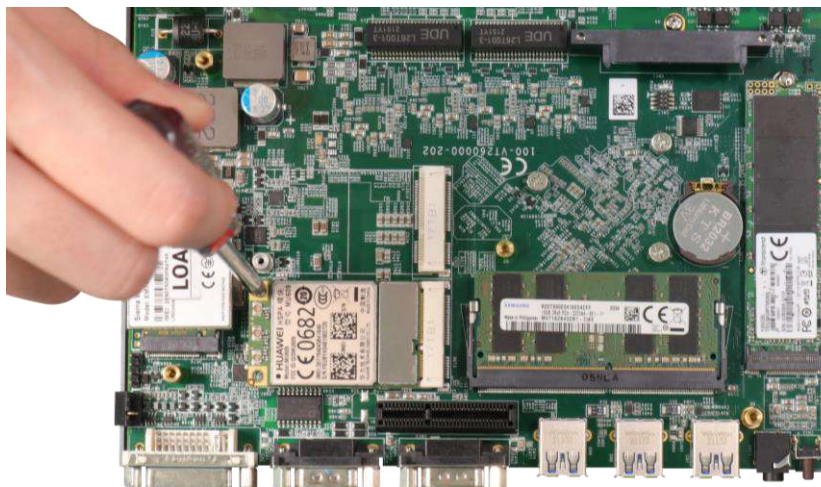


Insert on a 45° angle and secure using the screw provided

2. To install the antenna onto the system enclosure, clip on the IPEZ-to-SMA cable to the module and secure the antenna to the side panel (refer to the module's manual for clip-on connection).



Clip on the IPEZ-to-SMA cable

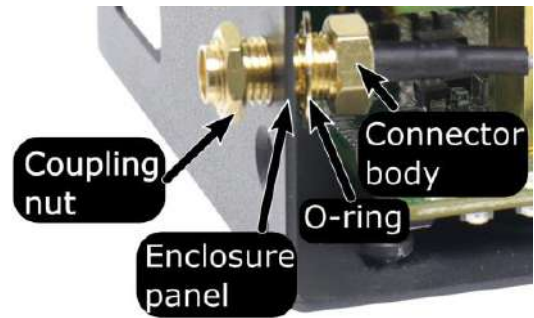

Secure the connector body, coupling nut onto a antenna opening on a panel

3. [Reinstall the system enclosure](#), panel and external antenna.


If you need to install other components, please refer to respective sections.

3.3 Installing the System Enclosure

3.3.1 Installing the Nuvo-2610RL Enclosure

To install the enclosure, please follow the instructions below.

1. Please make sure heatsinks for DRAM/ M.2 2280 slot and M.2 3042/ 3052 slot are installed (secured with screws indicated) regardless if a module is installed

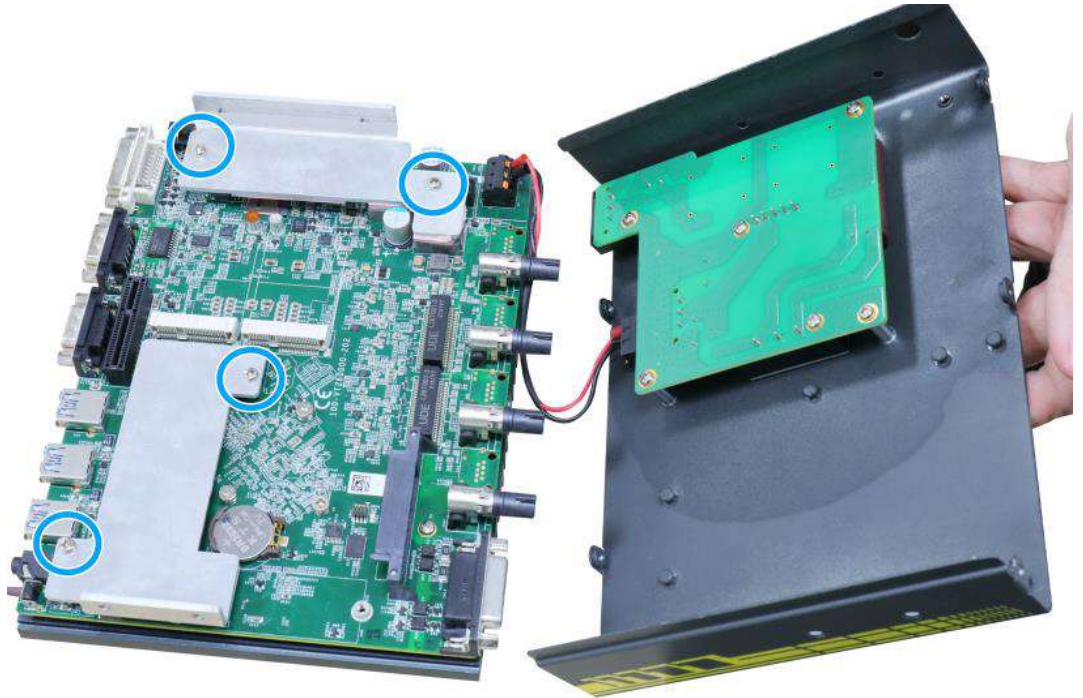

2. Place the bottom panel back onto the heatsink.



- Place the M12 connector panel back on, and secure with the screws where indicated.



- Secure the screws on both sides of the chassis.



Left side chassis screws



Right side chassis screws

- Reinstall the I/O panel.



- Secure the I/O panel with screws where indicated.




- Secure the bottom panel with screws where indicated to complete the enclosure installation process.



3.3.2 Installing the Nuvo-2615RL Enclosure

To install the enclosure, please follow the instructions below.


1. Please make sure heatsinks for DRAM/ M.2 2280 slot and M.2 3042/ 3052 slot are installed (secured with screws indicated) regardless if a module is installed.

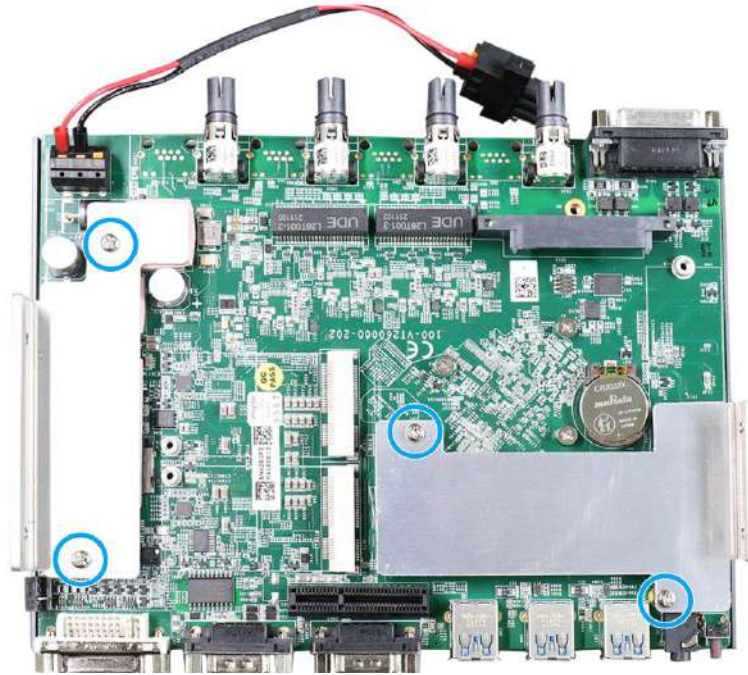


2. Slide bottom U-shape panel to align with the heatsink.



3. Plug in the 3-pin connector and use a small Phillips screwdriver to secure the connector.

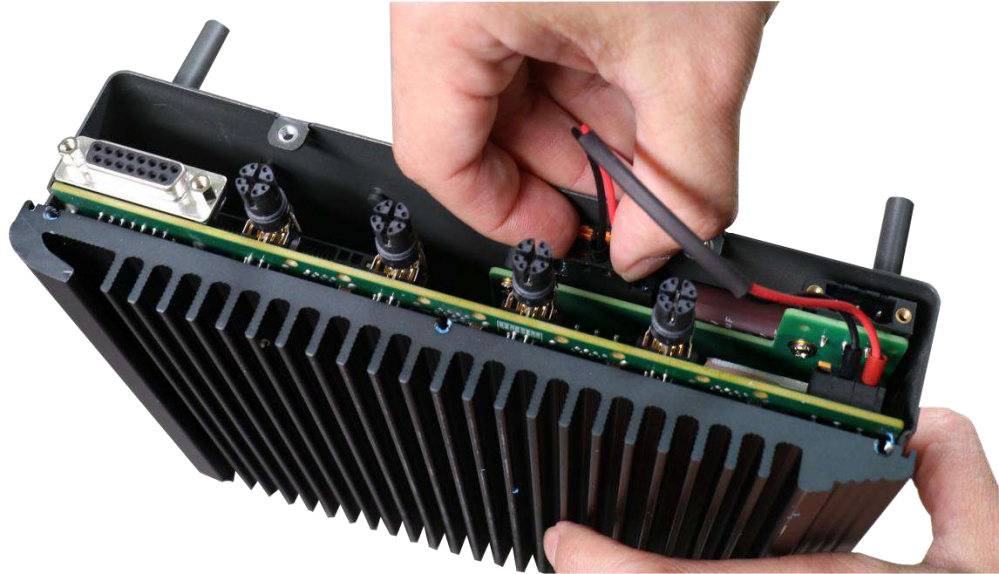

Plug in the 3-pin connector

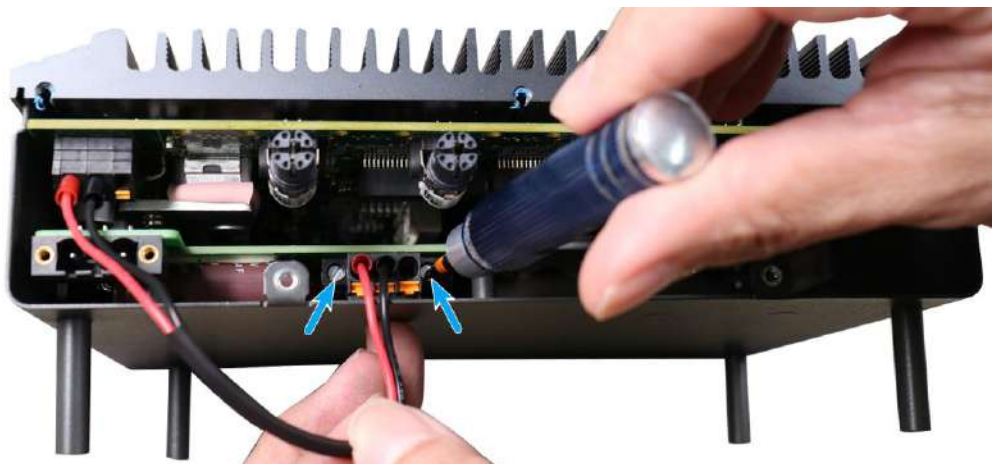

Secure the 3-pin connector

4. Secure the two screws on both sides of the enclosure.



Left side chassis screws



Right side chassis screws

- Place and secure the USB panel with screws (indicated in blue), and insert the 2.5" tray and secure it by tightening the thumb screws (indicated in red).



- Secure the screws (indicated in blue) on the M12 connector panel.



- Turn the system upside-down, place the Cassette module onto the enclosure while ensuring the gold fingers are properly inserted.



- Secure the Cassette module with the screws indicated.




3.4 2.5" Hard Drive/ SSD Installation

To install a 2.5" HDD or SSD in the front accessible tray, please refer to the procedure below.

1. Place the system on a flat sturdy surface, and turn the thumb screws indicated anti-clockwise.



2. Gently pull out the 2.5" HDD/SSD tray. With HDD/SSD label downwards, secure the HDD/SSD using the screws provided (indicated in blue), there are two screws on each side.

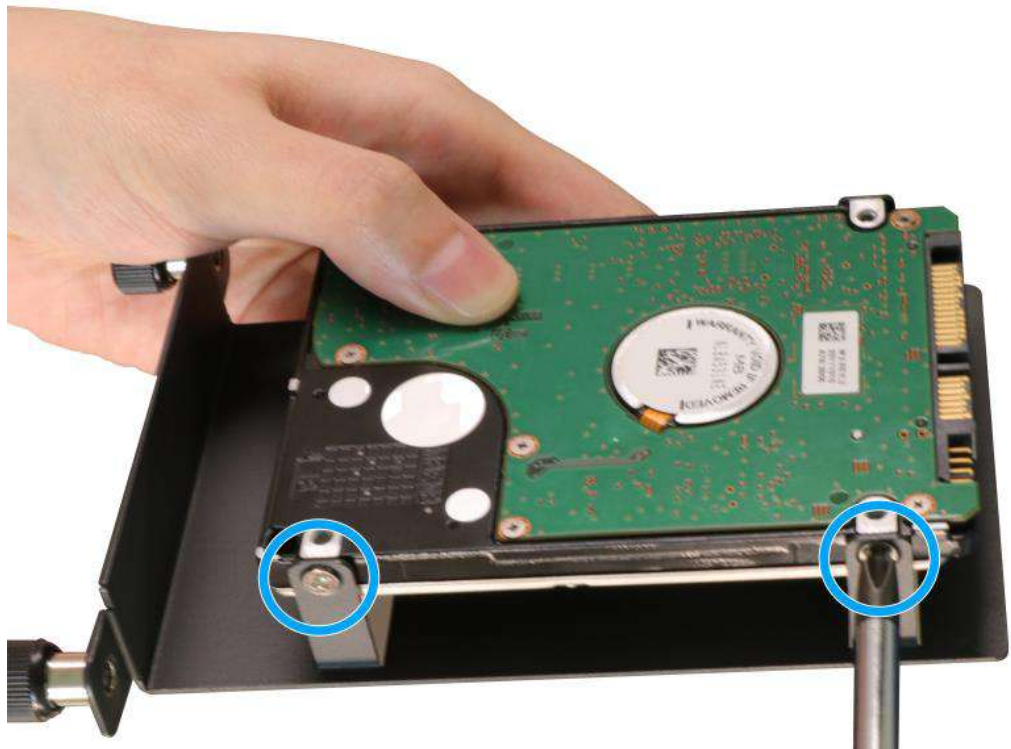

3. Gently insert the tray back into the slot until you feel resistance, and secure the tray by tightening the thumb screws clockwise to complete the installation.



3.5 Replacing the Supercapacitor UPS Module

The system comes with a supercapacitor UPS module in the Cassette module. If you need replace it, please refer to the following instructions.

1. Place the system on a flat sturdy surface and turn the system upside-down. Remove the four screws indicated.



2. Gently lift and separate the Cassette module from the enclosure.



3. Remove the screw indicated and gently lift and separate the L-shaped panel from the Cassette module.



4. Unplug the power cable and remove the screw at the top.




Unplug power cable




Remove the screw

5. Gently slide the supercapacitor UPS module out of the enclosure.

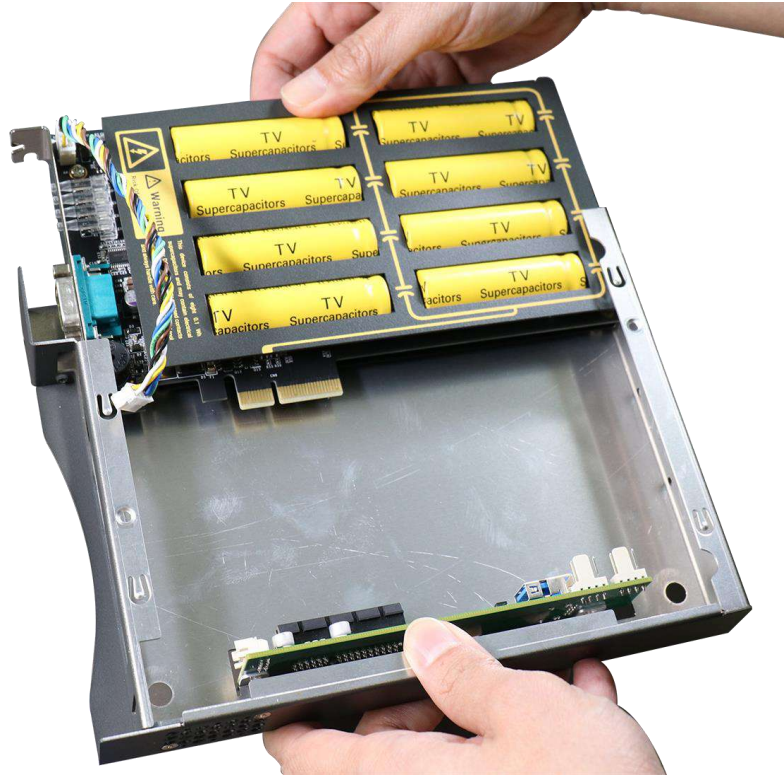

6. Remove the new supercapacitor UPS module out of the delivered enclosure/ static bag. Gently inserted it into the Cassette module. Make sure the PCIe gold fingers and panel are inserted properly.

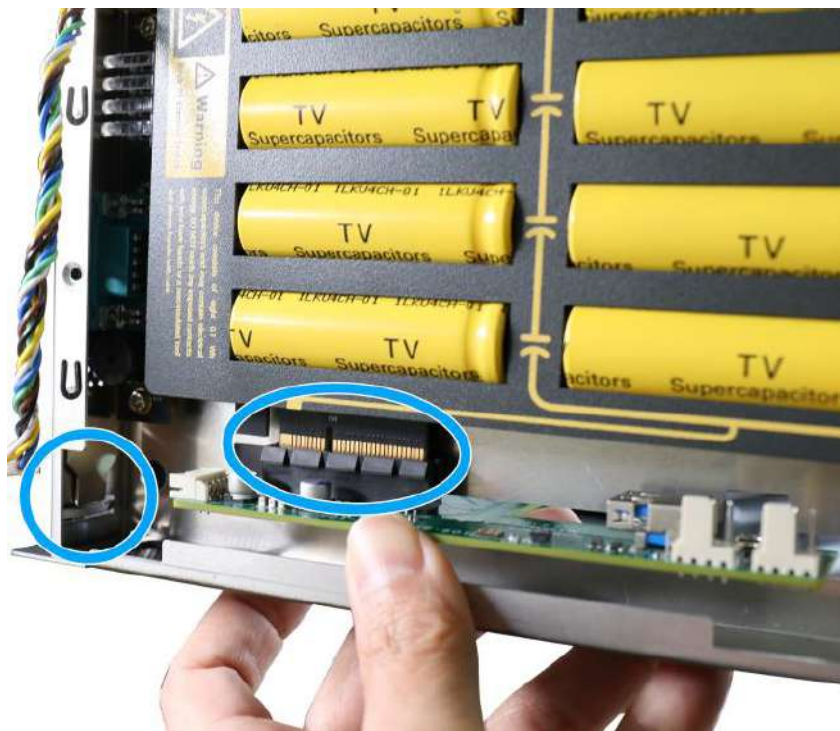

7. Connect the power cable onto the daughter board.



8. Secure the module by securing its panel with a screw.



9. Once the PCIe add-on card has been installed, place the L-shaped cover back onto the Cassette module and secure the screw indicated.



10. Gently lower the Cassette module back onto the system enclosure while ensuring the gold fingers are properly inserted.



11. Secure the screws indicated to complete the installation.



3.6 Damping Bracket Installation


Neosys provides a damping bracket as a standard accessory for the system. The damping bracket is ideal for use in in-vehicle deployments. To install the damping bracket, please refer to the instructions listed below.

3.6.1 Nuvo-2610RL Damping Bracket Installation

1. Place the system on a flat sturdy surface and turn the system upside-down. remove the four screws indicated.



2. Take the **damping bracket** out of the accessory box, insert four **anti-vibration grommets** into the location shown on the bracket, and secure the bracket onto the bottom of the enclosure using four **M4 screws**.

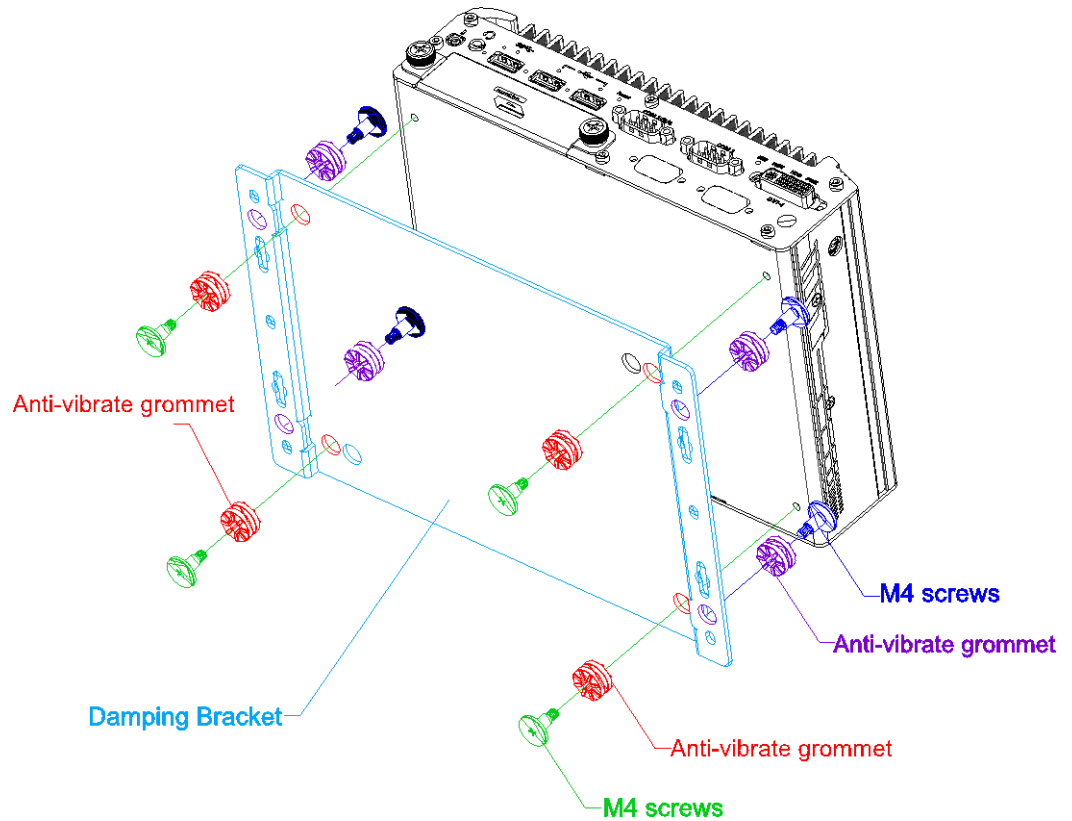

3. Referring to the illustration shown above, insert four **anti-vibration grommets** into locations on the side hinges indicated, secure the system using four **M4 screws** onto a flat surface in the vehicle.


3.6.2 Nuvo-2615RL Damping Bracket Installation

Neosys provides a damping bracket as a standard accessory for the system. The damping bracket is ideal for use in in-vehicle deployments. To install the damping bracket onto Nuvo-2615RL, please refer to the instructions listed below.

1. Place the system on a flat sturdy surface and turn the system upside-down. Remove the four screws and rubber standoffs (if installed) indicated.



2. Take the **damping bracket** out of the accessory box, insert four **anti-vibration grommets** into the location shown on the bracket, and secure the bracket onto the bottom of the enclosure using four **M4 screws**.

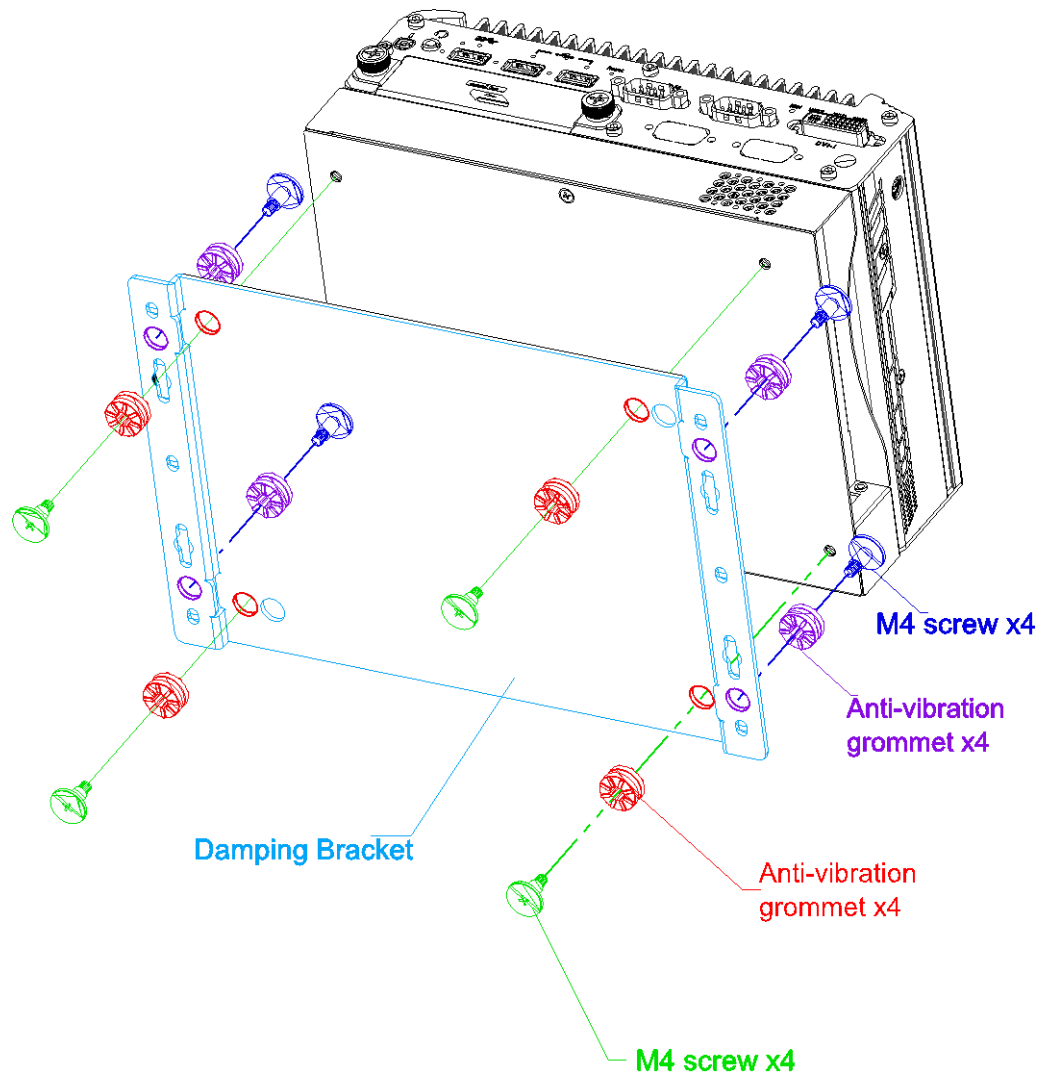

3. Referring to the illustration shown above, insert four **anti-vibration grommets** into locations on the side hinges indicated, secure the system using four **M4 screws** onto a flat surface in the vehicle.

3.7 Wall Mount Bracket Installation (Optional Accessory)


Neosys provides versatile mounting methods for Nuvo-261xRL systems. You can use the optional wall-mount brackets to mount the system onto the wall. To install the wall-mount bracket, please refer to the instructions listed below.

3.7.1 Nuvo-2610RL Wall Mount Bracket Installation



1. Place the system on a flat sturdy surface and turn the system upside-down. remove the four screws indicated.



2. Take the two **wall-mount brackets** and four **M4 screws** out of the accessory box, secure the wall mount brackets onto the bottom of the enclosure according to the illustration shown below

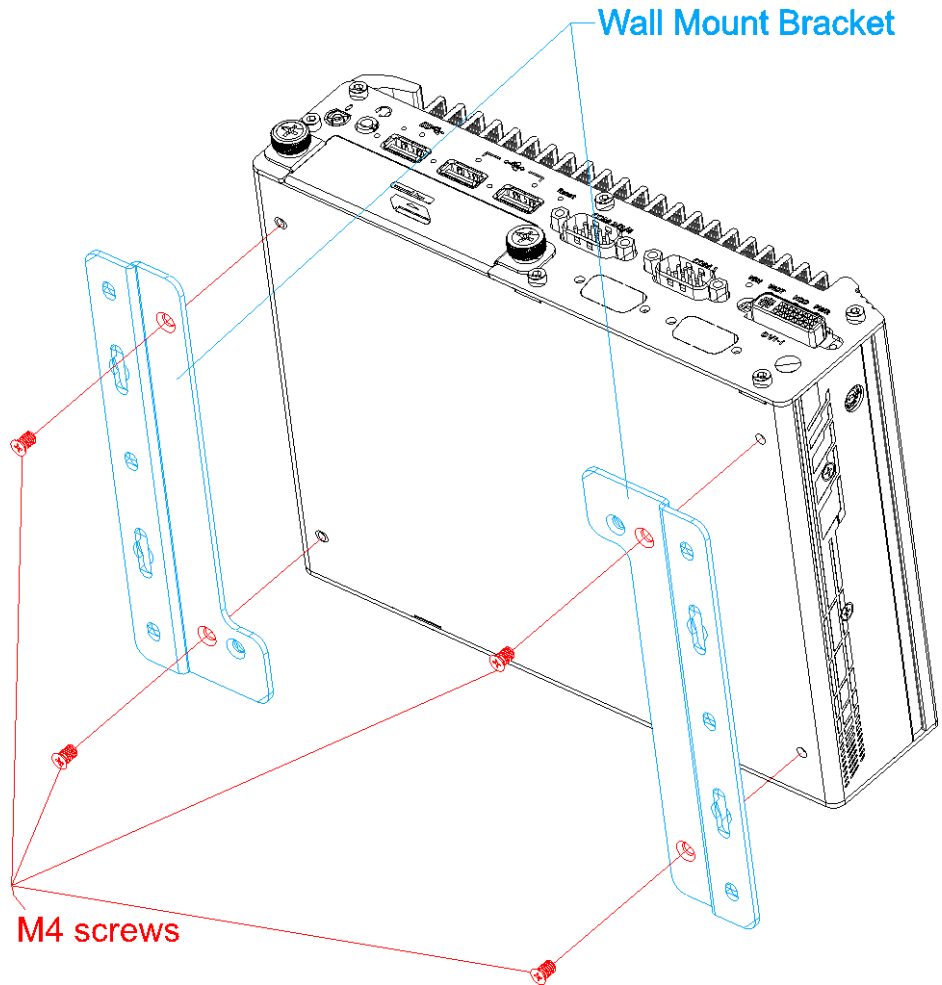

3. Place the system on a flat surface portion of the wall and secure it with four (4) M4 pan screws.
4. When wall mounting, place the heatsink fins perpendicular to the ground for better heat dissipation efficiency.

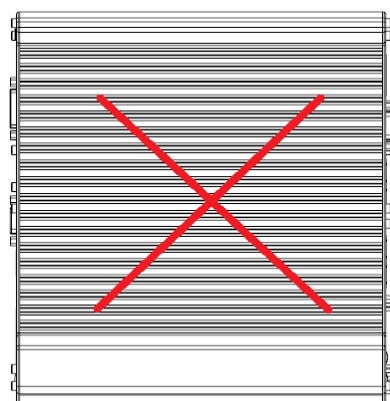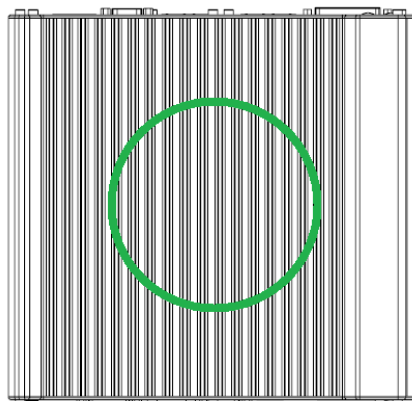


3.7.2 Nuvo-2615RL Wall Mount Bracket Installation



1. Place the system on a flat sturdy surface and turn the system upside-down. Remove the four screws and rubber standoffs indicated.



2. Take the two **wall-mount brackets** and four **M4 screws** out of the accessory box, secure the wall mount brackets onto the bottom of the enclosure according to the illustration shown below.

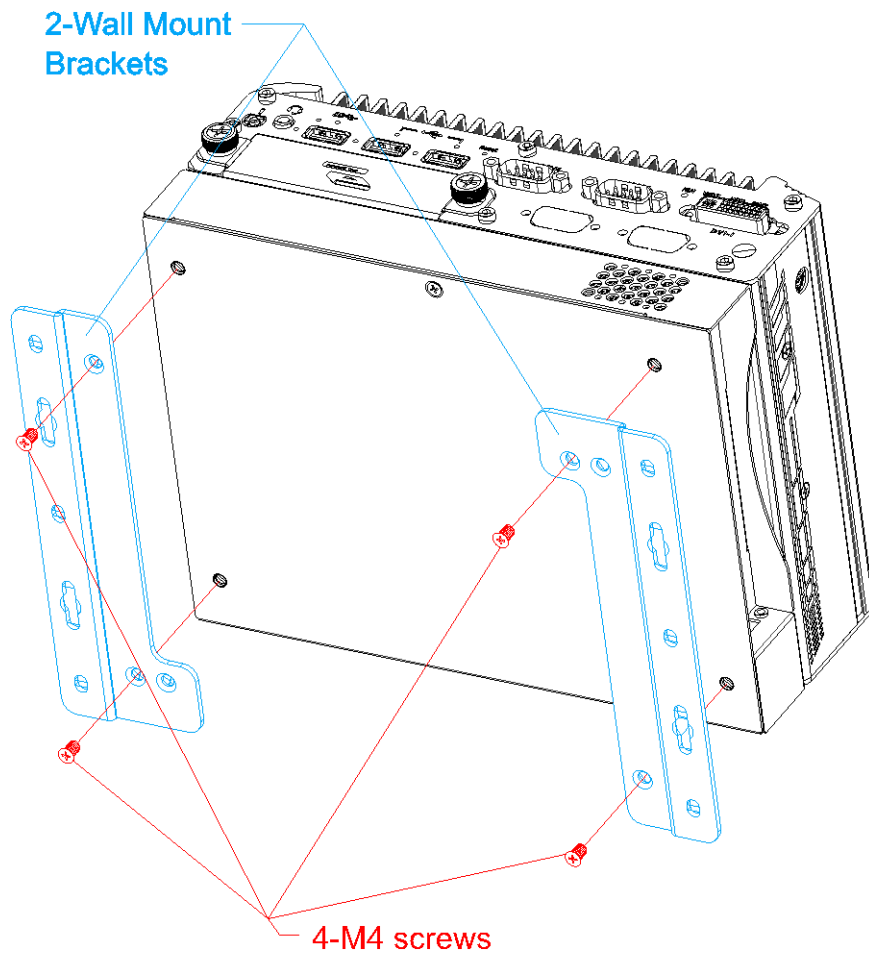

3. Place the system on a flat surface portion of the wall and secure it with four (4) M4 pan screws.
4. When wall mounting, place the heatsink fins perpendicular to the ground for better heat dissipation efficiency.

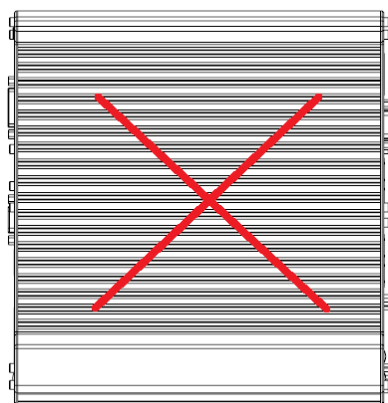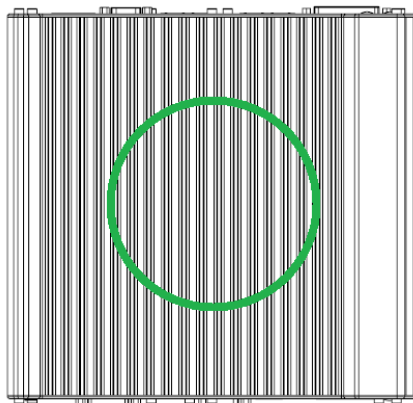


3.8 Powering On the System

There are three methods to power on the system

- Pressing the power button
- Sending a LAN packet via Ethernet (Wake-on-LAN)


3.8.1 Powering On Using the Power Button

This is the simplest way to turn on your system. The power button is a non-latched switch and behaves as the ATX-mode on/off control. With DC power connected, pushing the power button will turn on the system and the PWR LED indicator will light up. Pushing the button when system is on will turn off the system. If your operating system supports ATX power mode (i.e. Microsoft Windows or Linux), pushing the power button while the system is in operation will result in a pre-defined system behavior, such as shutdown or hibernation.

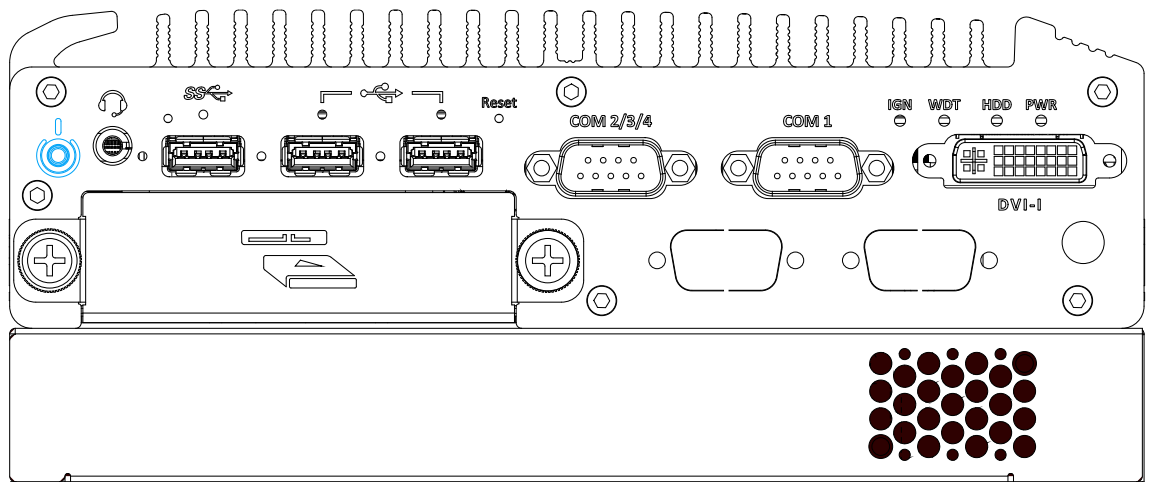

3.8.2 Powering On Using Wake-on-LAN

Wake-on-LAN (WOL) is a mechanism to wake up a computer system from a S5 (system off with standby power) state via issuing a magic packet. The system's Wake-on-LAN compatible GbE port is shown below.

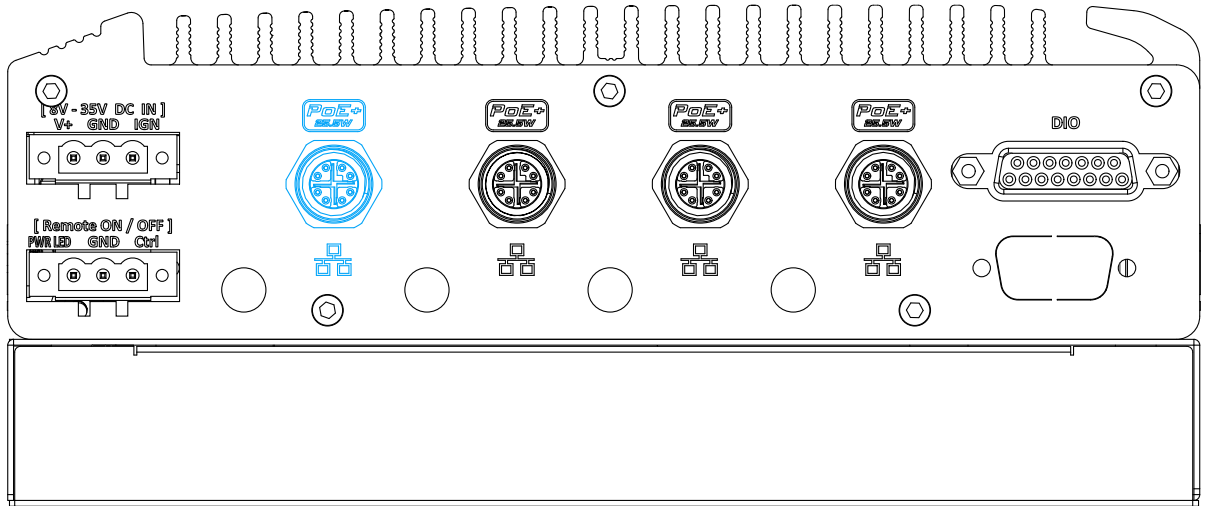


NOTE

Please make sure the Intel chipset and Ethernet driver has been properly installed prior to setting up WOL function.

To enable WOL function, please set up WOL settings in the BIOS and in the operating system by follow the steps described below.

1. When the system boots up, press F2 to enter BIOS setup utility.
2. Go to the **[Power]>[Wake On LAN]** and set it to **[Enabled]**.
3. Press F10 to “**Save changes and exit BIOS**” and allow the system boot into the operating system.
4. Once booted into the Windows system, press “**Windows key + E**”, right-click on “**Network>Properties>Change adapter settings**”. Locate and

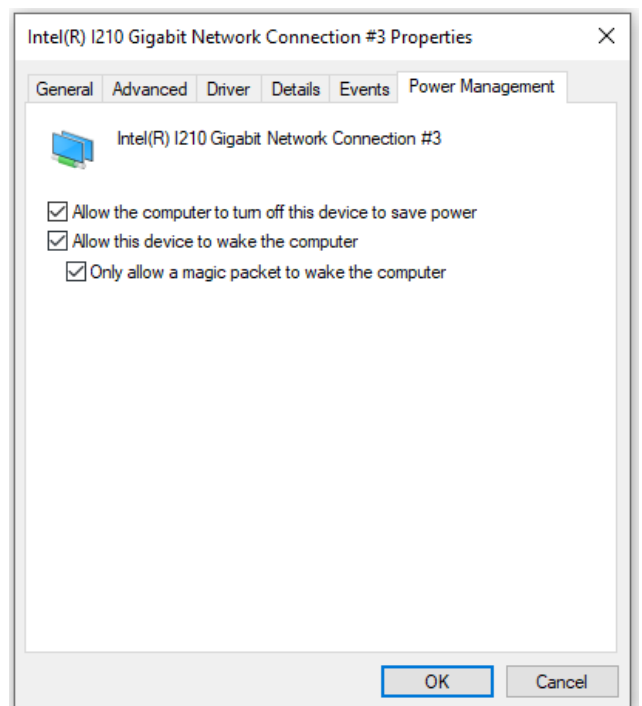

double-click on the adapter Intel® I210 Gigabit Network Connection, click on **Configure**.

5. Click on the **Power Management** tab and check the following options. Click on OK when done.

Magic Packet

The magic packet is a broadcast frame containing anywhere within its payload 6 bytes of all 255 (FF FF FF FF FF FF in hexadecimal), followed by sixteen repetitions of the target computer's 48-bit MAC address.

For example, NIC's 48-bit MAC Address is 78h D0h 04h 0Ah 0Bh 0Ch

DESTINATION SOURCE MISC

FF FF FF FF FF FF

78 D0 04 0A 0B 0C 78 D0 04 0A 0B 0C

78 D0 04 0A 0B 0C 78 D0 04 0A 0B 0C

78 D0 04 0A 0B 0C 78 D0 04 0A 0B 0C

78 D0 04 0A 0B 0C 78 D0 04 0A 0B 0C


78 D0 04 0A 0B 0C 78 D0 04 0A 0B 0C

78 D0 04 0A 0B 0C 78 D0 04 0A 0B 0C

78 D0 04 0A 0B 0C 78 D0 04 0A 0B 0C

78 D0 04 0A 0B 0C 78 D0 04 0A 0B 0C

MISC CRC

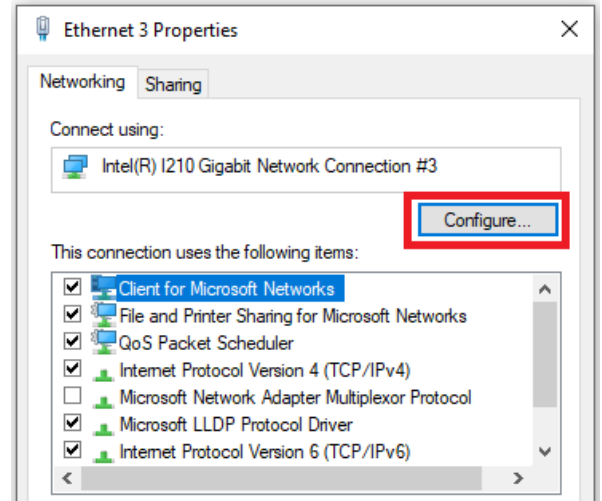



There are some free tools available on Internet that can be used to send a magic packet. Please refer to the following link to understand more about [Magic Packet](#).

4 System Configuration

4.1 BIOS Settings

The system is shipped with factory-default BIOS settings meticulously programmed for optimum performance and compatibility. In this section, we'll illustrate some of BIOS settings you may need to modify. Please always make sure you understand the effect of change before you proceed with any modification. If you are unsure of the function you are changing, it is recommended to change one setting at a time to see its effect(s).

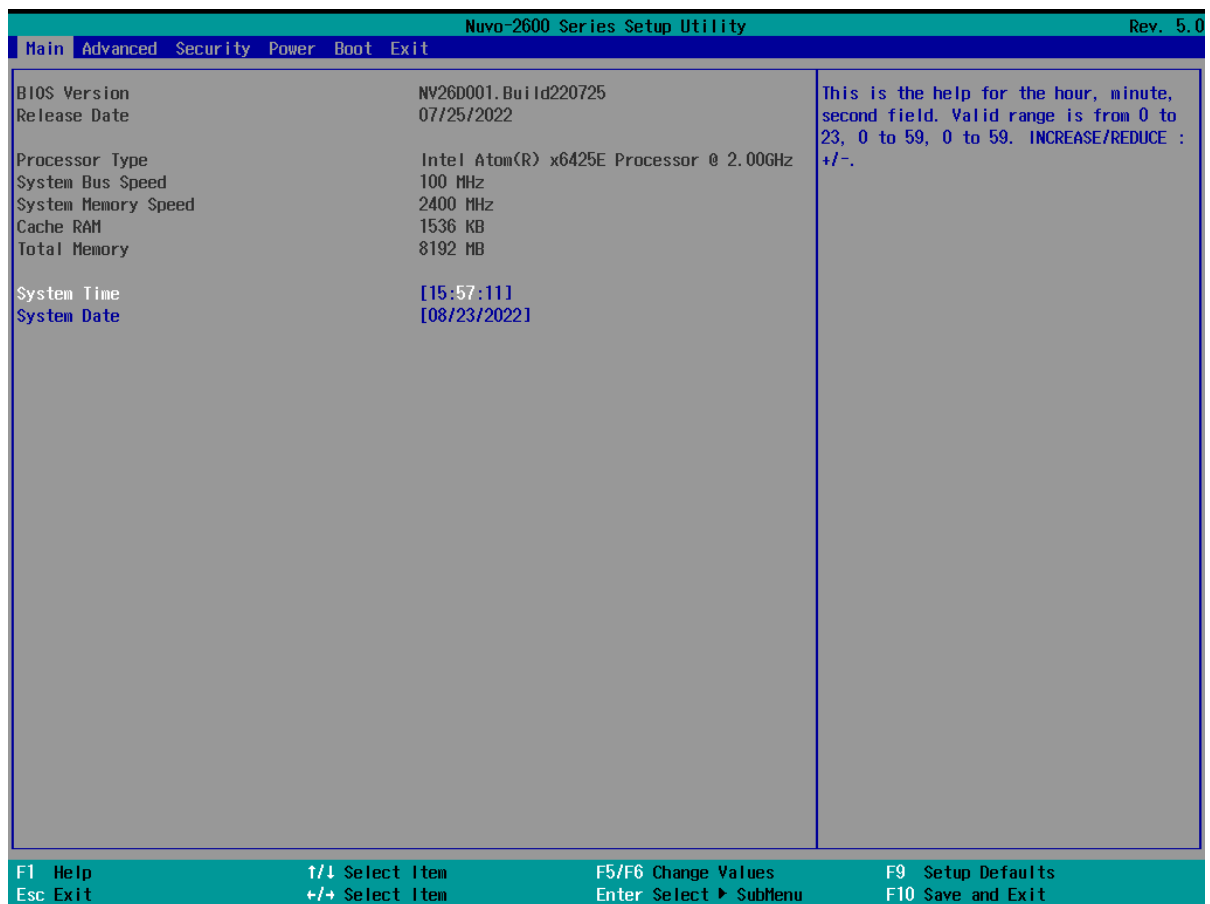


 **NOTE**

Not all BIOS settings will be discussed in this section. If there is a particular BIOS setting you are after but is not discussed in this section, please contact Neousys Technical Support staff.

4.1.1 COM 1 Port Configuration

The system's COM 1 port is a RS-485 port. You can enable/ disable both COM ports via BIOS settings.

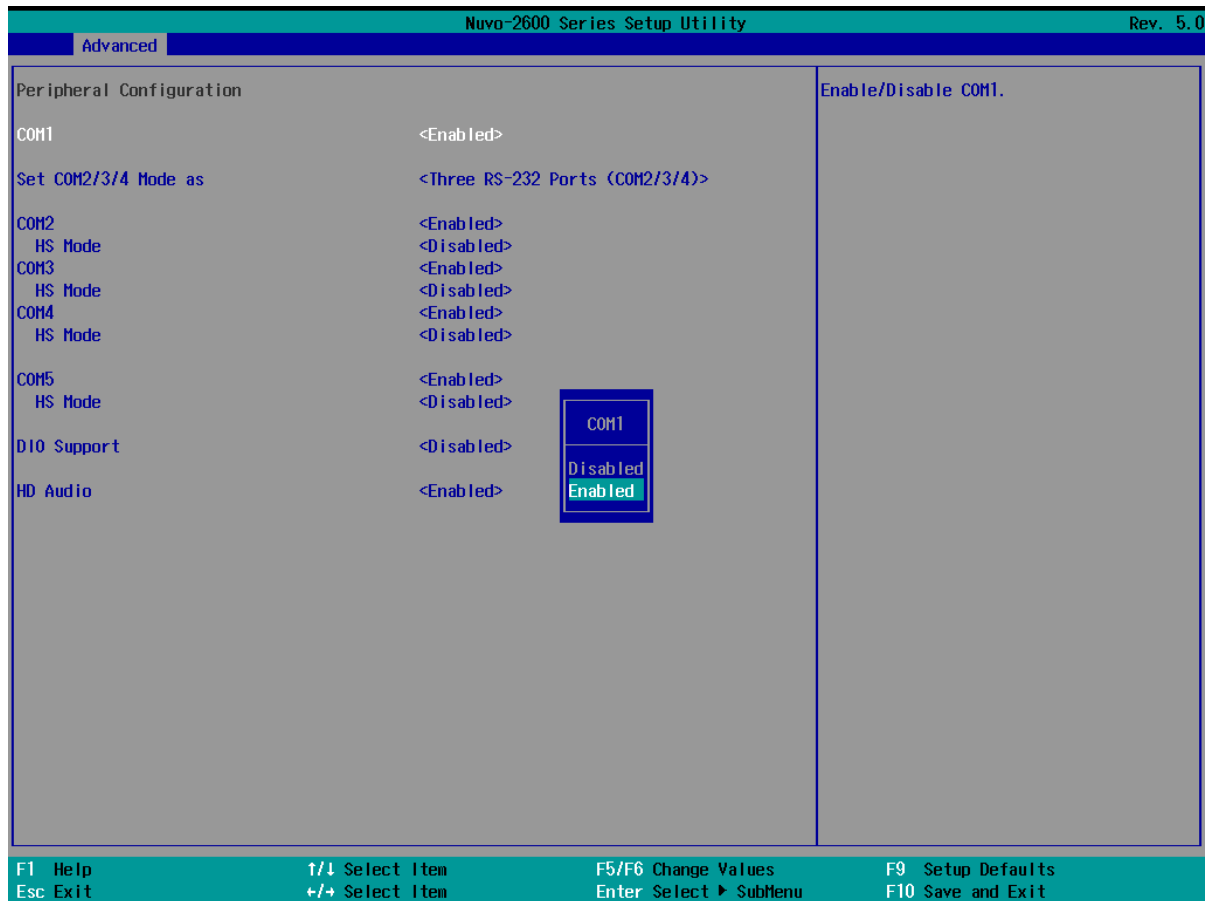


To set COM port operating mode:

1. Press **F2** when the system boots up to enter the BIOS setup utility.
2. Go to **[Advanced]** → **[Peripheral Configuration]**.
3. Highlight COM 1 port and select the **[Disabled or Enabled]** and press Enter to set the mode.
4. Once set, press **F10** to save setting and exit.

4.1.2 COM 2/ 3/ 4 Ports

The system's COM2 port can act as a 3x 3-wire RS-232 port (being COM ports 2/ 3/ 4), or it can act as a RS-422/ 485 (being a COM2 port). You can configure the COM ports via BIOS settings.

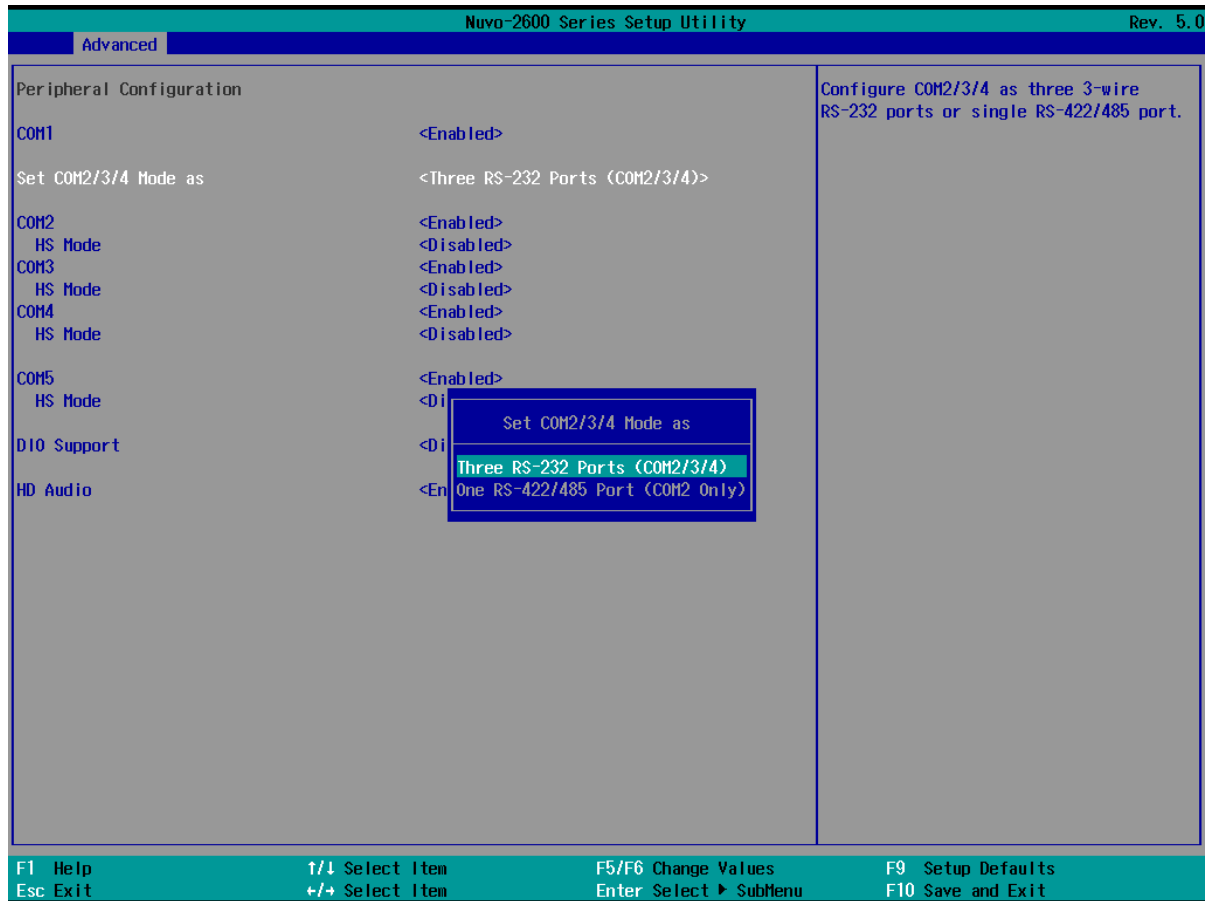

To set COM port operating mode:

1. Press **F2** when the system boots up to enter the BIOS setup utility.
2. Go to **[Advanced]** → **[Peripheral Configuration]**.
3. Highlight COM 1 port and select the **[Disabled or Enabled]** and press Enter to set the mode.
4. Once set, press **F10** to save setting and exit.

4.1.3 COM Port High Speed Mode

The high speed mode of each COM port effectively allows for the port's baud rate generator to operate at 8x the speed with an effective baud rate of 921,600 bps (115,200 x 8). Please refer to the following instructions on how to enable the high speed mode for your COM port (COM1 used as an example).




To set COM port high speed mode:

1. Press **F2** when the system boots up to enter the BIOS setup utility.
2. Go to **[Advanced]** → **[Peripheral Configuration]**.
3. Enable or set the **[Set COM Mode as]** option to the desired mode.
4. Highlight **[HS Mode]** and press ENTER to bring up options, highlight **[Enable]** and press ENTER.
5. Once set, press **F10** to save setting and exit.

4.1.4 Power On After Power Failure Option

This option defines the behavior of system when DC power is supplied.

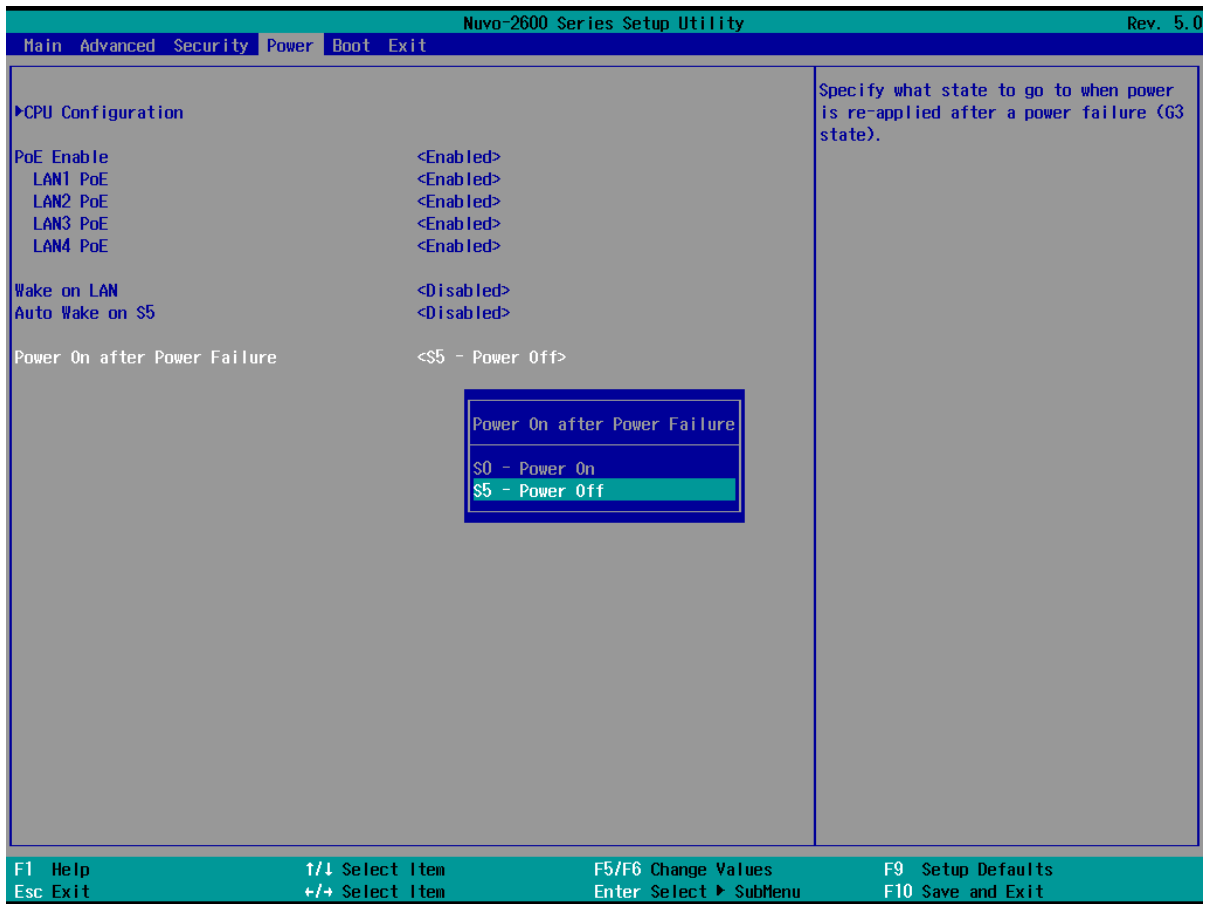

Value	Description
S0 – Power On	System is powered on when DC power is supplied.
S5 – Power Off	System is kept in off state when DC power is supplied.

To set “Power On after Power Failure” option:

1. When system boots up, press F2 to enter BIOS setup utility.
2. Go to **[Power] > [Power On after Power Failure]**.
3. Highlight **[Power On after Power Failure]**, press Enter to bring up setting options, S0 – Power On or S5 – Power Off, and press Enter to select the setting.
4. Press F10 to “Exit Saving Changes”.

4.1.5 Wake on LAN Option

Wake-on-LAN (WOL) is a mechanism which allows you to turn on your system via Ethernet connection. To utilize Wake-on-LAN function, you have to enable this option first in BIOS settings. Please refer to “Powering On Using Wake-on-LAN” to set up the system.




To enable/disable “Wake on LAN” option:

1. When system boots up, press F2 to enter BIOS setup utility.
2. Go to **[Power]> [Wake on LAN]**.
3. Press Enter to bring up setting options, scroll to the setting you desire and press Enter to set.
4. Press F10 to “Exit Saving Changes”.

4.1.6 Add Boot Options

The Add Boot Options dedicates the boot sequence order of a newly added device (eg. USB flash drive). The setting allows you to set the newly added device to boot first or as the last device on the list.

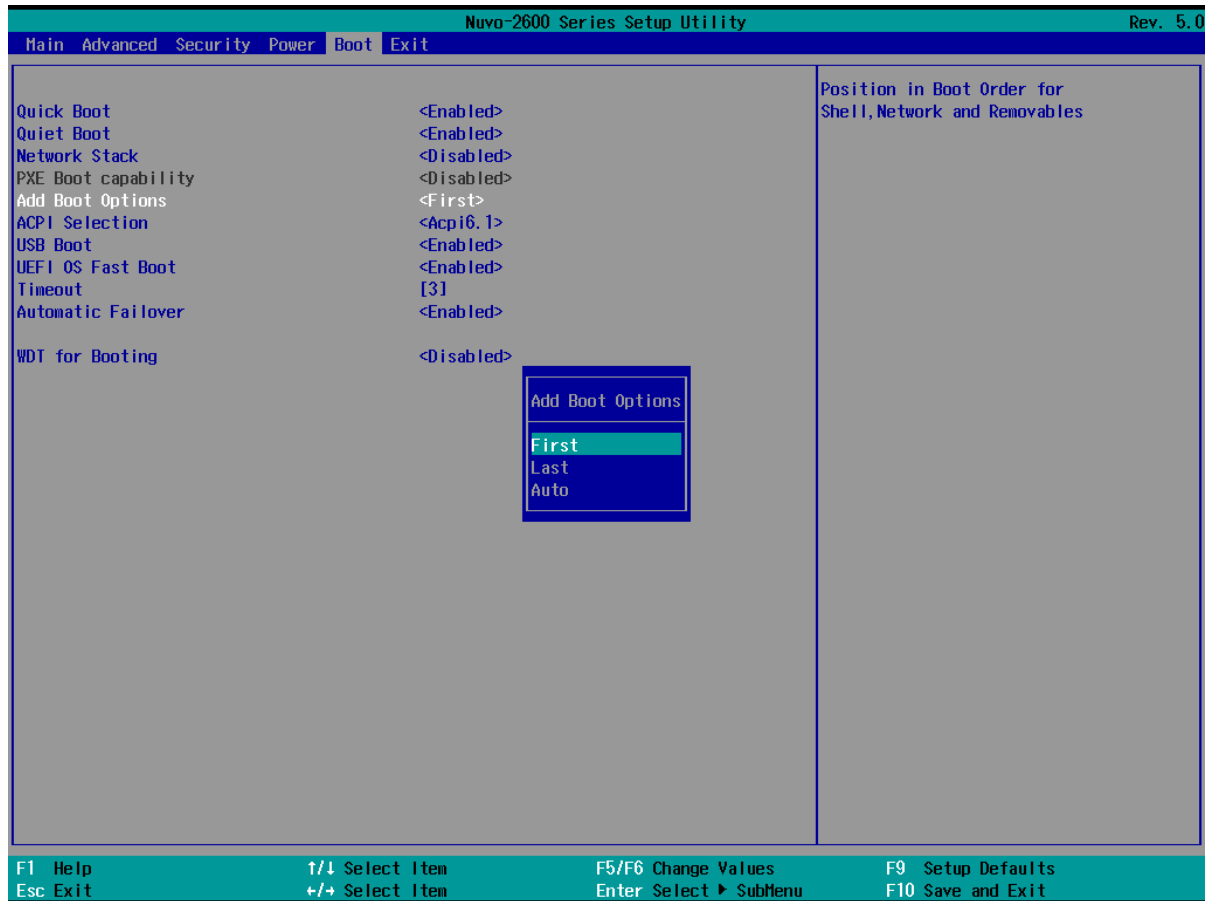


To set Add Boot Options:

1. When system boots up, press F2 to enter BIOS setup utility.
2. Go to [Boot] > [Add Boot Option], press Enter to bring up options, First or Last.
3. Highlight your selection and press Enter, press F10 to "Exit Saving Changes".

4.1.7 Watchdog Timer for Booting

The Watchdog timer setting in the BIOS ensures a successful system boot by specifying a timeout value. If the Watchdog timer is not stopped and expires, the BIOS will issues a reset command to initiate another boot process. There are two options in BIOS menu, “**Automatically after POST**” and “**Manually after Entering OS**”. When “**Automatically after POST**” is selected, the BIOS automatically stop the watchdog timer after POST (Power-On Self Test) OK. When “**Manually after Entering OS**” is selected, it’s user’s liability to stop the watchdog timer when entering OS. This guarantees the system can always boot into OS, otherwise another booting process will be initiated.

For information about programming watchdog timer, please refer to **Appendix A Watchdog Timer & Isolated DIO**.

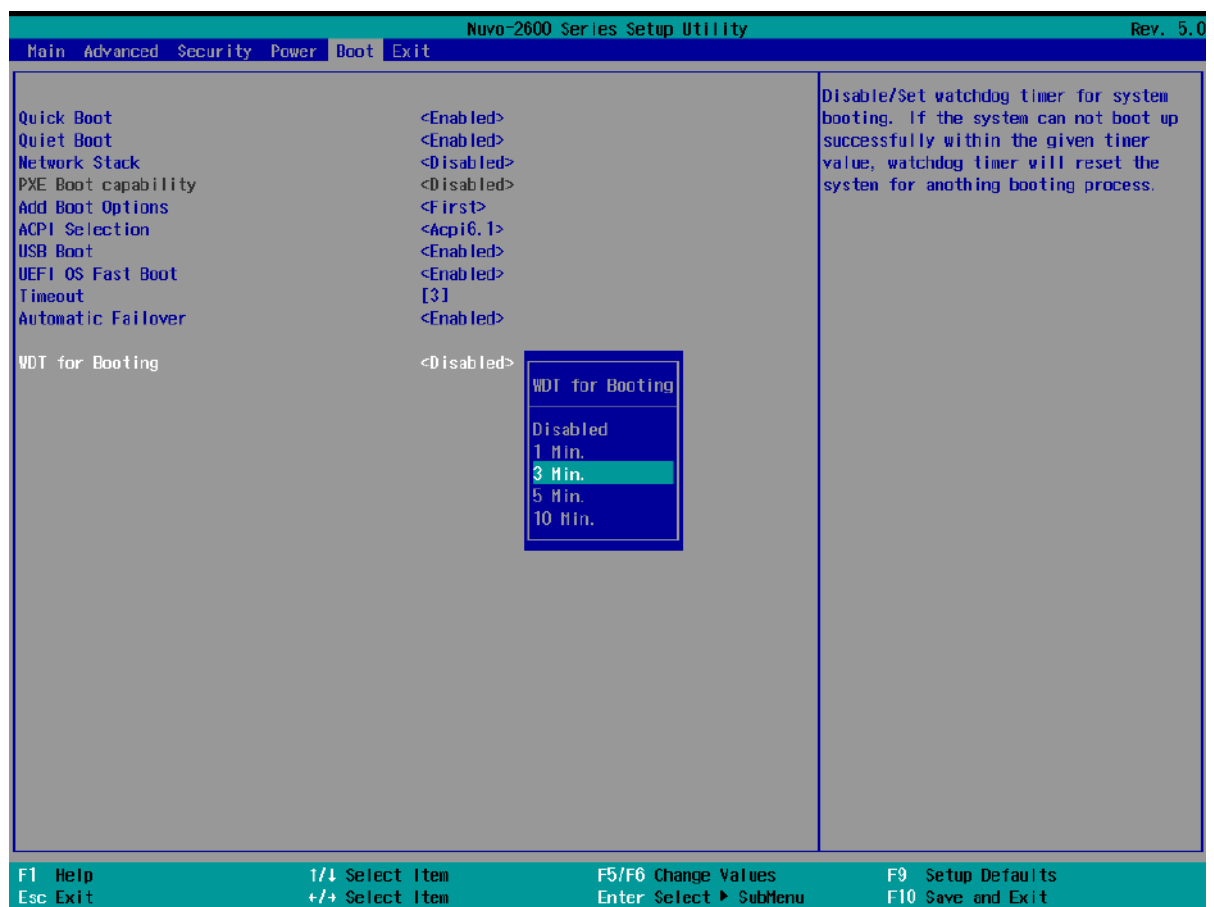

To set the watchdog timer for boot in BIOS:

1. When system boots up, press F2 to enter BIOS setup utility.
2. Go to **[Boot]** menu.
3. Disable or select timeout value for **[WDT for Booting]** option.
4. Once you give a timeout value, the **[WDT Stop Option]** option appears. You can select “*Automatically after POST*” or “*Manually after Entering OS*”.
5. Press F10 to “Exit Saving Changes.

5 OS Support and Driver Installation

5.1 Operating System Compatibility

Due to Intel's policy, the system only provides driver support for Windows 10 64-bit. For Linux support, please use Linux kernel versions no later than 5.8. The following list contains the operating systems which have been tested in Neousys Technology Inc.

1. Microsoft Windows10 Professional 64-bit
2. Microsoft Windows 10 IoT Enterprise 64-bit
3. Ubuntu 20.04.2 LTS** (5.8 kernel)



NOTE

**For Linux system, user may need to manually compile and install the driver for Intel®I210 GbE controller if the driver is not embedded in kernel.*

Neousys may remove or update operating system compatibility without prior notice. Please contact us if your operating system of choice is not on the list.

5.2 Driver Installation

To manually install the drivers, please click on this [link](#) to download the drivers.

5.3 Driver Installation for Watchdog Timer Control

Neousys provides a driver package which contain function APIs for Watchdog Timer control function. You should install the driver package (WDT_DIO_Setup.exe) in prior to use these functions. Please note that you must install WDT_DIO_Setup_v2.3.1.8 or later versions.

Please refer to this [link](#) to download WDT_DIO.

Appendix A Using WDT & DIO

Watchdog Timer

The watchdog timer (WDT) function ensures reliable system operation. The WDT is a hardware mechanism to reset the system if the watchdog timer expires. Users can start the WDT and keep resetting the timer to make sure the system or program is running. Otherwise, the system shall be reset.

In this section, we'll illustrate how to use the function library provided by Neosys to program the WDT functions. Currently, WDT driver library supports Windows 10 32-bit and 64-bit versions. For other OS support, please contact Neosys Technology for further information.

Installing WDT_DIO Library


The WDT_DIO function library is delivered in the form of a setup package named **WDT_DIO_Setup.exe**. Prior to programming WDT, you should execute the setup program and install the WDT library. Please use the following WDT_DIO_Setup packages according to your operating systems and application.

- For Windows 10 64-bit OS with 64-bit application (x64 mode), please install WDT_DIO_Setup_v2.3.1.8(x64).exe or later version.
- For Windows 10 64-bit OS with 32-bit application (WOW64 mode), please install WDT_DIO_Setup_v2.3.1.8(wow64).exe or later version.


WDT and DIO Library Installation

To setup WDT & DIO Library, please follow instructions below.


1. Execute **WDT_DIO_Setup.2.3.1.8.exe** (or later) and the following dialog appears.

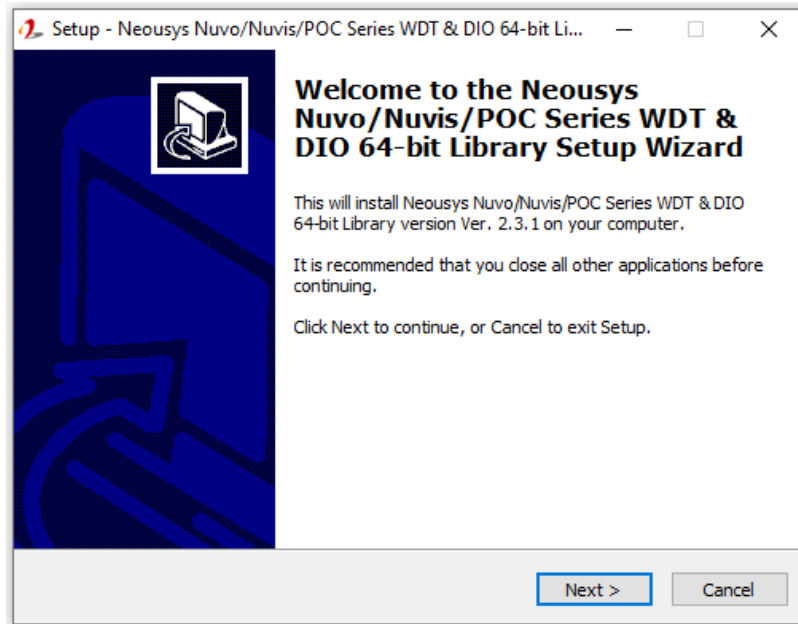

2. Click "Next >" and specify the directory of installing related files. The default directory is *C:\Neosys\WDT_DIO*.

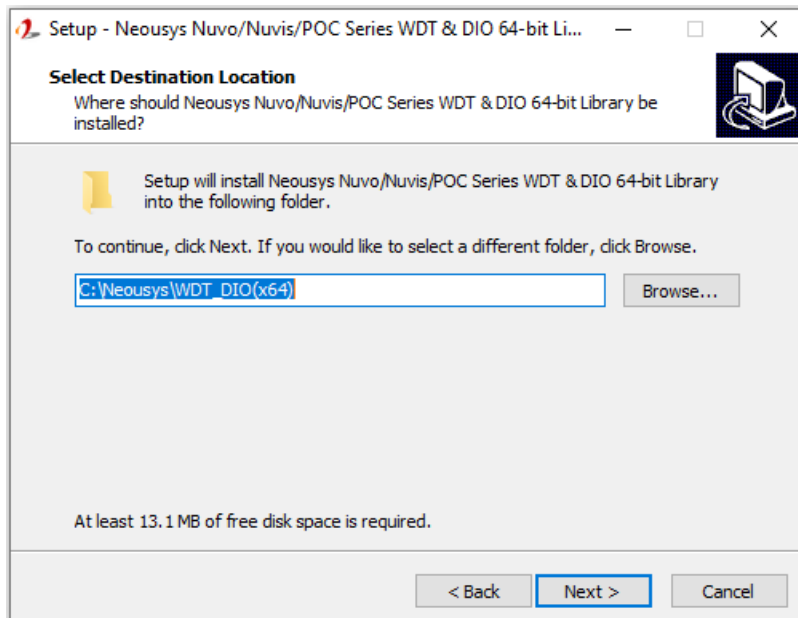

3. Once the installation has finished, a dialog will appear to prompt you to reboot the system. The WDT & DIO library will take effect after the system has rebooted.

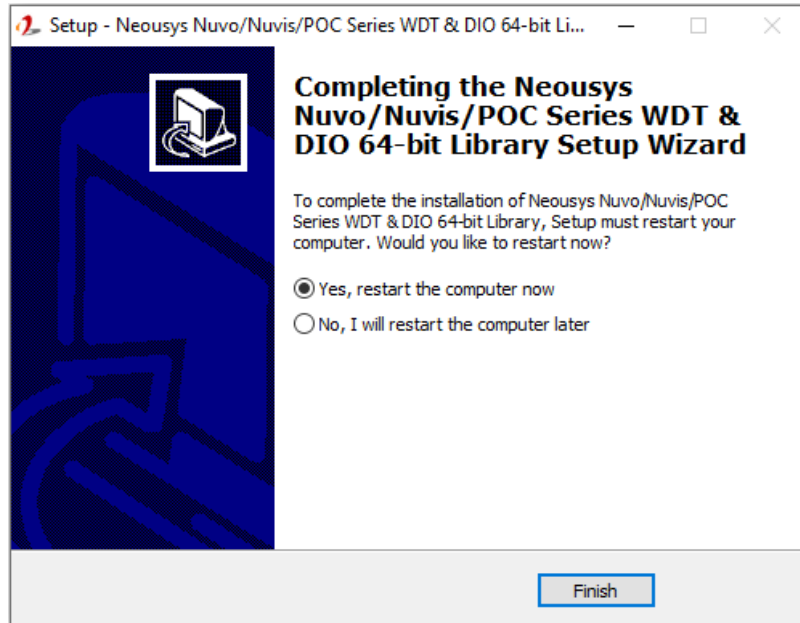

4. When programming your WDT or DIO program, the related files are located in

Header File:	\Include
Library File:	\Lib
Function	\Manual
Reference:	
Sample Code:	\Sample\WDT_Demo(Demo for Watchdog Timer) \Sample\DIO_Demo (Demo for Polling I/O)

WDT Functions

InitWDT

Syntax	BOOL InitWDT(void);
Description:	Initialize the WDT function. You should always invoke InitWDT() before set or start watchdog timer.
Parameter	None
Return Value	TRUE: Successfully initialized FALSE: Failed to initialize
Usage	BOOL bRet = InitWDT();

SetWDT

Syntax	BOOL SetWDT(WORD tick, BYTE unit);
Description	Set timeout value and unit for watchdog timer. When InitWDT() is invoked, a default timeout value of 255 seconds is assigned.
Parameter	tick WORD value (1 ~ 65535) to indicate timeout ticks. unit BYTE value (0 or 1) to indicate unit of timeout ticks. 0 : unit is minute 1 : unit is second
Return Value	If value of unit is correct (0 or 1), this function returns TRUE, otherwise FALSE.
Usage	WORD tick=255; BYTE unit=1; //unit is second. BOOL bRet = SetWDT(tick, unit); //timeout value is 255 seconds

StartWDT

Syntax	BOOL StartWDT(void);
Description	Starts WDT countdown. Once started, the WDT LED indicator will begin blinking. If ResetWDT() or StopWDT is not invoked before WDT countdowns to 0, the WDT expires and the system resets.
Parameter	None
Return Value	If the timeout value is given in correct format (WDT started), this function returns TRUE, otherwise FALSE
Usage	BOOL bRet = StartWDT()

ResetWDT

Syntax	BOOL ResetWDT(void);
Description	Reset the timeout value to the value given by SetWDT().If ResetWDT() or StopWDT is not invoked before WDT countdowns to 0, the WDT expires and the system resets.
Parameter	None
Return Value	Always returns TRUE
Usage	BOOL bRet = ResetWDT()

StopWDT

Syntax	BOOL StopWDT(void);
Description	Stops the countdown of WDT. When WDT has stopped, the WDT LED indicator stops blinking.
Parameter	None
Return Value	Always returns TRUE
Usage	BOOL bRet = StopWDT()

DIO Functions

InitDIO

Syntax	BOOL InitDIO(void);
Description	Initialize the DIO function. You should always invoke InitDIO() before write/read anyDIO port/channel.
Parameter	None
Return Value	Returns TRUE if initialization successes, FALSE if initialization failed.
Usage	BOOL bRet = InitWDT();

DIReadLine

Syntax	BOOL DIReadLine(BYTE ch);
Description	Read a single channel of isolated digital input.
Parameter	ch BYTE value specifies the DI channel to be read. <i>Ch</i> should be a value of 0 ~ 7.
Return Value	The status (TRUE or FALSE) of the specified DI channel.
Usage	BYTE ch=3; //DI channel #3 BOOL DIChValue = DIReadLine(ch); //read DI channel #3

DIReadPort

Syntax	WORD DIReadPort(void);
Description	Read the entire isolated digital input port (8 channels).
Parameter	None
Return Value	A WORD value (0~255) indicates the status of DI port (8 DI channels).
Usage	WORD DIPortValue = DIReadPort ();

DOWriteLine

Syntax	void DOWriteLine(BYTE ch, BOOL value);
Description	Write a single channel of isolated digital output.
Parameter	<p>ch BYTE value specifies the DO channel to be written. <i>Ch</i> should be a value of 0 ~ 7.</p> <p>value BOOL value (TRUE or FALSE) specifies the status of DO channel.</p>
Return Value	None
Usage	<pre>BYTE ch=3; //DI channel #3 BOOL DOChValue=TRUE; DOWriteLine(ch, DOChValue); //write DO channel #3 as TRUE</pre>

DOWritePort

Syntax	void DOWritePort(WORD value);
Description	Write the entire isolated digital output port (8 channels).
Parameter	<p>value WORD value specifies the status of the DO port. <i>Value</i> should be a value of 0~255.</p>
Return Value	None
Usage	<pre>WORD DOPortValue=0XFF; //11111111b DOWritePort(DOPortValue); //write DO port as 11111111b</pre>

Appendix B PoE On/ Off Control

The system offers 802.3at PoE+ ports and users are allowed to manually turn on or off the power supply of each PoE port. This can be useful in power device (PD) fault-recovery or power reset. The APIs are part of Neosys WDT_DIO driver package. Please follow the instructions in [Appendix A Watchdog Timer & Isolated DIO](#) for installation before programming PoE on/off control function.




NOTE

Nuvo-2615RL series will be shown in illustrations for demonstration purposes.


GetStatusPoEPort

Syntax	BYTE GetStatusPoEPort (Byte port);
Description	Get current on/off status of designated PoE port.
Parameter	<i>port</i> BYTE value specifies the index of PoE port. Please refer to the following illustration, <i>port</i> should be a value of 1 ~ 4
Return Value	BYTE value indicating PoE on/off status 0 if port is disabled (off) 1 if port is enabled (on)
Usage	BYTE bEnabled = GetStatusPoEPort (1); //Get on/off status of PoE Port#1

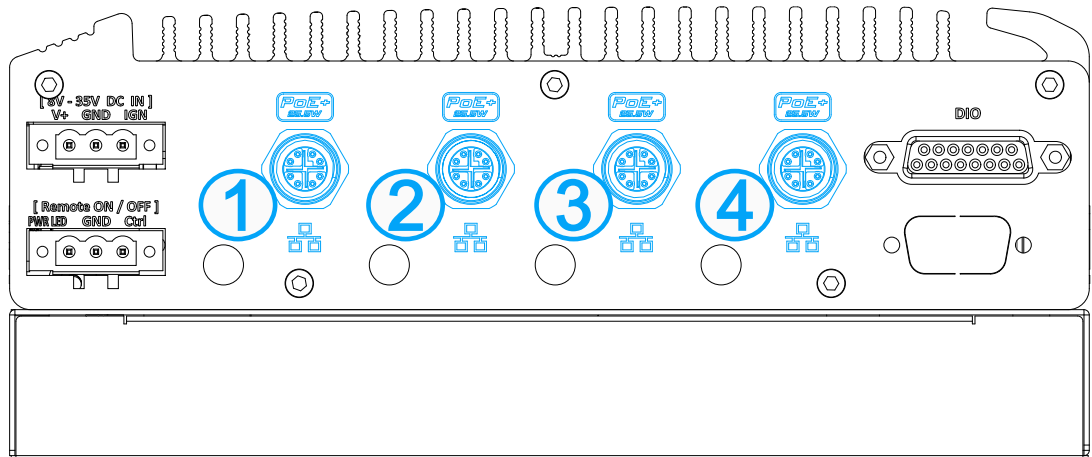

EnablePoEPort

Syntax	BOOL EnablePoEPort (BYTE port);
Description	Turn on PoE power of designated PoE port.
Parameter	<i>port</i> BYTE value specifies the index of PoE port. Please refer to the following illustration, <i>port</i> should be a value of 1 ~ 4
Return Value	TRUE if enabled success FALSE if fail to enable.
Usage	BOOL bRet = EnablePoEPort (1); //Turn on PoE Port#1

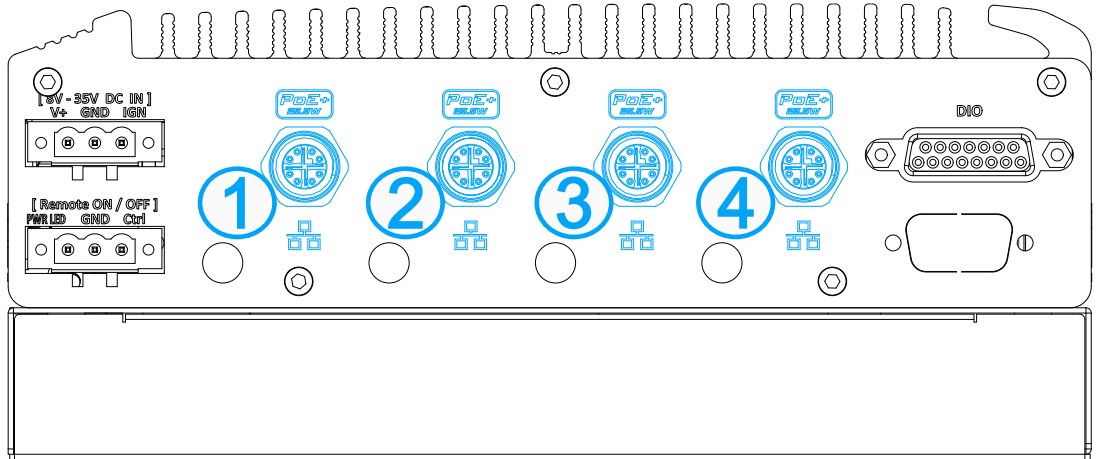

DisablePoEPort

Syntax	BOOL DisablePoEPort (BYTE port);
Description	Turn off PoE power of designated PoE port
Parameter	<i>port</i> BYTE value specifies the index of PoE port. Please refer to the following illustration, <i>port</i> should be a value of 1 ~ 4
Return Value	TRUE if disabled success FALSE if fail to disable
Usage	BOOL bRet = DisablePoEPort (1); //Turn off PoE Port#1

